

Manuals.plus /

› sparefixd /

› Instruction Manual for sparefixd Upper Drawer Support

sparefixd 00627244

Instruction Manual for sparefixd Upper Drawer Support

Model: 00627244

1. PRODUCT OVERVIEW

This manual provides instructions for the sparefixd Upper Drawer Support, a replacement part designed for specific Neff refrigerator freezer models. This component is essential for the proper functioning and stability of the upper drawer within your appliance.



2. COMPATIBILITY

This sparefixd Upper Drawer Support is equivalent to part number **00627244** and is compatible with a wide range of Neff refrigerator freezer models. It is crucial to verify your appliance's model number before attempting installation.

Locating Your Model Number:

The model number is typically found inside the refrigerator or freezer compartment. You may need to remove the salad drawer or freezer drawer to access the model plate or sticker. Alternatively, the model number might be located on the side or back of the appliance. It will generally be printed or stamped on a sticker or plate and consists of a combination of numbers and letters.

Partial List of Compatible Models:

- KI6875D30/02, KI6876D30/01, KI6876D30/02, KI6876D30/03, KI6876F30/01, KI6876F30/02, KI6876F30/03, KI6876F30/04, KI6876F30/05, KI6876F30/06
- KI7853D30G/01, KI7853D30G/02, KI7853D30G/03, KI7853D30G/04, KI7853D30G/05, KI7853D30G/06, KI7853D30G/07, KI7853DE0G/01
- KI7862F30/01, KI7862F30/02, KI7862F30/03, KI7862F30/04, KI7862F30/05, KI7862F30G/01, KI7862F30G/02, KI7862F30G/03, KI7862F30G/04, KI7862F30G/05, KI7862FF0/01, KI7862FF0/02, KI7862FF0G/01, KI7862FF0G/02, KI7862S30/01, KI7862S30/02, KI7862S30/03, KI7862S30/04, KI7862S30/05, KI7862S30S/01, KI7862S30S/02, KI7862S30S/03, KI7862S30S/04, KI7862S30S/05, KI7862SF0G/01, KI7862SF0G/02, KI7862SF0S/01, KI7862SF0S/02
- KI7863D20R/01, KI7863D20R/02, KI7863D20R/03, KI7863D20R/04, KI7863D20R/05, KI7863D30/01, KI7863D30/02, KI7863D30/03, KI7863D30/04, KI7863D30/05, KI7863D30/06, KI7863D30G/01, KI7863D30G/02, KI7863D30G/03, KI7863D30G/04, KI7863D30G/05, KI7863D30G/06, KI7863DF0G/01, KI7863DF0G/02, KI7863F30/01, KI7863F30/02, KI7863F30/03, KI7863F30/04, KI7863F30/05, KI7863F30/06, KI7863FF0/01, KI7863FF0/02
- KI7866D30/01, KI7866D30/02, KI7866DF0/01
- KI8865D20R/01, KI8865D20R/02, KI8865D30/01, KI8865DE0/01, KI8865DE0/02
- KI8875D40/01, KI8875D40/02, KI8876DD0/01, KI8876DD0/02, KI8878F30/01, KI8878F30G/01, KI8878FE0/01, KI8878FE0/02
- KI5852F30G/01, KI5852F30G/02, KI5852FF0G/01, KI5852FF0G/02, KI5852S30G/01, KI5852S30G/02, KI5852SF0G/01, KI5852SF0G/02
- KI5862F30/01, KI5862F30/02, KI5862F30/03, KI5862FF0/01, KI5862FF0/02, KI5862S30/01, KI5862S30/02, KI5862S30/03, KI5862S30G/01, KI5862S30G/02, KI5862S30G/03, KI5862S30S/01, KI5862S30S/02, KI5862SF0G/01, KI5862SF0G/02, KI5862SF0S/01, KI5862SF0S/02, KI5862U30/01, KI5862U30/02
- KI6863D30/01, KI6863D30/02, KI6863D30/03, KI6863D30/04, KI6863D30/05, KI6863D30R/01, KI6863D30R/02, KI6863D30R/03, KI6863D30R/04, KI6863D30R/05, KI6863D30R/06, KI6863D30R/07, KI6863D40/01, KI6863D40/02, KI6863D40/03, KI6863D40/04, KI6863D40/05, KI6863D40/06, KI6863D40/07, KI6863F30/01, KI6863F30/02, KI6863F30/03, KI6863F30/04, KI6863F30/05, KI6863F30G/01, KI6863F30G/02, KI6863F30G/03, KI6863F30G/04, KI6863F30G/05, KI6863FE0/01, KI6863FE0/02, KI6863FE0/04, KI6863FE0G/01, KI6863FE0G/02, KI6863FE0G/03, KI6863FE0G/04, KI6875D30/01

This list is not exhaustive. If your model number is not listed, please cross-reference with the original part number 00627244 or consult your appliance's documentation.

3. SETUP AND INSTALLATION

Replacing the upper drawer support is a straightforward process, but requires careful attention to detail. Always prioritize safety.

Required Tools:

- None typically required, as these parts usually snap into place.

Installation Steps:

1. **Safety First:** Before beginning any work on your appliance, ensure it is unplugged from the main power supply to prevent electrical hazards.
2. **Empty the Drawer:** Remove all contents from the upper drawer and then carefully remove the drawer itself from the refrigerator freezer.
3. **Locate Existing Supports:** Identify the location of the old or broken drawer supports. They are typically found on the inner walls of the refrigerator compartment where the drawer slides.
4. **Remove Old Supports:** Gently unclip or slide out the damaged supports. They are usually designed to be easily removable without special tools. Take note of how they were oriented.
5. **Install New Supports:** Align the new sparefixd upper drawer supports with the designated slots or mounting points. Push firmly until they click securely into place. Ensure both supports are level and properly seated.
6. **Reinstall Drawer:** Carefully slide the upper drawer back into position, ensuring it glides smoothly on the newly installed supports.
7. **Test Functionality:** Open and close the drawer a few times to confirm it operates correctly and without obstruction.
8. **Restore Power:** Once satisfied with the installation, plug the refrigerator freezer back into the power supply.



4. MAINTENANCE

The sparefixd Upper Drawer Support requires minimal maintenance. Regular cleaning will help ensure its longevity and smooth operation.

Cleaning:

- Periodically wipe the supports with a soft cloth dampened with mild soap and water.
- Avoid using abrasive cleaners or harsh chemicals, as these can damage the plastic material.
- Ensure the supports are completely dry before reinstalling the drawer.

5. TROUBLESHOOTING

If you encounter issues after installing the new drawer supports, consider the following common problems and solutions:

Drawer Does Not Slide Smoothly:

- **Check Alignment:** Ensure both supports are correctly aligned and fully seated in their mounting points.
- **Obstructions:** Verify there are no foreign objects or debris obstructing the drawer's path or the support rails.
- **Drawer Condition:** Inspect the drawer itself for any damage or warping that might prevent smooth movement.

Support Does Not Fit:

- **Verify Model Number:** Double-check that your appliance's model number is listed as compatible with part number 00627244. Even slight variations in model numbers can mean different parts are required.
- **Incorrect Orientation:** Ensure you are attempting to install the support in the correct orientation.

6. SPECIFICATIONS

Attribute	Detail
Brand	sparefixd
Model Number	00627244
Equivalent Part Number	00627244
ASIN	B093PX6YWM
Date First Available on Amazon.com.be	April 28, 2021
Spare Part Availability	Information unavailable

7. SUPPORT

For further assistance, questions regarding compatibility, or if you encounter persistent issues, please contact the retailer or manufacturer directly. When contacting support, have your appliance's full model number and the sparefixd part number (00627244) readily available.

