

## Toyomi RC 919

# Toyomi RC 919 Micro-com Mini Rice Cooker User Manual

Model: RC 919

## INTRODUCTION

---

This manual provides comprehensive instructions for the safe and efficient operation, maintenance, and troubleshooting of your Toyomi RC 919 Micro-com Mini Rice Cooker. Please read this manual thoroughly before first use and retain it for future reference.

## IMPORTANT SAFETY PRECAUTIONS

---

Always follow basic safety precautions when using electrical appliances to reduce the risk of fire, electric shock, and injury.

- Do not immerse the appliance, power cord, or plug in water or other liquids.
- Ensure the voltage rating on the appliance matches your local power supply.
- Unplug from the outlet when not in use and before cleaning. Allow to cool before handling parts.
- Do not operate any appliance with a damaged cord or plug, or after the appliance malfunctions or has been damaged in any manner.
- Keep out of reach of children.
- Do not use outdoors.
- Do not place on or near a hot gas or electric burner, or in a heated oven.
- Use only manufacturer-recommended attachments.
- Extreme caution must be used when moving an appliance containing hot oil or other hot liquids.
- Do not use the appliance for other than intended use.
- The inner pot is designed for use with this appliance only. Do not use it on a stovetop.
- Avoid using abrasive cleaners or scouring pads on the inner pot to prevent damage to the non-stick coating.

## PRODUCT OVERVIEW

---

Familiarize yourself with the components of your Toyomi RC 919 Micro-com Mini Rice Cooker.



*This image displays the front view of the Toyomi RC 919 Micro-com Mini Rice Cooker. It is white with a black digital display panel in the center. The display shows '8.0' and lists cooking functions: Rice, Brown Rice, Congee/Soup, Steam, Preset/Timer, and Keep Warm/Cancel. The brand 'Toyomi' is visible above the display.*

### **Components:**

- **Main Unit:** The outer casing of the rice cooker.
- **Inner Pot:** Non-stick cooking pot.
- **Lid:** Removable lid for covering the inner pot.
- **Control Panel/Display:** Digital screen and function buttons.
- **Measuring Cup:** For precise measurement of rice and water.
- **Rice Paddle:** For serving cooked rice.
- **Power Cord:** Detachable power supply.

### **Control Panel Functions:**

- **Digital Display:** Shows cooking time, preset time, or error codes.
- **Rice:** Standard rice cooking function.
- **Brown Rice:** Specific program for brown rice.

- **Congee/Soup:** Function for preparing congee or soup.
- **Steam:** Steaming function.
- **Preset/Timer:** Sets a delayed start time for cooking.
- **Keep Warm/Cancel:** Activates the keep warm function or cancels the current operation.

## SETUP AND FIRST USE

---

1. **Unpack:** Carefully remove all packaging materials and accessories.
2. **Clean:** Wash the inner pot, rice paddle, and measuring cup with warm, soapy water. Rinse thoroughly and dry completely. Wipe the exterior of the main unit with a damp cloth. Do not immerse the main unit in water.
3. **Placement:** Place the rice cooker on a stable, flat, heat-resistant surface, away from direct sunlight and heat sources. Ensure adequate ventilation around the appliance.
4. **Power Connection:** Insert the power cord into the rice cooker's power inlet, then plug the other end into a grounded electrical outlet.

## OPERATING INSTRUCTIONS

---

Always ensure the inner pot is clean and dry before adding ingredients.

### 1. Basic Rice Cooking

1. Measure the desired amount of rice using the provided measuring cup. Rinse the rice thoroughly until the water runs clear.
2. Place the rinsed rice into the inner pot.
3. Add water according to the rice-to-water ratio (typically 1:1 for white rice, or use the markings inside the inner pot).
4. Place the inner pot into the main unit and close the lid securely.
5. Plug in the appliance. The display will illuminate.
6. Press the "Rice" button. The cooking process will begin automatically.
7. Once cooking is complete, the cooker will automatically switch to "Keep Warm" mode.
8. Allow the rice to rest for 5-10 minutes in "Keep Warm" mode before serving for best results.

### 2. Brown Rice Cooking

1. Measure and rinse brown rice.
2. Add brown rice to the inner pot. Add water according to brown rice specific instructions (usually more water than white rice, refer to inner pot markings or recipe).
3. Close the lid.
4. Press the "Brown Rice" button. The cooker will start the brown rice program.
5. Upon completion, the cooker will switch to "Keep Warm".

### 3. Congee/Soup Cooking

1. Add ingredients for congee or soup to the inner pot. Ensure the total volume does not exceed the maximum fill line.
2. Close the lid.
3. Press the "Congee/Soup" button. The cooker will begin the selected program.
4. The cooker will automatically switch to "Keep Warm" when finished.

### 4. Steaming

1. Add water to the inner pot (ensure it does not touch the steaming tray if one is used).
2. Place the steaming tray (if included) into the inner pot. Arrange food on the steaming tray.
3. Close the lid.
4. Press the "Steam" button. The steaming process will begin.
5. Monitor the food and remove it when cooked to your preference. The cooker will switch to "Keep Warm" after a set time or when water runs out.

## 5. Using the Preset/Timer Function

The Preset/Timer function allows you to delay the start of cooking.

1. Prepare ingredients (rice and water, or soup ingredients) in the inner pot.
2. Close the lid.
3. Press the "Preset/Timer" button. The display will show a default preset time.
4. Use the function buttons (e.g., "Rice", "Brown Rice") to adjust the desired delay time. Each press typically increases the time by a set increment.
5. Once the desired delay time is set, press the cooking function button (e.g., "Rice") to confirm. The timer will count down, and cooking will start automatically after the delay.

## 6. Keep Warm / Cancel

- **Keep Warm:** After most cooking programs, the appliance automatically switches to "Keep Warm" mode to maintain food temperature.
- **Cancel:** To stop any ongoing cooking program or exit "Keep Warm" mode, press the "Keep Warm/Cancel" button.

## CLEANING AND MAINTENANCE

Regular cleaning ensures optimal performance and extends the lifespan of your rice cooker.

1. **Unplug:** Always unplug the rice cooker from the power outlet and allow it to cool completely before cleaning.
2. **Inner Pot:** Wash the non-stick inner pot with warm, soapy water using a soft sponge or cloth. Do not use abrasive cleaners or metal scouring pads, as this can damage the non-stick coating. Rinse thoroughly and dry.
3. **Lid:** Wash the lid with warm, soapy water, rinse, and dry.
4. **Accessories:** Clean the measuring cup and rice paddle with warm, soapy water, rinse, and dry.
5. **Main Unit Exterior:** Wipe the exterior of the main unit with a damp cloth. Do not immerse the main unit in water or any other liquid. Ensure no water enters the control panel or electrical components.
6. **Storage:** Store the clean and dry rice cooker in a cool, dry place.

## TROUBLESHOOTING

Problem	Possible Cause	Solution
Rice is too hard/undercooked.	Insufficient water; lid not properly closed; power interruption.	Add more water next time; ensure lid is sealed; check power connection.
Rice is too soft/mushy.	Too much water.	Reduce water next time.

Problem	Possible Cause	Solution
Rice sticks to the inner pot.	Not enough water; inner pot damaged; rice not soaked (for some types).	Ensure correct water ratio; avoid using metal utensils; soak rice if recommended.
Cooker does not turn on.	Not plugged in; power outage; faulty outlet.	Check power cord connection; test outlet with another appliance.
Steam escaping from lid.	Lid not properly closed; lid seal damaged.	Ensure lid is securely closed; inspect lid seal for damage.

If the problem persists after attempting these solutions, please contact customer support.

## SPECIFICATIONS

---

- **Model:** RC 919
- **Brand:** Toyomi
- **Capacity:** 0.3 Liters
- **Wattage:** 300 watts
- **Material:** Stainless Steel (inner pot with non-stick coating)
- **Product Dimensions:** 18D x 21W x 16.5H cm
- **Item Weight:** 1.35 kg
- **Special Features:** Non-Stick, Timer, Preset Functions
- **Power Source:** Corded Electric

## WARRANTY AND SUPPORT

---

This product comes with a manufacturer's warranty. Please refer to the warranty card included with your purchase for specific terms and conditions, including warranty period and coverage details. For technical support, service, or inquiries regarding your Toyomi RC 919 Micro-com Mini Rice Cooker, please contact Toyomi customer service through their official website or the contact information provided in your product packaging.