

[Manuals.plus](#) /

› [Easytry123](#) /

› Easytry123 Replacement Remote Control for JVC Digital Video Cameras User Manual

Easytry123 RM-V720U / RM-V720US (Replacement)

Easytry123 Replacement Remote Control User Manual

For JVC Digital Video Cameras and Camcorders

INTRODUCTION

This manual provides instructions for the Easytry123 replacement infrared remote control. This remote is designed to function with various JVC GR-D and GR-DX series digital video cameras and camcorders. Please review this manual carefully before use.

Important Note: This is a replacement remote control. While it provides core functionalities, it may not offer all the exact features or button layouts of your original JVC remote. Ensure your camera model is listed in the compatibility section.

1. SETUP

Battery Installation

The remote control requires two CR2 batteries (not included).

1. Locate the battery compartment on the back of the remote control.
2. Gently slide the battery compartment cover downwards or in the direction indicated by an arrow to open it.
3. Insert two CR2 batteries, ensuring the positive (+) and negative (-) terminals align correctly with the markings inside the compartment. Incorrect battery orientation can prevent the remote from functioning.
4. Close the battery compartment cover securely until it clicks into place.



Image 1: Rear view of the remote control with the battery compartment visible. A separate battery clip is shown next to it, indicating the type of battery or a similar component.



Image 2: Close-up view of the remote control's back, emphasizing the battery compartment area and battery type markings.

2. OPERATING INSTRUCTIONS

Basic Operation

This remote control uses infrared (IR) technology. Ensure there is a clear line of sight between the remote's IR emitter and your JVC camera's IR receiver.

- **Power On/Off:** Press the **POWER** button to turn your camera on or off.
- **Record/Stop:** Use the **REC** or **START/STOP** button to begin or end video recording.
- **Zoom:** The **T (Telephoto)** and **W (Wide)** buttons control the optical/digital zoom of your camera.
- **Menu Navigation:** Use the directional arrow buttons (Up, Down, Left, Right) and the **ENTER** or **SET** button to navigate and select options within your camera's menu system.
- **Playback Controls:** Buttons such as **PLAY**, **PAUSE**, **STOP**, **REW** (Rewind), and **FF** (Fast Forward) are used for reviewing recorded footage.

3. MAINTENANCE

Care and Maintenance

- **Cleaning:** Wipe the remote control with a soft, dry cloth. Do not use liquid cleaners or abrasive materials.
- **Battery Replacement:** Replace batteries when the remote's range decreases or it stops responding. Always replace both batteries at the same time with new CR2 batteries.
- **Storage:** If the remote will not be used for an extended period, remove the batteries to prevent leakage and damage.
- **Environmental Conditions:** Avoid exposing the remote to extreme temperatures, direct sunlight, or high humidity.

4. TROUBLESHOOTING

Troubleshooting Guide

- **Remote not responding:**
 - Check if the batteries are inserted correctly with the correct polarity.
 - Replace old batteries with new CR2 batteries.
 - Ensure there is a clear line of sight between the remote and the camera's IR receiver. Remove any obstructions.
 - Confirm that your camera's IR receiver is clean and unobstructed.
- **Limited range:**
 - Replace batteries.
 - Ensure no strong light sources (like direct sunlight or fluorescent lights) are interfering with the IR signal.
- **Certain functions do not work:**
 - As a replacement remote, some advanced or specific functions of your original camera remote may not be supported. Refer to your camera's original manual for specific remote compatibility.
 - Verify that your camera model is explicitly listed as compatible.
- **Camera does not respond to any remote commands:**
 - Check your camera's settings to ensure that remote control functionality is enabled.

5. SPECIFICATIONS

Product Specifications

- **Brand:** Easytry123
- **Connectivity Technology:** Infrared (IR)
- **Controller Type:** Button Control
- **Power Source:** 2 x CR2 Batteries (not included)
- **Compatible Devices:** JVC Digital Video Cameras / Camcorders
- **Compatible JVC Models (Partial List):**
 - GR-DX67EK
 - RM-V720U, RM-V720US
 - GR-D270US, GR-D271US, GR-D275US

- GR-D290US, GR-D295US
 - RM-V719U
 - GR-D231EY
 - *And other compatible JVC GR-D/GR-DX series models. Please verify compatibility with your specific camera model.*
- **Special Feature:** Ergonomic replacement design.

6. SUPPORT

Support and Contact Information

For further assistance or if you encounter issues not covered in this manual, please contact the seller or manufacturer directly through your purchase platform. Provide your product details and a clear description of the problem for efficient support.

Manufacturer: Easytry123

Date First Available: April 29, 2021

© 2026 Easytry123. All rights reserved. This manual is for informational purposes only.

ASK A QUESTION ABOUT THIS MANUAL

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question and use this page's manual context to help answer it.

Name

Anonymous

Email

you@example.com

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. [Privacy details](#).

Question

Example: How do I reset this device or fix this error?

Details

Model number, symptoms, what you tried, or the section of the manual you are using.

Submit question

Open the live page

<https://manuals.plus/asin/B093R14Y6G>

More documents and user manuals: <https://manuals.plus/>