

[Manuals.plus](#) /

› [NKF](#) /

› NKF RM-C3327 KT1746-HG1 Remote Control User Manual for JVC and Polaroid TVs

NKF RM-C3327

NKF RM-C3327 KT1746-HG1 Remote Control User Manual

Model: RM-C3327, KT1746-HG1

Brand: NKF

INTRODUCTION

This manual provides instructions for the NKF RM-C3327 KT1746-HG1 replacement remote control. This remote is designed to operate various JVC and Polaroid TV models without requiring any programming.

PRODUCT OVERVIEW

The RM-C3327 remote control features a standard layout for easy navigation and control of your television.





Image of the NKF RM-C3327 remote control.



Detailed view of the RM-C3327 remote control buttons with labels.

The remote control is constructed from durable ABS material, ensuring longevity and a comfortable grip.



Close-up image of the remote control highlighting its ABS material construction.

Battery Installation

The RM-C3327 remote control requires two 1.5V AAA alkaline batteries (not included).

1. Locate the battery compartment cover on the back of the remote control.
2. Slide the cover off in the direction indicated by the arrow or indentation.
3. Insert two AAA batteries, ensuring the positive (+) and negative (-) terminals align correctly with the markings inside the compartment.
4. Replace the battery compartment cover until it clicks securely into place.



Image showing the battery compartment of the RM-C3327 remote control with two AAA batteries inserted.

OPERATING INSTRUCTIONS

This remote control is designed for immediate use with compatible JVC and Polaroid TV models. No programming or setup is required.

Basic Functions

- **Power Button:** Turns the TV on or off.
- **Input Button:** Cycles through available input sources (HDMI, AV, etc.).
- **Number Keys (0-9):** Directly select channels.
- **Navigation Pad (Up, Down, Left, Right, Enter):** Navigate menus and confirm selections.
- **Volume Up/Down (VOL +/-):** Adjusts the TV volume.
- **Channel Up/Down (CH +/-):** Changes TV channels.
- **Mute Button:** Mutes or unmutes the TV audio.
- **Netflix Button:** Direct access to the Netflix application.
- **YouTube Button:** Direct access to the YouTube application.
- **VUDU Button:** Direct access to the VUDU application.
- **Back Button:** Returns to the previous menu or screen.
- **Exit Button:** Exits the current menu or application.
- **Menu Button:** Opens the TV's main menu.
- **Info Button:** Displays information about the current program or input.



Image showing the RM-C3327 remote control in use, interacting with a TV screen.

The effective operating distance for the remote control is up to 10 meters (33 feet).



Image illustrating the 10-meter (33 feet) maximum control distance of the remote.

COMPATIBILITY

The NKF RM-C3327 KT1746-HG1 remote control is compatible with the following JVC and Polaroid TV models:

- **JVC TV Models:** LT-55E770, LT-49E770, LT55E770, LT49E770
- **Polaroid TV Models:** 40T2F, 50T7U, 49T7U, 55T7U, 60T7U



Image displaying the remote control alongside various compatible JVC and Polaroid TV models.

SPECIFICATIONS

Feature	Detail
Model Name	RM-C3327 KT1746-HG1

Feature	Detail
Brand	NKF
Connectivity Technology	Infrared
Compatible Devices	Television
Special Feature	No Programming Required
Power Source	2 x 1.5V AAA Batteries
Maximum Range	10 Meters (33 Feet)
Material	ABS
Color	Black

TROUBLESHOOTING

Remote Not Responding

- **Check Batteries:** Ensure batteries are inserted correctly with the correct polarity (+/-). Replace with fresh 1.5V AAA alkaline batteries if needed.
- **Line of Sight:** Make sure there is a clear line of sight between the remote control and the TV's infrared sensor. Obstructions can block the signal.
- **Distance:** Confirm you are within the effective operating range of 10 meters (33 feet).
- **TV Compatibility:** Verify that your TV model is listed in the compatibility section of this manual. This remote is designed for specific JVC and Polaroid models and does not require programming. If your model is not listed, the remote may not be compatible.

Specific Buttons Not Working

- **Clean Remote:** Dust or debris under buttons can sometimes prevent them from functioning. Gently clean the remote surface.
- **Battery Check:** Low batteries can cause intermittent button functionality. Replace batteries.

No Programming Required

This remote control is pre-programmed for the listed compatible JVC and Polaroid TV models. It does not require any manual programming steps. If you are experiencing issues, please refer to the "Remote Not Responding" section.

MAINTENANCE

To ensure the longevity and proper functioning of your remote control:

- Avoid exposing the remote to extreme temperatures, humidity, or direct sunlight.
- Do not drop or subject the remote to strong impacts.
- Clean the remote with a soft, dry cloth. Do not use liquid cleaners or abrasive materials.
- Remove batteries if the remote will not be used for an extended period to prevent battery leakage.

WARRANTY AND SUPPORT

For warranty information or technical support, please refer to the retailer where the product was purchased or visit the NKF brand store on Amazon: [NKF Store](#).

Ask a question about this manual

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question and use this page's manual context to help answer it.

Name

Anonymous

Email

you@example.com

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. [Privacy details](#).

Question

Example: How do I reset this device or fix this error?

Details

Model number, symptoms, what you tried, or the section of the manual you are using.

Submit question