

[Manuals.plus](#) /

> [EWO'S](#) /

> Universal Remote Control XRT140 for VIZIO Smart TV Remote Replacement User Manual

## EWO'S EWOS-140

# Universal Remote Control XRT140 for VIZIO Smart TV User Manual

Brand: EWO'S | Model: EWOS-140

## INTRODUCTION

---

This manual provides detailed instructions for the EWO'S Universal Remote Control XRT140. It is designed to replace various VIZIO Smart TV remotes, offering seamless control and enhanced functionality. Please read this manual thoroughly to ensure proper use and to maximize your remote control's capabilities.





Figure 1: EWO'S Universal Remote Control XRT140

## KEY FEATURES

---

- **Faster Transmission:** Achieves response times under 0.2 seconds.
- **High Durability:** Tested for over 150,000 button clicks.
- **Extended Range:** Transmits signals over 12 meters (40 feet).
- **Premium Material:** Constructed with durable ABS for enhanced longevity and safety.
- **No Programming Required:** Ready to use out of the box with no pairing or programming needed.

## High Flexibility

Fastest Response, the time is less than 0.2 second, and more than 15,000 clicks are available.





Figure 2: Remote's High Flexibility and Long Distance Transmission

## COMPATIBILITY

The EWO'S Universal Remote Control XRT140 is designed for broad compatibility with a wide range of VIZIO Smart TVs. It supports all VIZIO LED LCD HD UHD HDR Smartcast 4K 3D Smart TVs.

### Compatible VIZIO TV Series:

- D-Series
- E-Series
- M-Series
- P-Series
- PX-Series
- V-Series
- OLED-Series

## Compatible Remote Models:

This remote is compatible with and can replace the following VIZIO remote models:

- XRT136
- XRT112
- XRT122
- XRT260
- XRT302
- XRT135
- XRT510
- XRT500
- XRT100
- VR1
- VR2
- VR10
- VR15
- And more.

# Compatible for All VIZIO Smart TV Models

## Including:

(D-Series, E-Series, M-Series, P-Series, PX-Series, V-Series, OLED-Series.)



Figure 3: Broad Compatibility with VIZIO Smart TV Models

## SETUP

### Battery Installation:

The remote control requires two (2) 1.5V AAA batteries (not included). Follow these steps to install the batteries:

1. Push the bottom of the battery compartment cover to open it.
2. Insert 2 AAA batteries into the remote control. Ensure that the positive (+) and negative (-) symbols on the batteries match the corresponding symbols inside the battery compartment.
3. Replace the battery cover and press firmly until it clicks into place.

Once batteries are installed, the remote is ready for immediate use with your compatible VIZIO Smart TV. No pairing or programming is required.



Figure 4: Battery Installation Guide

## OPERATING INSTRUCTIONS

---

Familiarize yourself with the functions of each button on your EWO'S Universal Remote Control XRT140:



Figure 5: Remote Control Button Functions

Button	Function
<b>Power Button</b> ( )	Turns the television ON or OFF.
<b>INPUT</b>	Changes the currently displayed input source.
<b>VUDU, NETFLIX, Prime Video, XUMO, Hulu, Redbox</b>	Direct launch buttons for popular streaming applications.
<b>MENU</b>	Displays the settings menu.
<b>Watch Free</b>	Accesses WatchFree channels (Note: Not available in Canada).
<b>INFO</b>	Displays the information window.
<b>OK / Play / Pause</b>	Selects the highlighted menu option and plays or pauses content.

Button	Function
<b>Navigation Buttons (Up/Down/Left/Right)</b>	Navigates the on-screen menus.
<b>Home Button</b> (△)	Launches SmartCast Home or returns to the SmartCast Home Screen.
<b>BACK</b>	Goes to the previous on-screen menu.
<b>CC (Closed Caption)</b>	Enables or disables closed captions. Long press to open Accessibility menu featuring captions, talkback, speech rate, and zoom mode.
<b>VOL +/- (Volume Up/Down)</b>	Increases or decreases the loudness of the audio.
<b>Mute</b> ( )	Turns the audio ON or OFF.
<b>CH +/- (Channel Up/Down)</b>	Changes the channel.
<b>PREV</b>	Returns to the channel last viewed.
<b>Number Pad (0-9)</b>	Manually enters a channel number.
<b>PIC</b>	Cycles through different picture setting modes. Long press to enable/disable talk back feature.
<b>Dash (-)</b>	Used with the number pad to manually enter a digital sub-channel (e.g., 18-4 or 18-5).

## MAINTENANCE

---

To ensure the longevity and optimal performance of your remote control, follow these maintenance guidelines:

- **Cleaning:** Use a soft, dry cloth to clean the remote's surface. Do not use liquid cleaners or aerosol sprays, as they may damage the remote.
- **Battery Replacement:** Replace batteries when the remote's response becomes sluggish or it stops functioning. Always replace both batteries at the same time with new ones of the same type.
- **Storage:** If the remote will not be used for an extended period, remove the batteries to prevent leakage and potential damage. Store the remote in a cool, dry place away from direct sunlight and extreme temperatures.
- **Avoid Drops:** While durable, repeated drops can damage internal components. Handle the remote with care.

## TROUBLESHOOTING

---

If you experience issues with your EWO'S Universal Remote Control XRT140, refer to the following common troubleshooting steps:

Problem	Solution
Remote is not responding.	<ul style="list-style-type: none"> <li>◦ Check if the batteries are inserted correctly with the correct polarity (+/-).</li> <li>◦ Replace old batteries with new 1.5V AAA batteries.</li> <li>◦ Ensure there are no obstructions between the remote and the TV's IR sensor.</li> <li>◦ Point the remote directly at the TV's IR sensor.</li> </ul>

Problem	Solution
Buttons are not working or are sticky.	<ul style="list-style-type: none"> <li>◦ Clean the remote's surface and around the buttons with a soft, dry cloth.</li> <li>◦ Ensure no liquid has spilled on the remote. If so, allow it to dry completely before use.</li> </ul>
Remote range is reduced.	<ul style="list-style-type: none"> <li>◦ Replace the batteries. Low battery power can reduce signal strength.</li> <li>◦ Ensure there are no strong light sources (like direct sunlight or bright fluorescent lights) interfering with the IR signal.</li> </ul>
Specific app buttons (e.g., Netflix, Hulu) are not launching apps.	<ul style="list-style-type: none"> <li>◦ Ensure your VIZIO Smart TV is connected to the internet.</li> <li>◦ Verify that the apps are installed and updated on your Smart TV.</li> <li>◦ Some VIZIO TV models or firmware versions might have slight variations in app button functionality.</li> </ul>

## SPECIFICATIONS

Attribute	Detail
<b>Product Dimensions</b>	6 x 3 x 0.01 inches
<b>Item Weight</b>	1.76 ounces
<b>Model Number</b>	EWOS-140
<b>Batteries Required</b>	2 AAA batteries (not included)
<b>Brand</b>	EWO'S
<b>Special Features</b>	Extremely long life, No Programming Required, Responsive buttons, Signal Stabilization, Universal
<b>Color</b>	Black
<b>Max Number of Supported Devices</b>	1 (Television)
<b>Compatible Devices</b>	Television (VIZIO Smart TVs)
<b>First Available Date</b>	February 25, 2021

## WARRANTY AND SUPPORT

For warranty information or technical support, please refer to the product packaging or contact EWO'S customer service directly. Details for contacting support are typically provided with your purchase or can be found on the official EWO'S website.

For the most up-to-date information, please visit the [EWO'S Store on Amazon](#).



