

## Greencut GGT1200C

# GREENCUT GGT1200C Electric Brushcutter

## USER MANUAL

### 1. Introduction

Thank you for choosing the GREENCUT GGT1200C Electric Brushcutter. This powerful 1200W, 230V tool is designed for efficient and precise trimming of various types of grass and vegetation in your garden. Featuring a 35cm cutting width and a versatile Tap'n'Go system for easy line changes, it ensures your outdoor spaces remain well-maintained with minimal effort. Please read this manual carefully before operation to ensure safe and effective use of your new brushcutter.



The GREENCUT GGT1200C Electric Brushcutter, ready for use.

### 2. Safety Instructions

Your safety is paramount. Always adhere to the following safety guidelines when operating the brushcutter:

- **Personal Protective Equipment (PPE):** Always wear safety glasses or goggles, hearing protection, long

pants, sturdy footwear, and gloves.

- **Work Area:** Ensure the work area is clear of debris, rocks, and other objects that could be thrown by the cutting line/blade. Keep bystanders, children, and pets at a safe distance (at least 15 meters).
- **Electrical Safety:** This is an electric tool. Always inspect the power cord for damage before each use. Do not use in wet conditions or expose to rain. Always unplug the tool before performing any maintenance, cleaning, or when changing accessories.
- **Handling:** Hold the brushcutter firmly with both hands during operation. Maintain proper footing and balance. Avoid overreaching.
- **Blade/Line Guard:** Never operate the brushcutter without the guard properly installed. The guard protects against thrown debris and accidental contact with the cutting attachment.
- **Maintenance:** Only perform maintenance as described in this manual. If the tool is damaged, do not use it. Contact qualified service personnel.



The GREENCUT GGT1200C offers environmental friendliness, less maintenance, easy start, lighter handling, and quiet operation.

### 3. Assembly and Setup

The GREENCUT GGT1200C comes with a mounting kit and essential accessories for quick setup. Follow these general steps for assembly:

1. **Unpack Components:** Carefully remove all parts from the packaging. Verify that all items listed in the 'What's in the Box' section are present.
2. **Attach Handle:** Securely attach the ergonomic handlebar to the main shaft. Ensure it is positioned comfortably for balanced operation.
3. **Install Guard:** Mount the protective guard over the cutting head. This is a critical safety component and must be installed correctly before use.
4. **Attach Cutting Head:** Depending on your task, attach either the dual-line cutting head or the 3-tooth blade. Ensure it is securely fastened according to the instructions provided in the assembly kit.
5. **Adjust Shoulder Strap:** Attach and adjust the shoulder strap for comfortable and balanced carrying during operation.

## LIGHTWEIGHT AND ADJUSTABLE **PLUG-IN ELECTRIC**



POWER  
40 V



MAX. RATE  
6500 RPM



TYPE OF CUT  
THREAD AND BLADE



CUTTING CAPACITY  
140 MM



The brushcutter's components, including the main unit and cutting head, ready for assembly.

### 4. Operating Instructions

Once assembled and safety checks are complete, you can begin operating your brushcutter:

- **Starting the Machine:** Connect the power cord to a suitable outdoor-rated extension cord and then to a power outlet. The easy-start mechanism requires just one push of a button to begin operation.
- **Cutting Technique:** Use a sweeping motion, moving the cutting head from side to side. For optimal results, cut in small increments. The adjustable rotation speed (7300-11000 RPM) allows for precise control over various types of vegetation.
- **Tap'n'Go System:** This system allows for quick and easy advancement of the cutting line. Simply tap the cutting head on the ground while the machine is running to feed more line.
- **Reaching Difficult Areas:** The lightweight and adjustable design allows you to reach hidden places in your garden, making it ideal for removing stubborn grass and weeds around obstacles.

# Adjustable, lightweight and powerful

## ELECTRIC BRUSHCUTTER

**GGT1200C**



A user demonstrating the effective use of the GREENCUT GGT1200C in a garden setting.





### **TAP'NGO SYSTEM**

*Sistema automático de ajuste de hilo.*



### **ERGONOMIC HANDLEBAR**

*Reduces fatigue and improves machine control.*



### **ALUMINIUM STRUCTURE**

*Offers high lightness without compromising on strength.*



### **EASY START**

*One push of a button is all you need to start working.*

Detail of the ergonomic handlebar and the simple push-button start feature.

## **5. Maintenance**


Regular maintenance ensures the longevity and optimal performance of your brushcutter. Always unplug the tool from the power source before any maintenance.

- **Cleaning:** After each use, clean the exterior of the brushcutter with a damp cloth. Remove any grass clippings, dirt, or debris from the cutting head and guard. Do not use harsh chemicals or abrasive cleaners.
- **Line Replacement:** When the cutting line becomes too short or breaks, replace it with a new 2.0mm diameter line. The Tap'n'Go system makes this process straightforward. Refer to the assembly instructions for detailed steps on spool replacement.
- **Blade Inspection:** If using the blade, regularly inspect it for sharpness and damage. Replace dull or damaged blades immediately.
- **Cord Inspection:** Periodically check the power cord for any cuts, fraying, or damage. Replace damaged cords



immediately to prevent electrical hazards.

- **Storage:** Store the brushcutter in a dry, secure location, out of reach of children. Ensure the tool is clean and free of debris before storage.

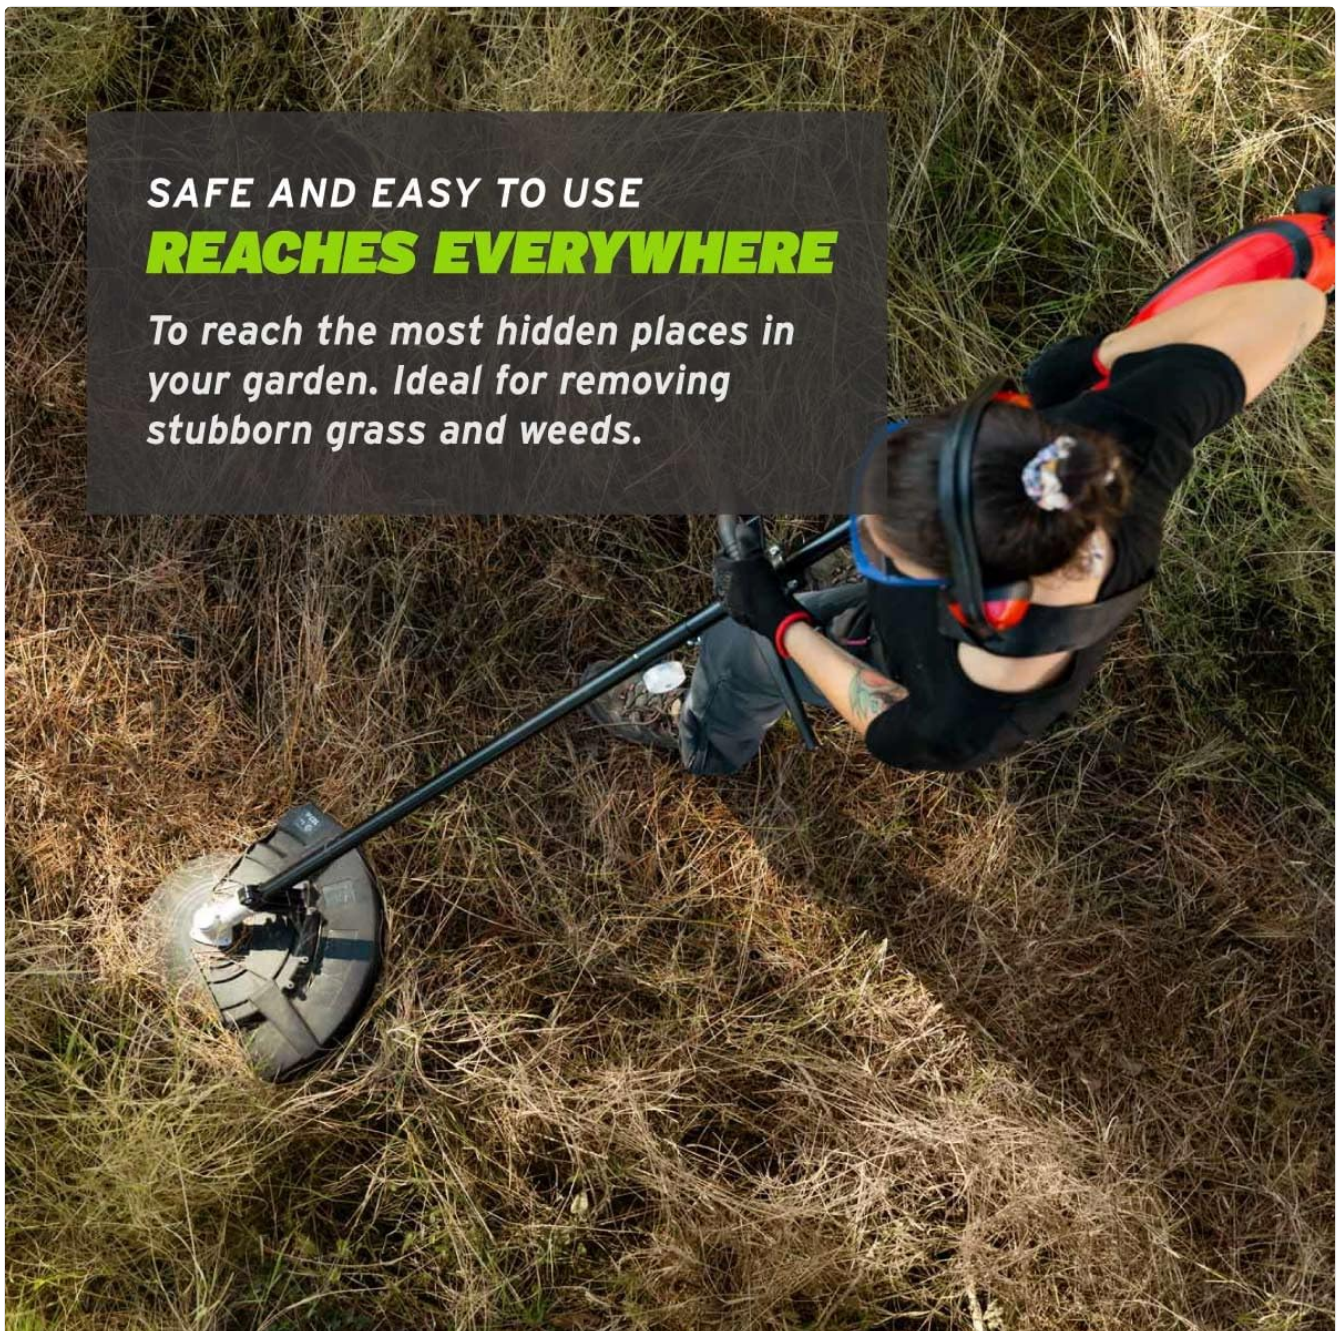

Demonstration of replacing the cutting line on the brushcutter's spool.

## 6. Troubleshooting

If you encounter issues with your brushcutter, refer to the table below for common problems and their solutions:

| Problem | Possible Cause | Solution |
|---------|----------------|----------|
|---------|----------------|----------|

| Problem                                   | Possible Cause                                                                         | Solution                                                                                                          |
|-------------------------------------------|----------------------------------------------------------------------------------------|-------------------------------------------------------------------------------------------------------------------|
| Brushcutter does not start                | No power supply; Damaged power cord; Safety switch not engaged                         | Check power outlet and extension cord; Inspect power cord for damage; Ensure safety switch is fully engaged       |
| Motor runs but cutting head does not spin | Cutting line/blade jammed; Drive shaft issue                                           | Unplug and clear any obstructions from cutting head; Contact customer support if issue persists                   |
| Cutting line breaks frequently            | Incorrect line type/diameter; Cutting against hard surfaces; Worn cutting head eyelets | Use recommended 2.0mm line; Avoid hitting hard objects; Replace worn cutting head parts                           |
| Excessive vibration                       | Bent shaft; Damaged cutting head/blade; Loose components                               | Inspect shaft and cutting head for damage; Tighten all fasteners; Contact customer support if vibration continues |

## 7. Technical Specifications

Detailed specifications for the GREENCUT GGT1200C Electric Brushcutter:


| Feature               | Specification                                                                                                                |
|-----------------------|------------------------------------------------------------------------------------------------------------------------------|
| Brand                 | Greencut                                                                                                                     |
| Model Number          | 1000135 (GGT1200C)                                                                                                           |
| Power                 | 1200 Watt                                                                                                                    |
| Voltage               | 230V                                                                                                                         |
| Speed                 | 7300 - 11000 RPM (Rotational Speed)                                                                                          |
| Cutting Width         | 35 cm                                                                                                                        |
| Cutting Wire Diameter | 2.0 mm                                                                                                                       |
| Product Dimensions    | 95 x 25 x 7 cm                                                                                                               |
| Item Weight           | 4.5 Kilograms                                                                                                                |
| Color                 | Red                                                                                                                          |
| Drive Type            | Corded Electric                                                                                                              |
| Included Accessories  | 1 Assembly Kit, 1 Operating Manual, 1 Brushcutter, 1 Cutting Blade (1.4 mm / 3 teeth), 1 Brushcutter Wire (2.0 mm, 6 m long) |

## 8. Warranty and Customer Support

The GREENCUT GGT1200C Electric Brushcutter comes with a **3-year coverage**, ensuring peace of mind regarding your purchase. For any questions, technical assistance, or warranty claims, please contact Greencut customer support through their official website or the retailer where you purchased the product. Please have your model number (GGT1200C or 1000135) and proof of purchase ready when contacting support.


© 2024 Greencut. All rights reserved.

### Documents - Greencut – GGT1200C

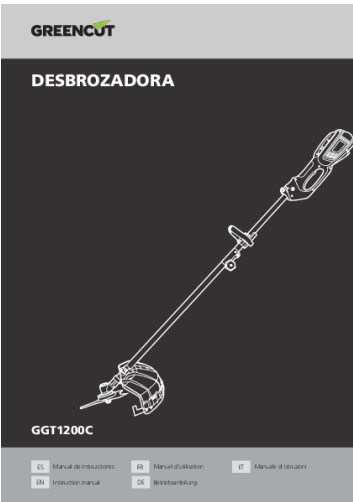

[\[pdf\]](#) User Manual


GREENCUT GGT1200C 10 Index of pub manual 1000135 GRE000684 beeloomkids |||  
DESBROZADORA **GGT1200C** ES Manual de instrucciones EN Instruction manual  
FR Manuel d utilisation DE Betriebsanleitung IT Manuale di istruzioni 2 NDICE  
INTRODUCCIN2 NORMAS Y PRECAUCIONES DE SEGURIDAD 2 ICONOS DE  
ADVERTENCIA 6 DESCRIPCIN DEL PRODUCTO 7 CONTENIDO DE LA CAJA 8  
MONTAJE9 U...  
lang:es **score:49** filesize: 2.66 M page\_count: 68 document date: 2023-07-05

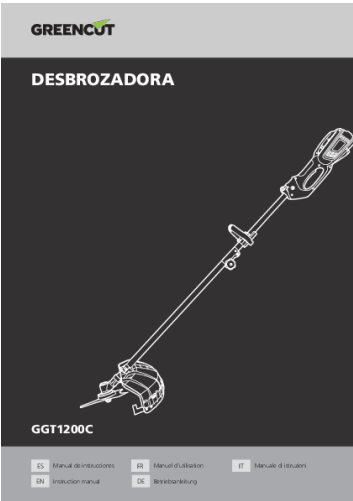 

[\[pdf\]](#) User Manual

GREENCUT GGT1200C 10Index of pub manualGREENCUT 1000135 GRE000684fitfiu fitness manual  
GRE000684 |||  
DESBROZADORA **GGT1200C** ES Manual de instrucciones EN Instruction manual  
FR Manuel d utilisation DE Betriebsanleitung IT Manuale di istruzioni 2 NDICE  
INTRODUCCIN2 NORMAS Y PRECAUCIONES DE SEGURIDAD 2 ICONOS DE  
ADVERTENCIA 6 DESCRIPCIN DEL PRODUCTO 7 CONTENIDO DE LA CAJA 8  
MONTAJE9 U...  
lang:es **score:48** filesize: 2.66 M page\_count: 68 document date: 2023-07-05



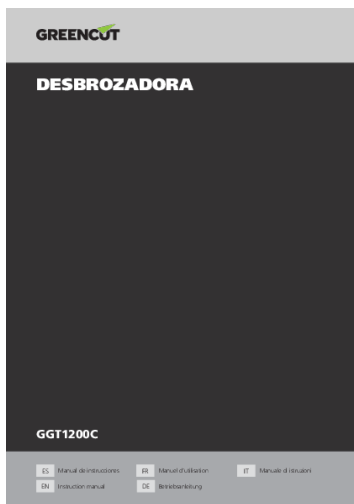 

[\[pdf\]](#) User Manual

Ver la ficha técnica Desbrozadora eléctrica con cable potencia 1200W 230V corte doble hilo 2 mm ancho 35cm velocidad 8500rpm Greencut GGT1200C 31829158 cdn manomano files |||

DESBROZADORA **GGT1200C** ES Manual de instrucciones EN Instruction manual FR Manuel d utilisation DE Betriebsanleitung IT Manuale di istruzioni 2 NDICE INTRODUCIN2 NORMAS Y PRECAUCIONES DE SEGURIDAD 2 ICONOS DE ADVERTENCIA 6 DESCRIPCIN DEL PRODUCTO 7 CONTENIDO DE LA CAJA 8 MONTAJE9 U...

lang:es **score:33** filesize: 1.35 M page\_count: 68 document date: 2021-07-05



[\[pdf\]](#) User Manual

GREENCUT 1000135 Index of pub manual beeloomkids |||

GRE000684 **GGT1200C** VER MANUAL SEE ASSEMBLY AND START-UP / VOIR MONTAGE ET MISE EN SERVICE / MONTAGGIO E MESSA IN FUNZIONE/ MONTAGE UND INBETRIEBNAHME **GGT1200C** VER MANUAL SEE ASSEMBLY AND START-UP / VOIR MONTAGE ET MISE EN SERVICE / MONTAGGIO E MESSA IN FUNZIONE/ MONTAGE UND INBETRIEBNAHME ...

lang:es **score:32** filesize: 269.58 K page\_count: 1 document date: 2025-02-21




[\[pdf\]](#) User Manual

GREENCUT 1000135 Index of pub manualfitfiu fitness manual |||

GRE000684 **GGT1200C** VER MANUAL SEE ASSEMBLY AND START-UP / VOIR MONTAGE ET MISE EN SERVICE / MONTAGGIO E MESSA IN FUNZIONE/ MONTAGE UND INBETRIEBNAHME **GGT1200C** VER MANUAL SEE ASSEMBLY AND START-UP / VOIR MONTAGE ET MISE EN SERVICE / MONTAGGIO E MESSA IN FUNZIONE/ MONTAGE UND INBETRIEBNAHME ...

 lang:es **score:32** filesize: 269.58 K page\_count: 1 document date: 2025-02-21

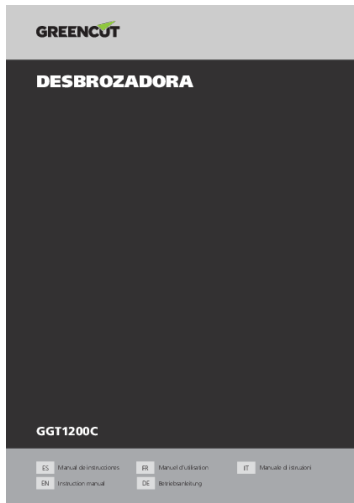


[\[pdf\]](#) User Manual

DESBROZADORA 3819a33f4edde3b8e6146c23695421415cb56f61 cdn manomano pim dam img 95 22284581 |||

DESBROZADORA **GGT1200C** ES Manual de instrucciones EN Instruction manual FR Manuel d utilisation DE Betriebsanleitung IT Manuale di istruzioni 2 NDICE INTRODUCIN2 NORMAS Y PRECAUCIONES DE SEGURIDAD 2 ICONOS DE ADVERTENCIA 6 DESCRIPCIN DEL PRODUCTO 7 CONTENIDO DE LA CAJA 8 MONTAJE9 U...

 lang:es **score:21** filesize: 1.35 M page\_count: 68 document date: 2021-07-16

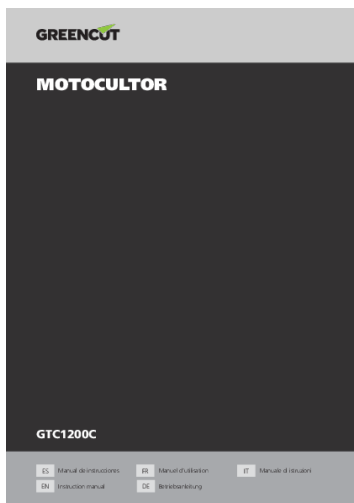

[\[pdf\]](#) User Manual

Ver la ficha técnica Motoazada eléctrica con cable GTC1200C 1200W 230V 4 cuchillas intercambiables ancho trabajo 36cm profundidad 22cm Greencut 32433818 cdn manomano files |||

MOTOCULTOR GTC1200C ES Manual de instrucciones EN Instruction manual FR Manuel d utilisation DE B ... appearance, inclusions, description and packaging as shown or described here. 45 TECHNICAL DATA **GGT1200C** Nominal input voltage 230-240V - 50 Hz EN Nominal power 1200W No load speed 400rpm ...

lang:es **score:18** filesize: 1.05 M page\_count: 64 document date: 2021-07-07