

Manuals+

[Q & A](#) | [Deep Search](#) | [Upload](#)

[manuals.plus](#) /

› [Paladone](#) /

› [Paladone Minecraft TNT Alarm Clock User Manual \(Model PP8007MCF\)](#)

Paladone PP8007MCF

Paladone Minecraft TNT Alarm Clock User Manual

Model: PP8007MCF

1. INTRODUCTION

Thank you for purchasing the Paladone Minecraft TNT Alarm Clock. This alarm clock is designed to bring the iconic Minecraft TNT block to life, featuring official in-game TNT sounds for its alarm and a clear LED display. Please read this manual carefully to ensure proper setup and operation of your new alarm clock.



Image 1.1: The Paladone Minecraft TNT Alarm Clock displaying the time.

2. SAFETY INFORMATION

- Keep the device away from water and moisture.
- Do not expose to direct sunlight or extreme temperatures.
- Use only the specified power source (USB 5V DC).
- Do not attempt to disassemble or repair the device yourself. Refer to qualified service personnel.
- Dispose of batteries responsibly according to local regulations.

3. PACKAGE CONTENTS

- Paladone Minecraft TNT Alarm Clock (Model PP8007MCF)
- USB Power Cable
- User Manual (this document)

4. PRODUCT FEATURES

- **Official Minecraft TNT Sounds:** Wakes you up with authentic in-game TNT explosion sounds.
- **Clear LED Display:** Features a large, inverted white LED display on a black background for easy readability.
- **Mood Light Function:** Includes a gentle mood light feature to enhance your room's ambiance.
- **USB Powered:** Conveniently powered via a USB cable (included).



Image 4.1: Key features of the Minecraft TNT Alarm Clock, including sound and mood light.

5. SETUP

1. **Power Connection:** Connect the provided USB cable to the alarm clock's power input port. Plug the other end into a compatible USB power adapter (not included) or a USB port on a computer/console.
2. **Battery Installation (Optional for backup):** The device requires 1 'A' type battery (not included) for backup power in case of a power outage. Locate the battery compartment, insert the battery, ensuring correct polarity (+/-).
3. **Initial Power On:** Once connected to power, the LED display will light up.

6. OPERATING INSTRUCTIONS

6.1 Setting the Time

1. Press the 'TIME SET' button (location may vary, typically on the back or bottom).
2. Use the '+' and '-' buttons to adjust the hour. Press 'TIME SET' again to confirm.
3. Use the '+' and '-' buttons to adjust the minute. Press 'TIME SET' again to confirm.
4. The time is now set.

6.2 Setting the Alarm

1. Press the 'ALARM SET' button.
2. Use the '+' and '-' buttons to adjust the alarm hour. Press 'ALARM SET' again to confirm.

3. Use the '+' and '-' buttons to adjust the alarm minute. Press 'ALARM SET' again to confirm.
4. The alarm is now set. An alarm icon will typically appear on the display.

6.3 Turning Alarm On/Off and Snooze

- To activate or deactivate the alarm, press the 'ALARM ON/OFF' button.
- When the alarm sounds, press the 'SNOOZE' button (often a large button on top) to temporarily silence it. The alarm will sound again after a few minutes.
- To turn off the alarm completely after it sounds, press any other button (e.g., 'ALARM SET' or 'TIME SET').

6.4 Mood Light Function

- Press the 'LIGHT' button (or similar, refer to device markings) to cycle through mood light settings or to turn it on/off.



Image 6.1: Close-up of the alarm clock display showing time and alarm settings.



GENTLE MOOD LIGHTING

POWERED BY USB, CORD INCLUDED

Image 6.2: The alarm clock with its gentle mood lighting feature activated.

7. MAINTENANCE

- **Cleaning:** Wipe the surface of the alarm clock with a soft, dry cloth. Do not use abrasive cleaners or solvents.
- **Battery Replacement:** If using backup batteries, replace them annually or when the display shows signs of dimming during power outages. Ensure the device is disconnected from USB power before opening the battery compartment.

8. TROUBLESHOOTING

Problem	Possible Cause	Solution
Display is blank or not lighting up.	No power connection or faulty USB cable.	Ensure USB cable is securely connected and power adapter is working. Try a different USB port or adapter.
Alarm does not sound.	Alarm not activated or set incorrectly.	Verify alarm time is set and the alarm function is turned ON (check for alarm icon on display).

Problem	Possible Cause	Solution
Time is incorrect.	Time not set or power interruption.	Reset the time following Section 6.1. If using backup battery, ensure it is fresh.
Mood light not working.	Light function is off.	Press the 'LIGHT' button to activate the mood light.

9. SPECIFICATIONS

Feature	Detail
Brand	Paladone
Model Number	PP8007MCF
Product Dimensions (L x W x H)	10.8 x 3.81 x 10.8 cm (4.25 x 1.5 x 4.25 inches)
Item Weight	280 g (0.62 lbs)
Power Source	USB Cable (5 Volts DC)
Battery Required	Yes, 1 'A' type battery (for backup, not included)
Bulb Type	LED
Material	Plastic
Special Features	Alarm, Mood Light

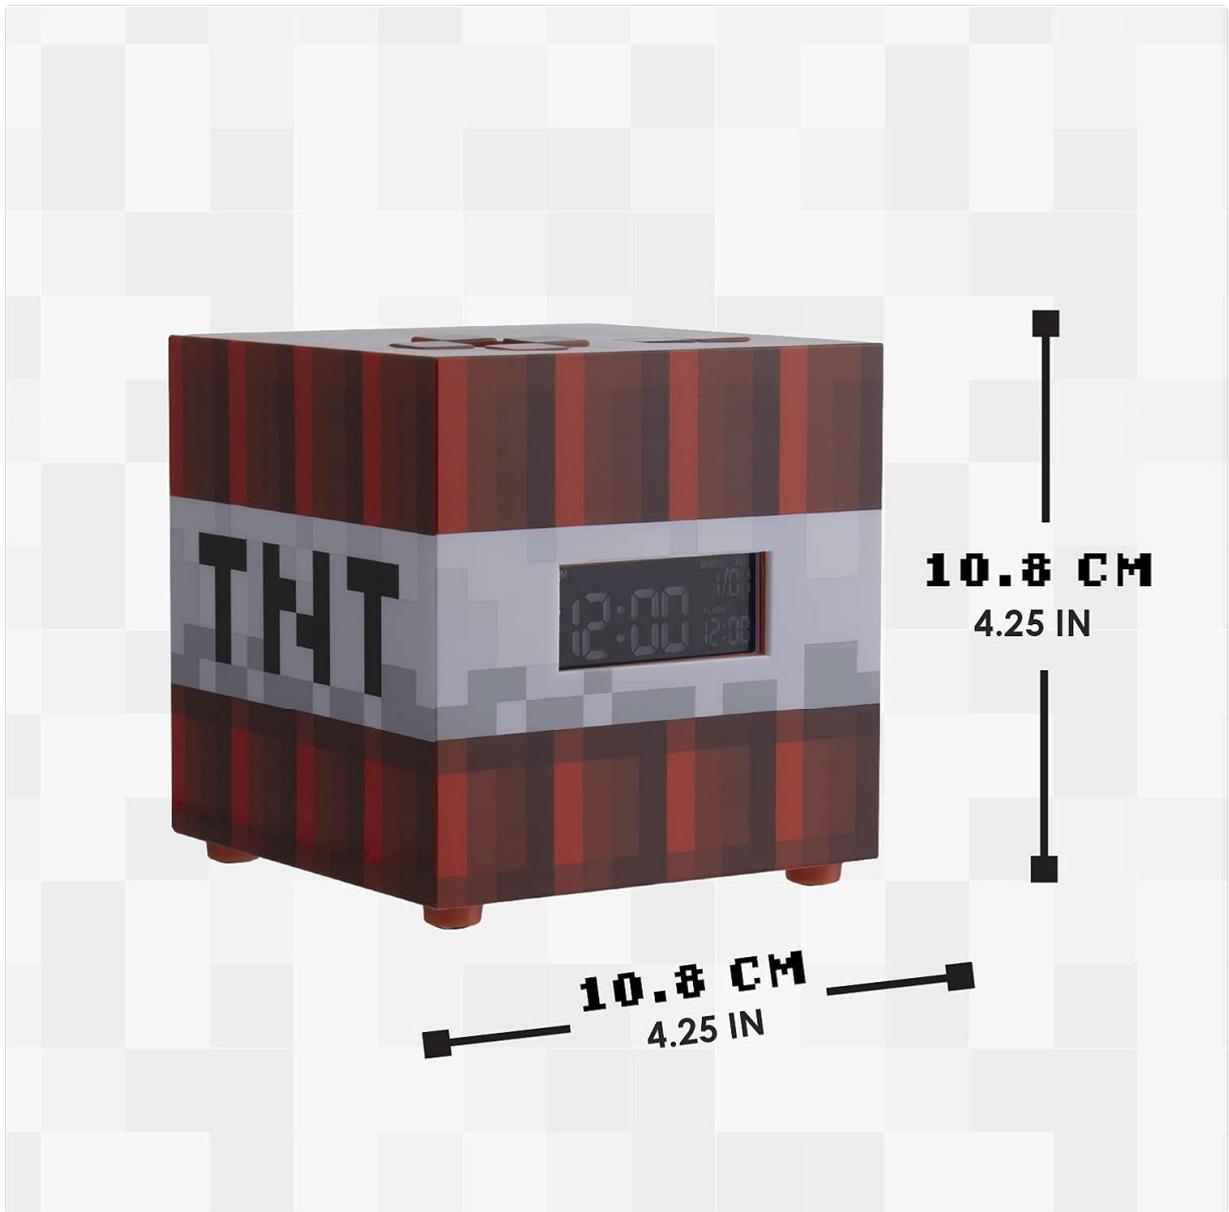


Image 9.1: Dimensions of the Paladone Minecraft TNT Alarm Clock.

10. WARRANTY AND SUPPORT

For warranty information or technical support, please refer to the contact details provided on the product packaging or visit the official Paladone website. Keep your proof of purchase for any warranty claims.