

## Manuals+

[Q & A](#) | [Deep Search](#) | [Upload](#)

[manuals.plus](#) /

› [MONODEAL](#) /

› [MONODEAL MD318 Portable CD Player with Bluetooth and FM Radio User Manual](#)

## MONODEAL MD318

# MONODEAL MD318 Portable CD Player User Manual

Model: MD318

## 1. INTRODUCTION

Thank you for purchasing the MONODEAL MD318 Portable CD Player. This device combines a portable CD player with Bluetooth 5.3, FM radio, and support for AUX and USB playback. It features built-in speakers and a rechargeable battery for versatile use. This manual provides detailed instructions for setup, operation, maintenance, and troubleshooting to ensure optimal performance and longevity of your device.

## 2. PRODUCT OVERVIEW

### 2.1 Key Features

- Bluetooth 5.3 Connectivity:** Ensures stable and fast connection with mobile phones, computers, iPads, Bluetooth headphones, and speakers.
- Integrated FM Radio:** Enjoy your favorite radio stations.
- High-Performance Speakers:** Two built-in 3W speakers provide clear and enjoyable audio.
- Enhanced Anti-Skip Protection:** Guarantees continuous CD playback even during movement or vibrations.
- Multiple Playback Modes:** Supports CD, Bluetooth, FM, AUX, and USB.
- Programmed Playback:** Allows programming of up to 20 CD tracks or 99 MP3/WMA tracks.
- Rechargeable Battery:** Built-in 1800 mAh Li-ion battery for portable use without constant charging.
- Remote Control:** Convenient operation from up to 10 meters away.
- Sleep Timer Function:** Set a timer for automatic device shutdown.

### 2.2 Package Contents

Please check the package for the following items:

- MONODEAL MD318 Portable CD Player
- Remote Control
- Type-C Charging Cable
- AUX Cable
- Instruction Manual

Image: Contents of the MONODEAL MD318 package including the CD player, remote control, Type-C cable, AUX cable, and instruction manual.

## 3. SETUP

### 3.1 Charging the Device

1. Connect the provided Type-C charging cable to the charging port on the MD318 CD player.
2. Connect the other end of the cable to a USB power adapter (not included) or a computer's USB port.
3. The charging indicator will illuminate. The device is fully charged when the indicator changes color or turns off (refer to the device's LED indicator for specific behavior).

The built-in 1800 mAh Li-ion battery provides extended playback time, allowing use without a constant power connection.

### 3.2 Initial Power On

1. Locate the power switch on the device.
2. Slide the switch to the 'ON' position. The LCD screen will light up.

## 4. OPERATING INSTRUCTIONS

### 4.1 CD Playback

1. Open the CD compartment cover.
2. Carefully place a CD (CD, CDR, HDCD) onto the spindle, label side up.
3. Close the CD compartment cover.
4. Press the 'MODE' button to select CD mode if not already selected.
5. Press the 'PLAY/PAUSE' button to start playback.
6. Use the 'PREV' and 'NEXT' buttons to skip tracks.
7. Adjust volume using the 'VOL+' and 'VOL-' buttons.

### Programming Tracks

In CD mode, you can program a sequence of tracks:

1. While the CD is stopped, press the 'PROG' button.
2. Use 'PREV' or 'NEXT' to select the desired track number.
3. Press 'PROG' again to confirm and add the track to the program list.
4. Repeat steps 2-3 for up to 20 tracks.
5. Press 'PLAY/PAUSE' to start programmed playback.



Image: Programming a playlist on the MD318 CD player.

## 4.2 Bluetooth Mode

The MD318 supports two Bluetooth modes: Receiver (RX) and Transmitter (TX).

### 4.2.1 Bluetooth Receiver (RX) Mode (Connect to Phone/Tablet)

In this mode, the MD318 acts as a Bluetooth speaker, playing audio from your mobile device.

1. Press the 'MODE' button to select Bluetooth mode. The LCD screen will display 'BT' and the Bluetooth indicator will flash, indicating pairing mode.
2. On your mobile device (phone, tablet, computer), enable Bluetooth and search for available devices.
3. Select 'MD318' from the list to pair.
4. Once paired, the Bluetooth indicator will stop flashing. You can now play audio from your mobile device through the MD318's speakers.

### 4.2.2 Bluetooth Transmitter (TX) Mode (Connect to Headphones/Speakers)

In this mode, the MD318 transmits audio from a CD or USB to external Bluetooth headphones or speakers.

1. Ensure your Bluetooth headphones or speaker are in pairing mode.
2. Insert a CD or USB drive into the MD318.
3. Press the 'MODE' button to select CD or USB mode.
4. Long press the Bluetooth button on the MD318 (refer to the device diagram for exact button). The Bluetooth indicator will flash.
5. The MD318 will automatically search for and connect to nearby Bluetooth audio devices.
6. Once connected, audio will play through your external Bluetooth device.

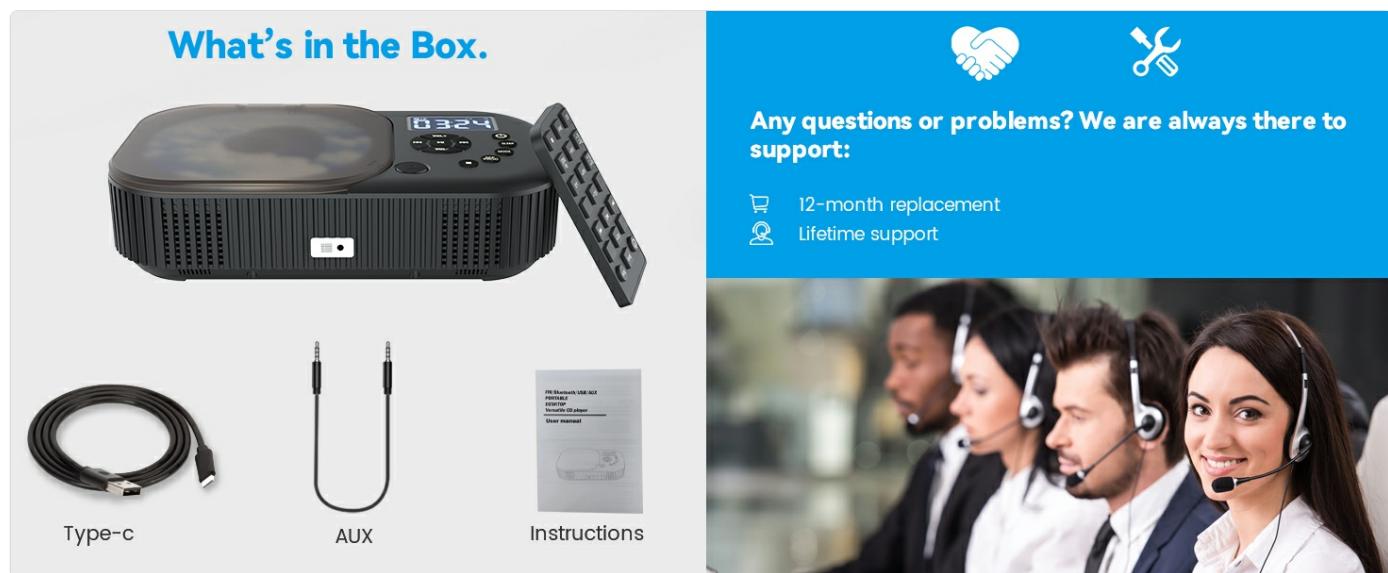


Image: Two Bluetooth Modes (RX and TX) of the MD318.

## 4.3 FM Radio Mode

1. Press the 'MODE' button to select FM radio mode. The LCD screen will display the FM frequency.
2. Long press the 'PLAY/PAUSE' button to auto-scan and save available FM stations.
3. Use the 'PREV' and 'NEXT' buttons to navigate through saved stations.
4. Adjust volume using the 'VOL+' and 'VOL-' buttons.



Image: Portable FM Radio function of the MD318.

#### 4.4 AUX Input Mode

Connect external audio devices to the MD318 using the provided AUX cable.

1. Connect one end of the AUX cable to the 'AUX IN' port on the MD318.
2. Connect the other end to the headphone jack or audio output of your external device (e.g., smartphone, MP3 player).
3. Press the 'MODE' button to select AUX mode.
4. Play audio from your external device. The sound will be output through the MD318's speakers.

#### 4.5 USB Playback Mode

Play MP3 or WMA audio files directly from a USB flash drive.

1. Insert a USB flash drive containing MP3 or WMA files into the USB port on the MD318.
2. Press the 'MODE' button to select USB mode.
3. The device will automatically begin playing the audio files.
4. Use the 'PREV' and 'NEXT' buttons to skip tracks.
5. The device supports programmed playback for up to 99 MP3/WMA tracks (similar to CD programming).



Image: USB Music Play function of the MD318.

#### 4.6 Remote Control Operation

The included remote control allows convenient operation of the MD318 from a distance of up to 10 meters.

- Ensure the remote control has working batteries.
- Point the remote control towards the front of the MD318.
- Buttons on the remote control correspond to functions on the device (e.g., Play/Pause, Skip, Volume, Mode, Program, Sleep).

## Big Volume, Surround Sound



Image: MONODEAL MD318 with remote control for convenient use.

## 4.7 Sleep Timer

The sleep timer allows you to set a duration after which the player will automatically turn off.

1. Press the 'SLEEP' button repeatedly to cycle through available sleep timer options (e.g., 15 min, 30 min, 45 min, 60 min, 90 min).
2. The selected duration will be displayed on the LCD screen.
3. The device will automatically power off after the set time.



Image: Sleep Timer function for customized listening duration.

## 4.8 Anti-Skip Protection

The MD318 features an enhanced anti-skip protection system to prevent interruptions during CD playback, even when the device experiences minor shocks or vibrations. This makes it suitable for use in various environments, including cars or while carrying.



Image: Anti-Skip Protection for continuous playback in motion.

## 5. MAINTENANCE

### 5.1 Cleaning the Device

- Use a soft, dry cloth to clean the exterior of the CD player.
- For stubborn dirt, slightly dampen the cloth with water and then wipe dry immediately.
- Do not use abrasive cleaners, alcohol, or solvents, as these can damage the surface.

- To clean the CD lens, use a specialized CD lens cleaning kit. Do not touch the lens directly.

## 5.2 Battery Care

- Charge the device regularly, even if not in frequent use, to maintain battery health.
- Avoid fully discharging the battery frequently.
- Store the device in a cool, dry place when not in use for extended periods.

## 5.3 Storage

- Store the CD player in a dust-free environment.
- Avoid exposing the device to extreme temperatures, direct sunlight, or high humidity.
- Remove any CD or USB drive before storing the device.

## 6. TROUBLESHOOTING

Problem	Possible Cause	Solution
Device does not power on.	Battery is depleted. Power switch is off.	Charge the device. Ensure the power switch is in the 'ON' position.
CD does not play or skips.	CD is dirty, scratched, or inserted incorrectly. CD format not supported.	Clean the CD. Reinsert the CD correctly. Ensure the CD is a supported format (CD, CDR, HDCD).
No sound from speakers.	Volume is too low. Device is in Bluetooth TX mode. AUX cable connected.	Increase volume. Ensure device is not in Bluetooth TX mode if you want sound from internal speakers. Disconnect AUX cable if not using external speakers.
Bluetooth pairing fails.	Device not in pairing mode. External device too far or not in pairing mode.	Ensure MD318 is in Bluetooth mode and flashing. Place devices closer. Put external device in pairing mode.
USB drive not recognized.	USB format not supported. Files not MP3/WMA. USB drive damaged.	Ensure USB drive is formatted correctly (FAT32). Check files are MP3/WMA. Try a different USB drive.
Remote control not working.	Batteries depleted or inserted incorrectly. Obstruction between remote and player.	Replace batteries. Ensure correct polarity. Remove obstructions.

If the problem persists after trying these solutions, please contact MONODEAL customer support for further assistance.

## 7. SPECIFICATIONS

Feature	Detail
Brand	MONODEAL
Model Number	MD318
Item Dimensions (L x W x H)	22 x 13 x 5.5 cm
Item Weight	600 Grams

Feature	Detail
Bluetooth Version	5.3
Number of Speakers	2
Speaker Output	2 x 3W
Battery	1800 mAh Li-ion (Rechargeable)
Supported CD Formats	CD, CDR, HDCD
Supported USB Formats	MP3, WMA
FM Radio Frequency	87.5-108 MHz
Remote Control Range	Up to 10 meters

## 8. WARRANTY AND SUPPORT

### 8.1 Warranty Information

MONODEAL provides a 12-month replacement warranty for manufacturing defects from the date of purchase. This warranty covers defects in materials and workmanship under normal use. It does not cover damage caused by misuse, accidents, unauthorized modifications, or normal wear and tear.

### 8.2 Customer Support

For any questions, issues, or support needs regarding your MONODEAL MD318 Portable CD Player, please contact our customer support team. We offer lifetime support to ensure your satisfaction.

Please refer to the contact information provided on our official website or the product packaging for the most up-to-date support channels.



Image: The MONODEAL MD318 enhances daily life with music.

