

[Manuals.plus](#) /

› [AYVVP11](#) /

› AYVVP11 Silent Disco LED Flashing Light Headphones with Transmitter (Model Silent UHF9-3) Instruction Manual

AYVVP11 Silent UHF9-3

AYVVP11 Silent Disco LED Flashing Light Headphones with Transmitter (Model Silent UHF9-3) Instruction Manual

Model: Silent UHF9-3

1. INTRODUCTION

This manual provides detailed instructions for the setup, operation, and maintenance of your AYVVP11 Silent Disco LED Flashing Light Headphones and Transmitter system. Please read this manual thoroughly before use to ensure proper functionality and to maximize your product experience.

2. SAFETY INFORMATION

Warning:

- Do not disassemble the product without professional knowledge. Unauthorized disassembly may lead to electric shock, product damage, or void the warranty.
- Avoid exposing the headphones or transmitter to extreme temperatures, direct sunlight, or high humidity.
- Keep out of reach of children.
- Use only the provided charging cables and power adapters.
- Do not use the headphones at excessively high volumes for prolonged periods to prevent hearing damage.

3. PACKAGE CONTENTS

Verify that all items are present in your package:

- AYVVP11 Silent Disco LED Flashing Light Headphones (Quantity as purchased, e.g., 10pcs)
- 1x RF Transmitter
- 1x Transmitter Antenna
- USB Charging Cables (for headphones)
- Audio Cables (3.5mm to 3.5mm, RCA to 3.5mm adapter)

- Power Adapter (for transmitter)
- Instruction Manual (this document)



Image: A bundle of AYVVP11 Silent Disco LED Flashing Light Headphones and one transmitter, illustrating the typical package contents.

4. SETUP INSTRUCTIONS

1. 4.1 Charge Headphones

Before first use, ensure all headphones are fully charged. Connect the USB charging cable to the charging port on each headphone and to a USB power source. The charging indicator light will illuminate. A full charge takes approximately 3 hours.



Image: Close-up of a headphone showing the USB charging port and charging indicator light.

2. **4.2 Connect Transmitter**

Connect the antenna to the transmitter. Connect the transmitter to your audio source (e.g., mixer, PC, MP3 player, TV) using the appropriate audio cable (3.5mm or RCA). Plug the power adapter into the transmitter and a power outlet. The transmitter's power indicator light will turn on.

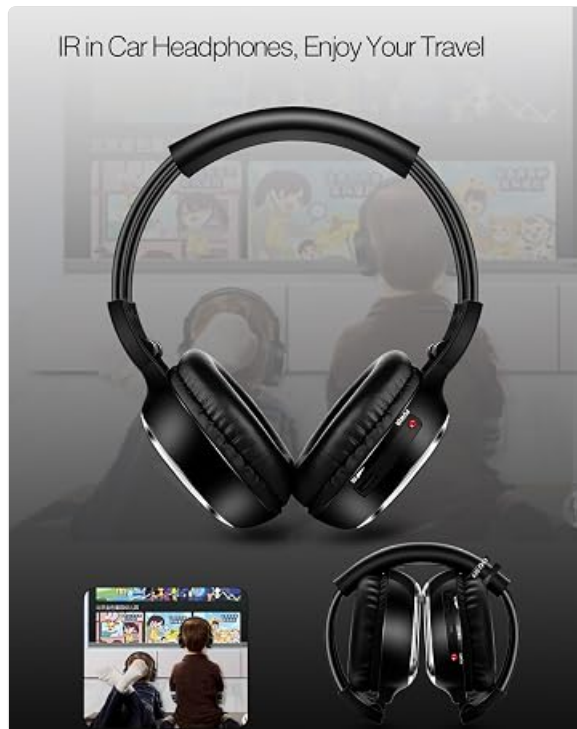


Image: Diagram showing the transmitter connected to an audio source and power.

3. **4.3 Power On Headphones**

Press and hold the power button on each headphone for approximately 2 seconds to turn them on. The LED lights on the earcups will illuminate and flash.

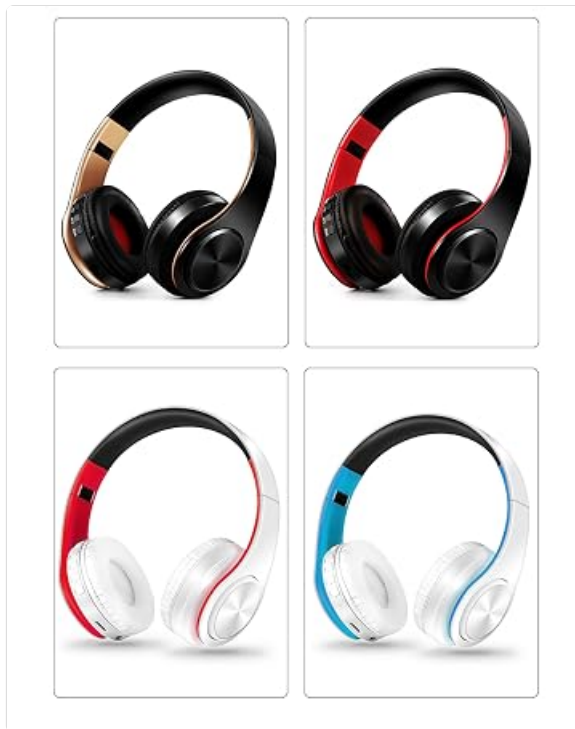


Image: Close-up of a headphone highlighting the power button.

5. OPERATING INSTRUCTIONS

1. 5.1 Channel Selection

The headphones support up to 3 channels. To switch between channels, briefly press the power button (ON/OFF/TUNE button). The LED lights on the headphones will change color to indicate the selected channel (e.g., Red, Green, Blue).



Image: Illustration showing how to switch between 3 channels on the headphones.

2. 5.2 Volume Control

Adjust the volume using the volume control buttons located on the earcup of each headphone. Press '+' to increase volume and '-' to decrease volume.

3. 5.3 LED Flashing Lights

The LED lights on the headphones flash to the beat of the music, providing a dynamic visual experience. The

color of the lights indicates the selected channel.

4. **5.4 Automatic Power Off**

To conserve battery, the headphones will automatically switch off after 10 minutes of not receiving any broadcasted audio signal.



Image: Graphic indicating the 10-minute auto power-off feature for headphones.

Your browser does not support the video tag.

Video: Demonstration of the LED flashing lights and channel switching on the silent disco headphones. This video shows multiple headphones displaying different colored lights and a hand interacting with the channel button.

6. MAINTENANCE

- Clean the headphones and transmitter with a soft, dry cloth. Do not use liquid cleaners or abrasive materials.
- Store the devices in a cool, dry place away from direct sunlight when not in use.
- Ensure charging ports are free of dust and debris.
- Do not bend or twist cables excessively.

7. TROUBLESHOOTING

Problem	Possible Cause	Solution
No sound from headphones	◦ Headphones not powered on. ◦ Headphones not on the correct channel. ◦ Transmitter not powered on or connected to audio source. ◦ Audio source volume too low or muted. ◦ Out of range.	◦ Press and hold the power button to turn on headphones. ◦ Press the power button to cycle through channels until sound is heard. ◦ Ensure transmitter is powered and connected correctly to the audio source. ◦ Increase volume on audio source and headphones. ◦ Move closer to the transmitter.
Headphones not turning off	◦ Power button not held long enough. ◦ Temporary software glitch.	◦ Press and hold the power button for 2-3 seconds until the lights turn off. ◦ Allow the battery to drain completely, then recharge and try again.

Problem	Possible Cause	Solution
Static or poor audio quality	◦ Interference from other RF devices. ◦ Weak signal due to distance or obstacles. ◦ Faulty audio cable or connection.	◦ Move away from other electronic devices. ◦ Ensure the transmitter antenna is upright and unobstructed. Move closer to the transmitter. ◦ Check all audio cable connections and try a different cable if available.

8. SPECIFICATIONS

Feature	Detail
Model Name	Silent UHF9-3
Brand	AYVVP11
Connectivity Technology	RF, Wireless
Wireless Communication Technology	RF
Headphones Jack	3.5 mm Jack (for audio input to transmitter)
Ear Placement	Over Ear
Material	Plastic
Item Weight (per headphone)	0.17 Kilograms (approx. 6 ounces)
Product Dimensions	5.91 x 3.35 x 6.69 inches
Charging Time	3 Hours (headphones)
Battery Life	8-10 Hours (headphones)
Transmitter Range	Up to 500 meters (1640 feet) in vast space
Headphone Receiving Distance	150-200 meters
Number of Channels	3
Control Type	Volume Control, Channel Switch
Special Feature	LED Flashing Lights, Automatic Power Off
UPC	600609271698

9. WARRANTY AND SUPPORT

This product comes with a standard manufacturer's warranty. For specific warranty details, technical support, or any questions regarding your AYVVP11 Silent Disco system, please refer to the contact information provided with your purchase or visit the official AYVVP11 website.

ASK A QUESTION ABOUT THIS MANUAL

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question and use this page's manual context to help answer it.

Name

Anonymous

Email

you@example.com

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. [Privacy details](#).

Question

Example: How do I reset this device or fix this error?

Details

Model number, symptoms, what you tried, or the section of the manual you are using.

Submit question

Open the live page

<https://manuals.plus/asin/B093WJGHBL>

More documents and user manuals: <https://manuals.plus/>