

Haier HWM140-1678S

Haier 14 KG Fully Automatic Washing Machine User Manual

Model: HWM140-1678S

1. INTRODUCTION

Thank you for choosing the Haier 14 KG Fully Automatic Washing Machine, model HWM140-1678S. This manual provides essential information for the safe and efficient installation, operation, and maintenance of your new appliance. Please read these instructions carefully before using the washing machine and retain them for future reference.

2. SAFETY INFORMATION

To reduce the risk of fire, electric shock, or injury when using your washing machine, follow these basic precautions:

- Ensure the washing machine is properly grounded.
- Do not install or store the appliance where it will be exposed to the weather or freezing temperatures.
- Do not repair or replace any part of the appliance or attempt any servicing unless specifically recommended in this manual or in published user-repair instructions that you understand and have the skills to carry out.
- Keep flammable materials and vapors away from the washing machine.
- Always unplug the washing machine from the power supply before cleaning or performing any maintenance.
- Do not allow children to play on or in the appliance. Close supervision of children is necessary when the appliance is used near children.
- The appliance is equipped with a Child Lock feature to prevent accidental operation by children. Activate this feature as needed.

3. PRODUCT OVERVIEW

3.1 Key Features

- **14 KG Capacity:** Suitable for large laundry loads.
- **Rear Control Panel:** Ergonomically placed controls for ease of use.

- **Soft Closing Door:** Ensures quiet and safe closing of the lid.
- **Auto Restart:** Automatically resumes operation after a power outage.
- **Pillow Drum Technology:** Designed to protect clothes from damage during washing.
- **4D Magic Filter:** Effectively purifies impurities from the wash water.
- **12 Washing Programs:** Offers a variety of cycles for different fabric types and cleaning needs.

3.2 Components

Familiarize yourself with the main parts of your washing machine:



Image 1: Top view of the Haier 14 KG Fully Automatic Washing Machine with the lid open, showing the control panel and the stainless steel pillow drum. The control panel features various wash programs, water level, spin speed, and delay options, along with a digital display and a rotary program selector.



Image 2: Angled view of the Haier 14 KG Fully Automatic Washing Machine with the soft-closing lid closed. This view highlights the sleek silver finish and the rear control panel design.



Image 3: Full side view of the Haier 14 KG Fully Automatic Washing Machine, showcasing its compact design and silver metallic exterior. The side panels feature a subtle textured pattern.

4. INSTALLATION AND SETUP

4.1 Unpacking

- Carefully remove all packaging materials.
- Inspect the washing machine for any damage during transit. Contact your retailer immediately if damage is found.
- Remove any transit bolts or packing materials from the drum as instructed in the quick start guide.

4.2 Placement

- Place the washing machine on a firm, level floor.
- Ensure there is adequate space around the machine for ventilation and maintenance.
- Avoid direct sunlight or heat sources.

4.3 Water and Power Connection

- Connect the water inlet hose to a cold water tap. Ensure connections are tight to prevent leaks.
- Position the drain hose into a suitable drain or sink, ensuring it is securely fastened to prevent dislodging during operation.
- Plug the power cord into a grounded electrical outlet. Ensure the voltage and frequency match the specifications of the appliance.

4.4 Leveling

- Use a spirit level to check if the machine is perfectly level.
- Adjust the leveling feet at the bottom of the machine until it is stable and level. This prevents excessive vibration and noise during operation.

5. OPERATION

5.1 Control Panel Overview

The rear control panel features a digital display, program selector knob, and various function buttons. Refer to Image 1 for a visual guide.

- **Power Button:** Turns the machine on/off.
- **Start/Pause Button:** Starts or pauses the selected wash cycle.
- **Program Selector Knob:** Used to choose from 12 available wash programs.
- **Water Level Button:** Adjusts the water level according to load size.
- **Wash/Rinse/Spin Time Buttons:** Allows adjustment of specific cycle durations.
- **Delay Start Button:** Sets a delayed start time for the wash cycle.
- **Child Lock:** Activates/deactivates the child lock feature (usually by pressing and holding a combination of buttons).

5.2 Washing Programs

Your washing machine is equipped with 12 standard washing cycles to cater to various fabric types and cleaning requirements. Rotate the Program Selector Knob to choose the desired program.

Program Name	Recommended Use
--------------	-----------------

Program Name	Recommended Use
Standard	Daily cottons and mixed fabrics.
Heavy Duty	Heavily soiled items, durable fabrics.
Delicate	Fragile items requiring gentle washing.
Quick Wash	Lightly soiled items, small loads.
Bulky	Blankets, comforters, large items.
Spin Only	Removes excess water from clothes.
Rinse + Spin	Adds an extra rinse and spin cycle.
Drain	Drains water from the tub without spinning.
Tub Clean	Self-cleaning cycle for the washing machine tub.
Jeans	Optimized for denim fabrics.
Synthetics	For synthetic materials like polyester, nylon.
Mixed	For mixed loads of different fabric types.

5.3 Starting a Wash Cycle

1. Load laundry into the drum, ensuring not to overload.
2. Add detergent and fabric softener to the dispenser.
3. Close the soft-closing lid.
4. Press the **Power** button.
5. Rotate the **Program Selector Knob** to choose your desired wash program.
6. Adjust additional settings like Water Level, Wash Time, Rinse Time, or Spin Time if necessary.
7. Press the **Start/Pause** button to begin the cycle.

5.4 Special Functions

- **Auto Restart:** In case of a power interruption, the machine will automatically resume the cycle from where it left off once power is restored.
- **Child Lock:** To activate, press and hold the designated buttons (refer to your control panel for specific combination, usually two buttons simultaneously) for a few seconds until the indicator lights up. This locks all buttons except the Power button. Repeat the process to deactivate.

6. MAINTENANCE

Regular maintenance ensures optimal performance and extends the lifespan of your washing machine.

6.1 Cleaning the Exterior

- Wipe the exterior surfaces with a soft, damp cloth.
- Do not use abrasive cleaners, solvents, or harsh chemicals.

6.2 Cleaning the Drum

- Run the 'Tub Clean' program regularly (e.g., once a month) to remove detergent residue and odors.
- You may add a washing machine cleaner or a small amount of white vinegar during the Tub Clean cycle.

6.3 Cleaning the 4D Magic Filter

- Locate the 4D Magic Filter inside the drum (usually on the side).
- Remove the filter by gently pulling it out.
- Open the filter and clean out any lint, debris, or impurities under running water.
- Reinsert the clean filter securely into its position. Clean the filter after every few washes or when you notice reduced drainage efficiency.

6.4 Winterization (for cold climates)

- If the machine is stored in an area subject to freezing temperatures, drain all water from the hoses and pump.
- Disconnect water inlet hoses and drain the remaining water.
- Run a short spin cycle to remove any water from the drum.

7. TROUBLESHOOTING

Before contacting service, refer to the following table for common issues and their solutions:

Problem	Possible Cause	Solution
Machine does not start	Power cord not plugged in; Door not closed properly; Child Lock activated.	Check power connection; Ensure lid is fully closed; Deactivate Child Lock.
No water filling	Water tap closed; Water inlet hose kinked; Water supply pressure too low.	Open water tap; Straighten hose; Check household water pressure.
Water not draining	Drain hose kinked or blocked; 4D Magic Filter clogged.	Check and clear drain hose; Clean the 4D Magic Filter.
Excessive vibration/noise	Machine not level; Transit bolts not removed; Uneven load.	Adjust leveling feet; Ensure transit bolts are removed; Redistribute laundry evenly.
Clothes not clean	Overloading; Insufficient detergent; Incorrect program selected.	Reduce load size; Use appropriate amount of detergent; Select suitable wash program.

8. SPECIFICATIONS

Detailed technical specifications for the Haier HWM140-1678S Washing Machine:

Feature	Specification
Model Number	HWM140-1678S
Capacity	14 Kilograms
Load Type	Top Load

Feature	Specification
Operation Mode	Automatic
Number of Washing Cycles	12
Maximum Rotational Speed	1200 RPM
Drum Material	Stainless Steel (Pillow Drum)
Control Type	Push Button / Rotary Knob (Rear Control)
Special Features	Child Lock, Soft Closing Door, Auto Restart, 4D Magic Filter
Material Type	Metal
Color	Silver
Product Dimensions (D x W x H)	61 x 62 x 109.5 cm (approx.)
Item Weight	75 Kilograms

9. WARRANTY AND SUPPORT

For warranty information, please refer to the warranty card provided with your purchase or contact your retailer. If you encounter issues that cannot be resolved using the troubleshooting guide, please contact Haier customer support for assistance. Ensure you have your model number (HWM140-1678S) and purchase details ready when contacting support.

For further assistance, you may visit the official Haier website or contact their authorized service centers.