

Oster 76023

Oster Fast Feed Adjustable Pivot Motor Clipper 76023-510 Instruction Manual

Model: 76023

1. PRODUCT OVERVIEW

The Oster Fast Feed Adjustable Pivot Motor Clipper is designed for efficient and precise hair cutting. It features a powerful, yet quiet, pivot motor that delivers consistent performance. The adjustable blade lever allows for easy changes between various cutting lengths, from very close (size 000) to medium length (size 1).

This clipper is built for durability and ergonomic comfort, reducing strain during extended use. It is suitable for cutting various hair types.





Figure 1.1: Front view of the Oster Fast Feed Adjustable Pivot Motor Clipper.

2. SAFETY INFORMATION

Caution: This is an electric trimmer. Keep it away from water and do not use near children. Before use, clean the blade to remove any oil residue or grinding compounds. Be careful when handling the adjustable blade lever to avoid injury.

- Always ensure the clipper is unplugged before cleaning or performing maintenance.
- Do not immerse the clipper in water or any other liquid.
- Keep hands, hair, and clothing away from moving parts.
- Store the clipper in a dry place, out of reach of children.
- If the power cord is damaged, it must be replaced by the manufacturer or a qualified service agent to avoid hazards.

3. PACKAGE CONTENTS

Verify that all items listed below are included in your package:

- Oster Fast Feed Adjustable Pivot Motor Clipper
- 8-Piece Guide Comb Set (various sizes including 1/2", 1/4", 3/8", and blending)
- Pro Design Large Neck Duster
- Cleaning Brush
- Lubricating Oil
- Power Cord (integrated)



Figure 3.1: Contents of the Oster Fast Feed Clipper package.

4. SETUP

1. **Unpack the Clipper:** Carefully remove the Oster Fast Feed Adjustable Pivot Motor Clipper and all accessories from its packaging.
2. **Initial Cleaning:** The manufacturer pre-lubricates and inspects this item, which may leave oil residue or grinding compounds on the blade. Before first use, clean the blade using the enclosed brush to

remove any such residue.

3. **Lubricate Blades:** Apply a few drops of the provided lubricating oil to the clipper blades. This ensures smooth operation and extends blade life.
4. **Connect Power:** Plug the clipper into a standard electrical outlet. The clipper operates on a corded electric power source.
5. **Blade Adjustment:** Familiarize yourself with the adjustable blade lever located on the side of the clipper. Moving the lever up or down changes the cutting length of the blade. The Cryogen-X blade adjusts from a very close cut (size 000) to a medium length (size 1).



Figure 4.1: Close-up of the adjustable blade and lever.

5. OPERATING INSTRUCTIONS

1. **Prepare Hair:** Ensure the hair is clean and dry before clipping for best results.
2. **Select Guide Comb (Optional):** For specific hair lengths, attach one of the 8 included guide combs. These combs snap securely onto the clipper blade. Choose the appropriate size (e.g., 1/2", 1/4", 3/8") for your desired cut.
3. **Adjust Blade Length:** If not using a guide comb, or for fine-tuning, use the adjustable blade lever to set the desired cutting length.
4. **Turn On Clipper:** Locate the power switch, typically on the side of the clipper, and slide it to the "ON" position. The clipper's Whisper Quiet pivot motor will begin operating.
5. **Begin Clipping:** Hold the clipper firmly and move it against the direction of hair growth. Use smooth, even strokes. The specially designed lower blade allows hair to flow easily into the cutting blades for fast and accurate performance.
6. **Clean During Use:** Periodically brush away loose hair from the blades using the cleaning brush to maintain optimal cutting performance.
7. **Turn Off Clipper:** Once finished, slide the power switch to the "OFF" position and unplug the clipper from the electrical outlet.

6. MAINTENANCE

Proper maintenance ensures the longevity and optimal performance of your Oster Fast Feed Clipper.

- **After Each Use:**
 - a. Unplug the clipper.
 - b. Use the cleaning brush to remove all loose hair from the blades and the clipper body.
 - c. Apply 1-2 drops of lubricating oil to the blades. Turn the clipper on for a few seconds to distribute the oil, then turn it off. This helps keep the blades sharp and prevents rust.
 - d. Wipe the exterior of the clipper with a clean, damp cloth. Do not use harsh chemicals or abrasive cleaners.
- **Blade Care:** The Cryogen-X blades are designed for durability. If blades become dull or damaged, they can be replaced. Refer to Oster's official website or authorized service centers for replacement blades.
- **Storage:** Store the clipper and its accessories in a clean, dry place, away from extreme temperatures and humidity.

7. TROUBLESHOOTING

If you encounter issues with your clipper, refer to the following common solutions:

Problem	Possible Cause	Solution
Clipper not turning on	Not plugged in; power outlet issue; damaged cord.	Ensure clipper is securely plugged into a working outlet. Check the power cord for damage.

Problem	Possible Cause	Solution
Clipper pulling hair or cutting poorly	Blades are dull, dirty, or not lubricated; hair buildup.	Clean blades thoroughly with the brush. Apply lubricating oil. Consider replacing blades if dull.
Excessive noise or vibration	Blades not properly aligned; lack of lubrication.	Ensure blades are clean and well-lubricated. If noise persists, contact customer support.
Clipper getting hot	Extended use; lack of lubrication; hair buildup.	Allow clipper to cool down. Ensure blades are clean and lubricated. Avoid continuous long periods of operation.

8. SPECIFICATIONS

Feature	Detail
Model Number	76023
Brand	Oster
Power Source	Corded Electric
Motor Type	Whisper Quiet Pivot Motor
Blade Type	Cryogen-X Adjustable Blade (sizes 000 to 1)
Material	Alloy Steel (Blades)
Recommended Uses	Clipping
Package Dimensions	11.42 x 10.28 x 3.58 inches
Item Weight	2.16 Pounds
Date First Available	April 30, 2021

9. WARRANTY AND SUPPORT

For specific warranty details, please refer to the warranty card included with your product or visit the official Oster website. Warranty terms typically cover manufacturing defects for a specified period from the date of purchase.

For technical support, replacement parts, or service inquiries, please contact Oster customer service through their official channels. Keep your purchase receipt and model number (76023) handy when contacting support.

10. LEGAL DISCLAIMER

Statements regarding dietary supplements have not been evaluated by the FDA and are not intended to diagnose, treat, cure, or prevent any disease or health condition.

