

[Manuals.plus](#) /

› [Kuryakyn](#) /

› Kuryakyn 2722 Motorcycle Mount Kit Instruction Manual

Kuryakyn 2722

Kuryakyn 2722 Motorcycle Mount Kit Instruction Manual

For WanderBar Portable Soundbar: Multi-Fit for 7/8", 1", 1-1/4" & 1-1/2" Bars

INTRODUCTION

This instruction manual provides detailed information for the proper installation, operation, and maintenance of your Kuryakyn 2722 Motorcycle Mount Kit. This kit is specifically designed to securely attach the Kuryakyn WanderBar Portable Soundbar to various motorcycle handlebars, ensuring a stable and reliable mounting solution for your audio system.

Please read this manual thoroughly before installation to ensure correct assembly and to maximize the performance and longevity of your mount kit.

PRODUCT OVERVIEW

Key Features

- **Secure Quick-Detach Cam-Lock Mounts:** Allows for easy, tool-free removal and attachment of the WanderBar soundbar.
- **Versatile Handlebar Compatibility:** Includes clamps to fit 7/8", 1", 1-1/4", and 1-1/2" handlebars or tubing.
- **Integrated 12V Power Wiring Harness:** Provides constant power and charging to the WanderBar speaker, maintaining its IP65 rating when connected.
- **Comprehensive Mounting Hardware:** Supplied with a variety of brackets and clamps to accommodate diverse handlebar configurations.

What's in the Box

The Kuryakyn 2722 Motorcycle Mount Kit includes all necessary components for installation. Refer to the image below for a visual representation of the included parts:



Image: All components included in the Kuryakyn 2722 Motorcycle Mount Kit. This includes the main mounting arms, various size handlebar clamps, a 12V power wiring harness with fuses, and additional hardware like screws and spacers.

- Main Mounting Arms (2)
- Handlebar Clamps (multiple sizes: 7/8", 1", 1-1/4", 1-1/2")
- 12V Power Wiring Harness with Connector and Fuses
- Assorted Brackets, Spacers, and Fasteners
- Cable Ties

SETUP AND INSTALLATION

Before beginning installation, ensure your motorcycle is stable and turned off. Gather all components and necessary tools. It is recommended to have basic mechanical knowledge for this installation.

Tools Required

- Hex Key Set (Allen wrenches)
- Wrench Set
- Wire Strippers/Crimpers (for power harness)
- Multimeter (optional, for verifying power connections)

Installation Steps

1. **Select Appropriate Clamps:** Identify the correct size handlebar clamps (7/8", 1", 1-1/4", or 1-1/2") that match your motorcycle's handlebar diameter.
2. **Attach Clamps to Handlebars:** Position the selected clamps on your handlebars where you intend to mount the WanderBar. Ensure they are evenly spaced and do not interfere with controls or gauges. Securely tighten the clamp bolts, but do not overtighten.

3. **Assemble Mounting Arms:** Attach the main mounting arms to the handlebar clamps using the provided hardware. Adjust the angle and position of the arms to ensure the WanderBar will sit level and clear of other components.
4. **Connect Power Harness:** Route the 12V power wiring harness from the mounting location to a suitable 12V power source on your motorcycle (e.g., battery, accessory circuit). Ensure the wiring is safely routed away from hot or moving parts and secured with cable ties. Connect the red wire to the positive (+) terminal and the black wire to the negative (-) or ground terminal. Install the inline fuse as directed.
5. **Attach WanderBar to Mount:** Align the WanderBar Portable Soundbar with the cam-lock mounts on the main mounting arms. Press firmly until the cam-locks engage, securing the soundbar in place.
6. **Connect Power to WanderBar:** Plug the connector from the 12V power wiring harness into the corresponding port on the WanderBar soundbar.
7. **Final Adjustments and Security Check:** Verify that all bolts and fasteners are securely tightened. Gently attempt to move the mounted WanderBar to ensure it is stable and does not wobble. Check for any interference with steering or controls.



Image: The Kuryakyn WanderBar Portable Soundbar securely mounted on motorcycle handlebars using the Kuryakyn 2722 Mount Kit. The soundbar is positioned above the instrument cluster, demonstrating a typical installation.

OPERATION

The Kuryakyn 2722 Motorcycle Mount Kit is a passive component designed to hold the WanderBar Portable Soundbar. Its primary operation involves the secure attachment and detachment of the soundbar.

- **Attaching the Soundbar:** Align the WanderBar with the cam-lock mounts and press firmly until it clicks into place. Ensure both sides are fully engaged.
- **Detaching the Soundbar:** To remove the WanderBar, disengage the cam-locks (refer to WanderBar manual for specific release mechanism) and lift the soundbar from the mount.
- **Power Connection:** Once the WanderBar is connected to the 12V power harness, it will receive continuous power

for charging and operation while the motorcycle is running.

MAINTENANCE

Regular maintenance will help ensure the longevity and safe operation of your Kuryakyn 2722 Motorcycle Mount Kit.

- **Periodic Inspection:** Regularly check all fasteners (bolts, screws) for tightness, especially after initial installation and after riding on rough terrain. Vibration can cause fasteners to loosen over time.
- **Cleaning:** Clean the mount kit components with a soft, damp cloth. Avoid abrasive cleaners or solvents that could damage the finish.
- **Wiring Check:** Periodically inspect the 12V power wiring harness for any signs of wear, fraying, or damage. Ensure connections remain secure.
- **Cam-Lock Functionality:** Ensure the cam-lock mechanisms operate smoothly and securely engage the WanderBar. Keep them free of dirt and debris.

TROUBLESHOOTING

If you encounter issues with your Kuryakyn 2722 Motorcycle Mount Kit, refer to the following common problems and solutions:

Problem	Possible Cause	Solution
Mount feels loose or wobbles.	Loose fasteners; incorrect clamp size; improper installation.	Ensure all bolts on handlebar clamps and mounting arms are securely tightened. Verify that the correct handlebar clamp size was used for your specific handlebar diameter. Re-read installation steps to ensure proper assembly.
WanderBar does not securely attach to cam-locks.	Debris in cam-lock mechanism; misalignment; damaged cam-lock.	Inspect cam-locks for any obstructions and clean if necessary. Ensure the WanderBar is correctly aligned before pressing into the mounts. If damaged, contact Kuryakyn support for replacement parts.
WanderBar not receiving power from harness.	Blown fuse; loose wiring connection; incorrect wiring.	Check the inline fuse in the power harness and replace if blown. Verify all wiring connections are secure at both the motorcycle power source and the WanderBar. Ensure correct polarity (+ to + and - to -) during wiring.

SPECIFICATIONS

Model Number	2722
Mounting Type	Handlebar Mount

Material	Aluminum
Compatible Handlebar Sizes	7/8", 1", 1-1/4", 1-1/2"
Compatible Device	Kuryakyn WanderBar Portable Soundbar
Power Input	12 Volts (via included wiring harness)
Item Weight	1.62 pounds (approx.)
Product Dimensions	8.5 x 8 x 2.4 inches (approx.)

WARRANTY AND SUPPORT

Limited Warranty

The Kuryakyn 2722 Motorcycle Mount Kit is covered by a limited warranty. For specific terms and conditions of the warranty, please refer to the warranty information provided with your purchase or visit the official Kuryakyn website.

Customer Support

For technical assistance, troubleshooting beyond this manual, or warranty claims, please contact Kuryakyn customer service. Contact information can typically be found on the Kuryakyn official website or on your product packaging.
Note: Always refer to the latest information available on the manufacturer's official website for the most up-to-date support and warranty details.

© 2024 Kuryakyn. All rights reserved.
Kuryakyn and WanderBar are trademarks of Kuryakyn Holdings, LLC.

ASK A QUESTION ABOUT THIS MANUAL

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question and use this page's manual context to help answer it.

Name

Anonymous

Email

you@example.com

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. [Privacy details](#).

Question

Example: How do I reset this device or fix this error?

Details

Model number, symptoms, what you tried, or the section of the manual you are using.

Submit question