

## Kuryakyn 2721

# Kuryakyn MTX WanderBar 2721 Portable Weather-Resistant Soundbar Instruction Manual

Model: 2721

## INTRODUCTION

This manual provides detailed instructions for the installation, operation, and maintenance of your Kuryakyn MTX WanderBar 2721 Portable Weather-Resistant Soundbar. The WanderBar is designed to deliver high-quality audio in various environments, featuring Bluetooth connectivity, an integrated task light, and a USB charging port. It incorporates an integrated Digital Signal Processor (DSP) for optimal performance and is built with all-weather IP65 construction. Please read this manual thoroughly before using the product to ensure proper function and longevity.

## SAFETY INFORMATION

**WARNING:** This product can expose you to chemicals including Lead and Lead Compounds, which are known to the State of California to cause cancer and birth defects or other reproductive harm. For more information, go to [www.P65Warnings.ca.gov](http://www.P65Warnings.ca.gov).

- Always ensure the soundbar is securely mounted when used on a vehicle to prevent detachment during operation.
- Do not submerge the soundbar in water, despite its weather-resistant rating. The IP65 rating indicates resistance to dust and low-pressure water jets, not submersion.
- Keep the USB charging port cover securely closed when not in use to maintain weather resistance.
- Avoid operating the soundbar at excessively high volumes for prolonged periods to prevent hearing damage.

## PACKAGE CONTENTS

Verify that all items are present in the package:

- Kuryakyn MTX WanderBar 2721 Soundbar
- USB Wall Charger
- USB Charging Cable



Image: The Kuryakyn MTX WanderBar 2721, showing the main unit, a USB wall charger, and a USB charging cable. These are the primary components included in the package.

## SETUP

### Charging the Battery

1. Locate the charging port on the WanderBar, typically protected by a rubber cover on one end.
2. Open the rubber cover and connect the provided USB charging cable to the soundbar.
3. Connect the other end of the USB cable to the included USB wall charger.
4. Plug the wall charger into a standard electrical outlet.
5. The LED indicators on the soundbar will show charging status. A full charge provides approximately 6 hours of playback at 50% volume.
6. Once fully charged, disconnect the cable and securely close the rubber cover to maintain weather resistance.

### Mounting (Optional)

The WanderBar can be mounted on various recreational vehicles such as motorcycles, side-by-sides, or ATVs using compatible mounting kits (sold separately). Refer to the specific mounting kit instructions for detailed installation procedures and hardware requirements.



Image: The Kuryakyn MTX WanderBar 2721 shown mounted on the roll cage of a utility terrain vehicle (UTV), illustrating a typical vehicle installation using a separate mounting kit.

## OPERATING INSTRUCTIONS

### Control Panel Overview



Image: A detailed view of the control panel on the Kuryakyn MTX WanderBar 2721, showing buttons for power, Bluetooth pairing, volume control, track navigation, play/pause, and task light activation.

### Power On/Off

- To power on, press and hold the **Power button** until the unit activates.
- To power off, press and hold the **Power button** until the unit shuts down.

## Bluetooth Pairing

1. Ensure the WanderBar is powered on.
2. Press the **Bluetooth button** to enter pairing mode. The Bluetooth indicator light will flash.
3. On your mobile device (smartphone, tablet, etc.), enable Bluetooth and search for available devices.
4. Select "WanderBar" from the list of devices.
5. Once paired, the Bluetooth indicator light will become solid.

## Audio Playback

- Use the **Volume Up (+)** and **Volume Down (-)** buttons to adjust the audio level.
- Press the **Play/Pause button** to start or pause playback.
- Use the **Next Track (>)** and **Previous Track (<)** buttons to navigate through your music.

## Task Light Operation

- Press the **Light button** to turn the 100-lumen task light on or off.
- The task light is located on one end of the soundbar.

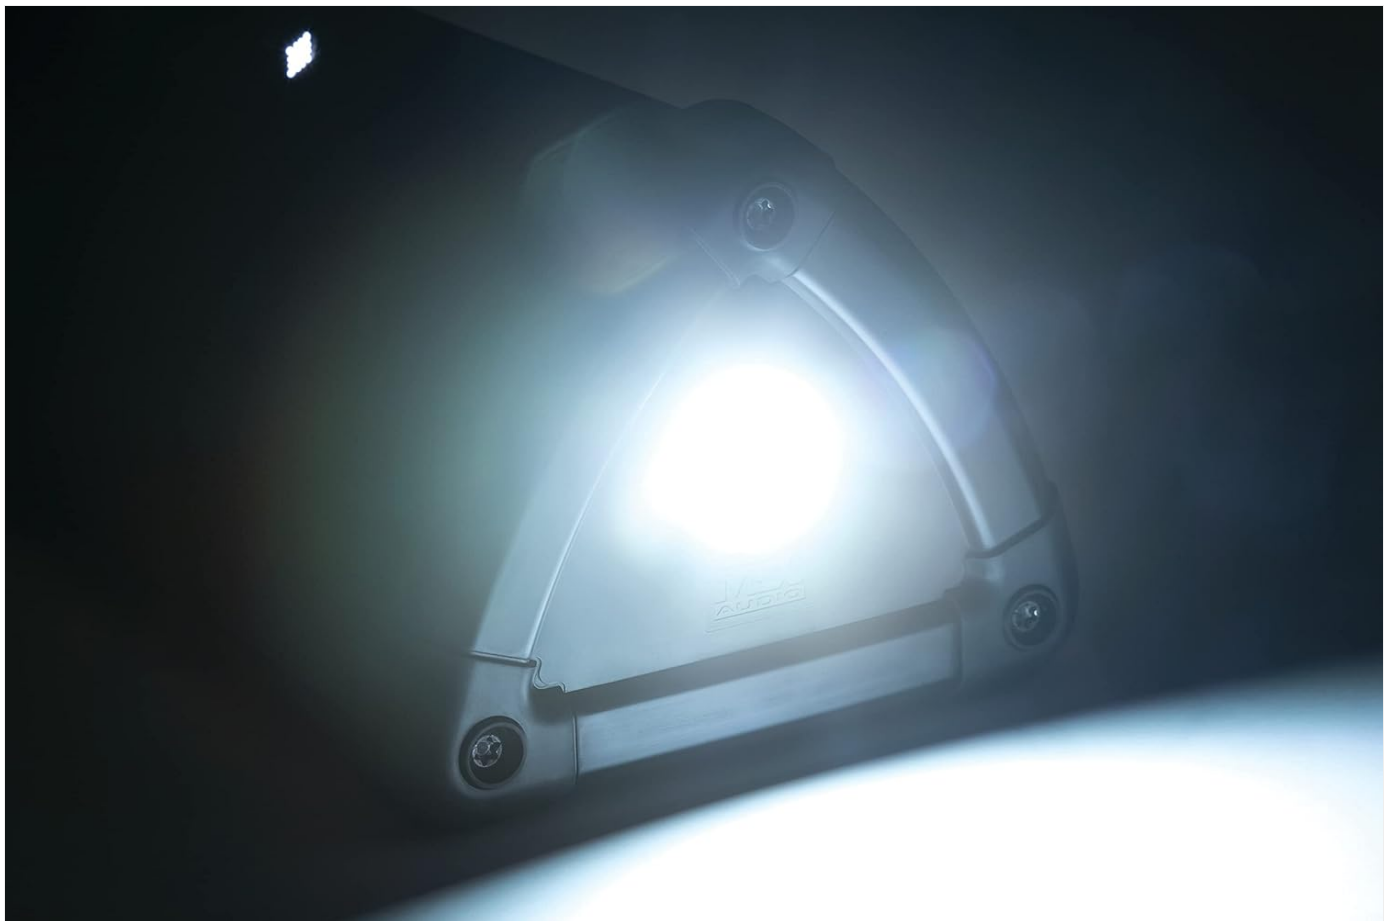


Image: The Kuryakyn MTX WanderBar 2721 with its integrated task light illuminated, demonstrating its functionality as a light source.

## USB Charging Port

- The integrated USB port can be used to charge external devices like smartphones.
- Open the protective rubber cover on the end of the soundbar and connect your device's USB charging cable to the WanderBar's USB port.
- Close the cover securely after use to maintain weather resistance.

## MAINTENANCE

- **Cleaning:** Wipe the soundbar with a soft, damp cloth. Do not use harsh chemicals or abrasive cleaners, as these may damage the finish or weather seals.
- **Weather Resistance:** Ensure all rubber covers for ports are securely closed when not in use to maintain the IP65 weather-resistant rating. Regularly inspect these covers for wear or damage.
- **Storage:** Store the WanderBar in a cool, dry place when not in use for extended periods. Avoid extreme temperatures.
- **Battery Care:** For optimal battery life, avoid fully discharging the battery frequently. Charge the unit regularly, even if not in constant use, to maintain battery health.

TROUBLESHOOTING

| Problem                                        | Possible Cause                                                                                                       | Solution                                                                                                                                                                                             |
|------------------------------------------------|----------------------------------------------------------------------------------------------------------------------|------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
| No power                                       | Battery discharged                                                                                                   | Charge the WanderBar using the provided USB cable and wall charger.                                                                                                                                  |
| Cannot pair via Bluetooth                      | Bluetooth not enabled on device; WanderBar not in pairing mode; Device too far; Previously paired device interfering | Ensure Bluetooth is enabled on your device. Press the Bluetooth button on the WanderBar to enter pairing mode. Move device closer to the WanderBar. Disconnect from other Bluetooth devices.         |
| No sound                                       | Volume too low; Device not connected; Audio source paused; Incorrect audio output selected on device                 | Increase volume on WanderBar and connected device. Verify Bluetooth connection. Check if audio playback is paused on your device. Ensure "WanderBar" is selected as the audio output on your device. |
| Task light not working                         | Light off; Battery low; Malfunction                                                                                  | Press the Light button. Charge the WanderBar battery. If the issue persists, contact customer support.                                                                                               |
| USB charging port not charging external device | WanderBar battery low; Cable issue; Device incompatibility                                                           | Ensure the WanderBar has sufficient battery charge. Try a different USB cable. Verify device compatibility with USB charging.                                                                        |

SPECIFICATIONS

|                         |                       |
|-------------------------|-----------------------|
| Model Name              | WanderBar             |
| Model Number            | 2721                  |
| Speaker Type            | Soundbar, Woofer      |
| Dimensions (D x W x H)  | 4" x 5" x 14"         |
| Weight                  | 6.44 pounds           |
| Connectivity Technology | Bluetooth             |
| Power Source            | Battery Powered       |
| Battery Life (approx.)  | 6 hours at 50% volume |

|                                |                                                                    |
|--------------------------------|--------------------------------------------------------------------|
| Weather Resistance             | IP65 Rated (Dust tight, protected against low-pressure water jets) |
| Task Light Output              | 100 Lumens                                                         |
| Amplifier                      | 2 x 27W RMS, 2 x 35W Dynamic                                       |
| Speakers                       | Two 2"x 3.2" neodymium woofers, Four 1" teteron dome tweeters      |
| Passive Radiators              | Dual (2) 2.25" x 3.6"                                              |
| Digital Signal Processor (DSP) | Integrated                                                         |
| UPC                            | 191209040888                                                       |

## WARRANTY INFORMATION

The Kuryakyn MTX WanderBar 2721 comes with a Limited Warranty. For specific terms and conditions, including coverage details and duration, please refer to the warranty card included with your product or visit the official Kuryakyn website. Keep your proof of purchase for all warranty claims.

## SUPPORT

For technical assistance, troubleshooting beyond this manual, or inquiries regarding parts and accessories, please contact Kuryakyn customer support. Visit the official Kuryakyn website for contact information and additional resources.

**Online Resources:** [www.kuryakyn.com](http://www.kuryakyn.com)

## ASK A QUESTION ABOUT THIS MANUAL

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question and use this page's manual context to help answer it.

### Name

Anonymous

### Email

you@example.com

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. [Privacy details](#).

### Question

Example: How do I reset this device or fix this error?

### Details

Model number, symptoms, what you tried, or the section of the manual you are using.

Submit question