

## Manuals+

[Q & A](#) | [Deep Search](#) | [Upload](#)

manuals.plus /

- › [Cirbic](#) /
- › [Cirbic H21 Golden Talking Watch Instruction Manual](#)

## Cirbic H21

# Cirbic H21 Golden Talking Watch Instruction Manual

Model: H21 | Brand: Cirbic

[Product Overview](#)

[Setup](#)

[Operation](#)

[Maintenance](#)

[Troubleshooting](#)

[Specifications](#)

[Warranty & Support](#)

## 1. PRODUCT OVERVIEW

The Cirbic H21 Golden Talking Watch is designed to assist individuals who are blind or visually impaired, as well as the elderly. It features a clear North American male voice that announces the time and date, along with large, easy-to-read numbers on an analog display. The watch is equipped with a comfortable expanding stainless steel strap.





Figure 1: Front view of the Cirbic H21 Golden Talking Watch.

## 2. SETUP: SETTING TIME AND DATE

To ensure accurate time and date announcements, follow these steps to set up your Cirbic H21 Talking Watch. A pen or a similar pointed object will be needed to press the recessed buttons.

1. **Wake Up the Watch:** If the watch is not responding, press and hold the top-right button (typically the 2 o'clock position) for 3 seconds to wake it up. The watch hands will start moving.
2. **Enter Setting Menu:** Use a pen or pointed object to press and hold the bottom-right button (typically the 4 o'clock position) for 3 seconds until the watch announces "Set Time".
3. **Set Hour:** Press the top-right button (2 o'clock position) repeatedly to advance the hour. Listen carefully for AM/PM announcements.
4. **Confirm Hour:** Once the correct hour (including AM/PM) is announced, press the bottom-right button (4 o'clock position) once to confirm and move to setting the minute.

5. **Set Minute:** Press the top-right button (2 o'clock position) repeatedly to advance the minute.
6. **Confirm Minute:** Once the correct minute is announced, press the bottom-right button (4 o'clock position) once to confirm and move to setting the year.
7. **Set Year:** Press the top-right button (2 o'clock position) repeatedly to advance the year.
8. **Confirm Year:** Press the bottom-right button (4 o'clock position) once to confirm and move to setting the month.
9. **Set Month:** Press the top-right button (2 o'clock position) repeatedly to advance the month.
10. **Confirm Month:** Press the bottom-right button (4 o'clock position) once to confirm and move to setting the day.
11. **Set Day:** Press the top-right button (2 o'clock position) repeatedly to advance the day.
12. **Confirm Day:** Press the bottom-right button (4 o'clock position) once to confirm and exit the setting menu. The watch will announce "It's set".

Your browser does not support the video tag.

Video 1: Demonstrates how to set the time and date on the talking watch using the side buttons.

## 3. OPERATION

### 3.1 Announcing the Time

To hear the current time announced, simply press the top-right button (2 o'clock position) once. The clear North American male voice will state the current time, including AM or PM.

### 3.2 Announcing the Date

To hear the current date announced, press the top-right button (2 o'clock position) twice in quick succession. The watch will announce the day of the week, month, and date.

### 3.3 Setting the Alarm

The watch also features an alarm function. To set the alarm:

1. **Enter Alarm Setting:** Press the bottom-right button (4 o'clock position) repeatedly until the watch announces "Set Alarm".
2. **Set Alarm Hour:** Press the top-right button (2 o'clock position) to adjust the alarm hour. Listen for AM/PM.
3. **Confirm Alarm Hour:** Press the bottom-right button (4 o'clock position) to confirm the hour.
4. **Set Alarm Minute:** Press the top-right button (2 o'clock position) to adjust the alarm minute.
5. **Confirm Alarm Minute:** Press the bottom-right button (4 o'clock position) to confirm the minute. The watch will announce "Alarm On" or "Alarm Off".
6. **Toggle Alarm On/Off:** Press the top-right button (2 o'clock position) to toggle the alarm between "Alarm On" and "Alarm Off".
7. **Exit Alarm Setting:** Press the bottom-right button (4 o'clock position) to exit the alarm setting mode.

## 4. MAINTENANCE

### 4.1 Battery Replacement

The Cirbic H21 watch is powered by a standard watch battery. When the voice function becomes weak or the watch stops working, it's time to replace the battery. It is recommended to have a professional watch technician replace the battery to avoid damaging the watch's internal components or compromising its water resistance.

## 4.2 Water Resistance

This watch has a water resistance depth of 100 meters. It is suitable for everyday use and can withstand splashes or brief immersion in water. However, it is not recommended for swimming, diving, or prolonged water activities. Avoid pressing buttons while the watch is wet to prevent water ingress.

## 4.3 General Care

- Clean the watch regularly with a soft, dry cloth.
- Avoid exposing the watch to extreme temperatures or direct sunlight for extended periods.
- Keep the watch away from strong magnetic fields.

## 5. TROUBLESHOOTING: HANDS ALIGNMENT

If the analog hands of your watch do not match the announced time, or after a battery replacement, you may need to perform a hands alignment. This process synchronizes the physical hands with the internal talking time.

1. **Check Current Time:** Press the top-right button (2 o'clock position) once to hear the current talking time. Note this time.
2. **Pull Out Crown:** Gently pull out the crown (the middle knob on the side) to stop the watch hands.
3. **Align Hands to 12 o'clock:** Turn the crown to manually adjust the hour and minute hands so that both point directly at the 12 o'clock position.
4. **Push In Crown:** Once both hands are at 12 o'clock, push the crown back in. The watch hands will start moving again.
5. **Synchronize Talking Time:** Press and hold the top-right button (2 o'clock position) for approximately 5 seconds. The watch hands will spin rapidly to catch up and synchronize with the internal talking time. This may take some time.
6. **Verify Alignment:** Once the hands stop spinning and the watch resumes normal running, press the top-right button (2 o'clock position) to confirm that the analog time now matches the announced time.

Your browser does not support the video tag.

Video 2: Demonstrates the process of aligning the watch hands with the talking time, particularly useful after a battery change or if hands are misaligned.

## 6. SPECIFICATIONS

Feature	Detail
Brand	Cirbic
Model Name	H21
Display Type	Analog
Watch Movement	Quartz

Power Source	Battery Powered
Band Material	Alloy Steel
Case Material	Stainless Steel
Water Resistance Depth	100 Meters
Band Color	Gold
Dial Color	White
Item Weight	3.53 ounces
Package Dimensions	5.67 x 2.2 x 1.34 inches



Figure 2: Rear view of the Cirbic H21 Golden Talking Watch, highlighting the case back details.

## 7. WARRANTY & SUPPORT

For any questions, concerns, or warranty claims regarding your Cirbic H21 Golden Talking Watch, please refer to the contact information provided with your purchase documentation. You may also visit the official Cirbic website for further support and frequently asked questions.

Ensure to keep your proof of purchase for warranty validation.

