

Manuals+

[Q & A](#) | [Deep Search](#) | [Upload](#)

manuals.plus /

- › [Enigma](#) /
- › [Enigma V8 Cordless Vacuum Cleaner User Manual](#)

Enigma V8

Enigma V8 Cordless Vacuum Cleaner User Manual

Model: V8 | Brand: Enigma

1. INTRODUCTION

Thank you for choosing the Enigma V8 Cordless Vacuum Cleaner. This 3-in-1 versatile cleaning solution is designed for efficient cleaning of hard floors, carpets, and various surfaces in your home or car. Its lightweight and compact design, combined with a powerful 22.2V Lithium-Ion battery, offers convenience and strong suction performance. Please read this manual thoroughly before operating the appliance to ensure safe and optimal use.



Image 1.1: The Enigma V8 Cordless Vacuum Cleaner in its full upright configuration, showcasing its sleek design and blue accents.

2. IMPORTANT SAFETY INSTRUCTIONS

When using electrical appliances, basic precautions should always be followed, including the following:

- Read all instructions before using this appliance.
- Do not use outdoors or on wet surfaces.
- Do not allow to be used as a toy. Close attention is necessary when used by or near children.
- Use only as described in this manual. Use only manufacturer's recommended attachments.
- Do not use with damaged cord or plug. If appliance is not working as it should, has been dropped, damaged, left outdoors, or dropped into water, return it to a service center.
- Do not pull or carry by cord, use cord as a handle, close a door on cord, or pull cord around sharp edges or corners. Do not run appliance over cord. Keep cord away from heated surfaces.
- Do not unplug by pulling on cord. To unplug, grasp the plug, not the cord.
- Do not handle plug or appliance with wet hands.
- Do not put any object into openings. Do not use with any opening blocked; keep free of dust, lint, hair, and anything that may reduce air flow.
- Keep hair, loose clothing, fingers, and all parts of body away from openings and moving parts.
- Do not pick up anything that is burning or smoking, such as cigarettes, matches, or hot ashes.
- Do not use to pick up flammable or combustible liquids, such as gasoline, or use in areas where they may be present.
- Do not use without dust bag and/or filters in place.
- Turn off all controls before unplugging.
- Use extra care when cleaning on stairs.
- Do not use to pick up hard or sharp objects such as glass, nails, screws, coins, etc.
- Prevent unintentional starting. Ensure the switch is in the off-position before connecting to battery pack, picking up or carrying the appliance.
- Recharge only with the charger specified by the manufacturer.

3. PACKAGE CONTENTS

Please check the box for the following components:

- Main Vacuum Unit (Motor & Dustbin)
- Extension Tube
- Motorised Turbo Brush Head with LED light
- Crevice Tool
- 2-in-1 Brush Tool
- Wall Mount Bracket
- Power Adapter/Charger
- User Manual

4. PRODUCT OVERVIEW

Familiarize yourself with the main components of your Enigma V8 vacuum cleaner.



Image 4.1: Detailed view of the main vacuum unit, showing the handle, power buttons, and transparent dustbin.



Image 4.2: The motorized turbo brush head, highlighting its LED lights for illuminating dark areas and the removable roller for easy cleaning.

- **Main Unit:** Contains the motor, dustbin, and control panel.
- **Extension Tube:** Connects the main unit to the floor brush for upright cleaning.
- **Motorised Turbo Brush Head:** Features a spinning brush and LED lights for effective cleaning on various floor types.
- **Dustbin:** Transparent container for collecting dust and debris.
- **HEPA Filter:** Located inside the dustbin, captures fine particles.

5. SETUP

5.1 Assembly

1. **Upright Mode:** Insert the extension tube into the main vacuum unit until it clicks into place. Then, attach the

motorized turbo brush head to the other end of the extension tube, ensuring it clicks securely.

2. **Handheld Mode:** For handheld use, attach the crevice tool or 2-in-1 brush tool directly to the main vacuum unit.

5.2 Initial Charging

Before first use, fully charge the vacuum cleaner. Connect the power adapter to the charging port on the main unit and plug it into a wall outlet. The battery indicator lights will show the charging status. A full charge typically takes several hours.

6. OPERATING INSTRUCTIONS

6.1 Powering On/Off and Mode Selection

Press the power button on the main unit to turn the vacuum on. The vacuum will typically start in Eco Mode. Press the mode selection button to switch between Eco Mode (for longer runtime and lighter cleaning) and Max Mode (for maximum suction power on tougher messes).

6.2 Cleaning Surfaces

- **Hard Floors:** The motorized turbo brush head is effective on hard floors, with LED lights illuminating dust and debris.
- **Carpets:** The turbo brush head's spinning action helps agitate and lift dirt from carpets.
- **Pet Hair:** The powerful suction and brush head are designed to pick up pet hair efficiently.
- **Handheld Use:** Use the crevice tool for narrow spaces and corners, and the 2-in-1 brush tool for upholstery, car interiors, or delicate surfaces.



Image 6.1: The Enigma V8 being used in handheld configuration, demonstrating its versatility for cleaning hard-to-reach areas like stairs.



Image 6.2: The motorized turbo brush head in action, with its integrated LED lights clearly showing dust and debris on a hard floor surface.

7. MAINTENANCE

Regular maintenance ensures optimal performance and extends the life of your vacuum cleaner.

7.1 Emptying the Dustbin

Empty the dustbin regularly, especially when the debris reaches the 'MAX' line. To empty, detach the dustbin from the main unit (refer to product diagram for release button), open the bottom flap over a trash can, and shake out the contents.



Image 7.1: Demonstrating the easy dustbin emptying process, where collected debris falls directly into a waste receptacle.

7.2 Cleaning the Filters

The HEPA filter and mesh filter should be cleaned regularly (e.g., monthly, or more often with heavy use). Remove the filters from the dustbin and tap them gently to remove loose dust. For a deeper clean, rinse them under cold running water. Ensure filters are completely dry before reinserting them into the vacuum.

7.3 Cleaning the Brush Roll

Hair and debris can get tangled around the brush roll. To clean, detach the motorized turbo brush head. Locate the release mechanism for the brush roll (often a latch or screw) and remove it. Use scissors to cut away tangled hair and debris, then reinsert the brush roll securely.

8. TROUBLESHOOTING

Problem	Possible Cause	Solution
Vacuum does not turn on	Battery is low or depleted Power button not pressed correctly	Charge the battery fully Ensure power button is pressed firmly
Loss of suction	Dustbin is full Filters are clogged Hose/tube is blocked Brush roll is jammed	Empty the dustbin Clean or replace filters Check and clear any blockages Clean the brush roll

Problem	Possible Cause	Solution
Brush roll not spinning	Hair/debris tangled in brush roll Brush head not properly attached	Clean the brush roll Ensure brush head is securely attached
Short battery runtime	Battery not fully charged Using Max Mode excessively Battery degradation	Ensure battery is fully charged Use Eco Mode for general cleaning Contact customer support if battery life significantly decreases

9. SPECIFICATIONS

Feature	Detail
Model	V8
Voltage	22.2 Volts
Wattage	150 watts
Battery Type	Lithium Ion (6 cells included)
Run Time	Up to 45 minutes (in Eco Mode)
Weight	2.4 kg
Filter Type	HEPA
Special Features	Lightweight, Cordless Design, Energy efficient Eco Mode and Max mode, Motorised Turbo brush Head with LED light
Surface Recommendation	Hard Floor, Carpet

10. WARRANTY AND SUPPORT

For warranty information and customer support, please refer to the documentation provided with your purchase or contact the retailer/manufacturer directly. Keep your proof of purchase for any warranty claims.

