

[Manuals.plus](#) /

› [LELO](#) /

› LELO F1S V2 Pleasure Console Instruction Manual

LELO F1S V2

LELO F1S V2 Pleasure Console Instruction Manual

MODEL: F1S V2 | BRAND: LELO

This manual provides detailed instructions for the setup, operation, maintenance, and care of your LELO F1S V2 Pleasure Console. Please read thoroughly before first use.

What's Included

Your LELO F1S V2 package contains the following items:




Image: The LELO F1S V2 package contents, including the device, USB charging cord, warranty registration card, and instruction manual.

- LELO F1S V2 Pleasure Console
- USB Charging Cord
- Warranty Registration Card
- Detailed Instruction Manual

Setup

Charging Your Device

Before using your LELO F1S V2 for the first time, it must be fully charged. The device is locked for transportation and requires charging to unlock.

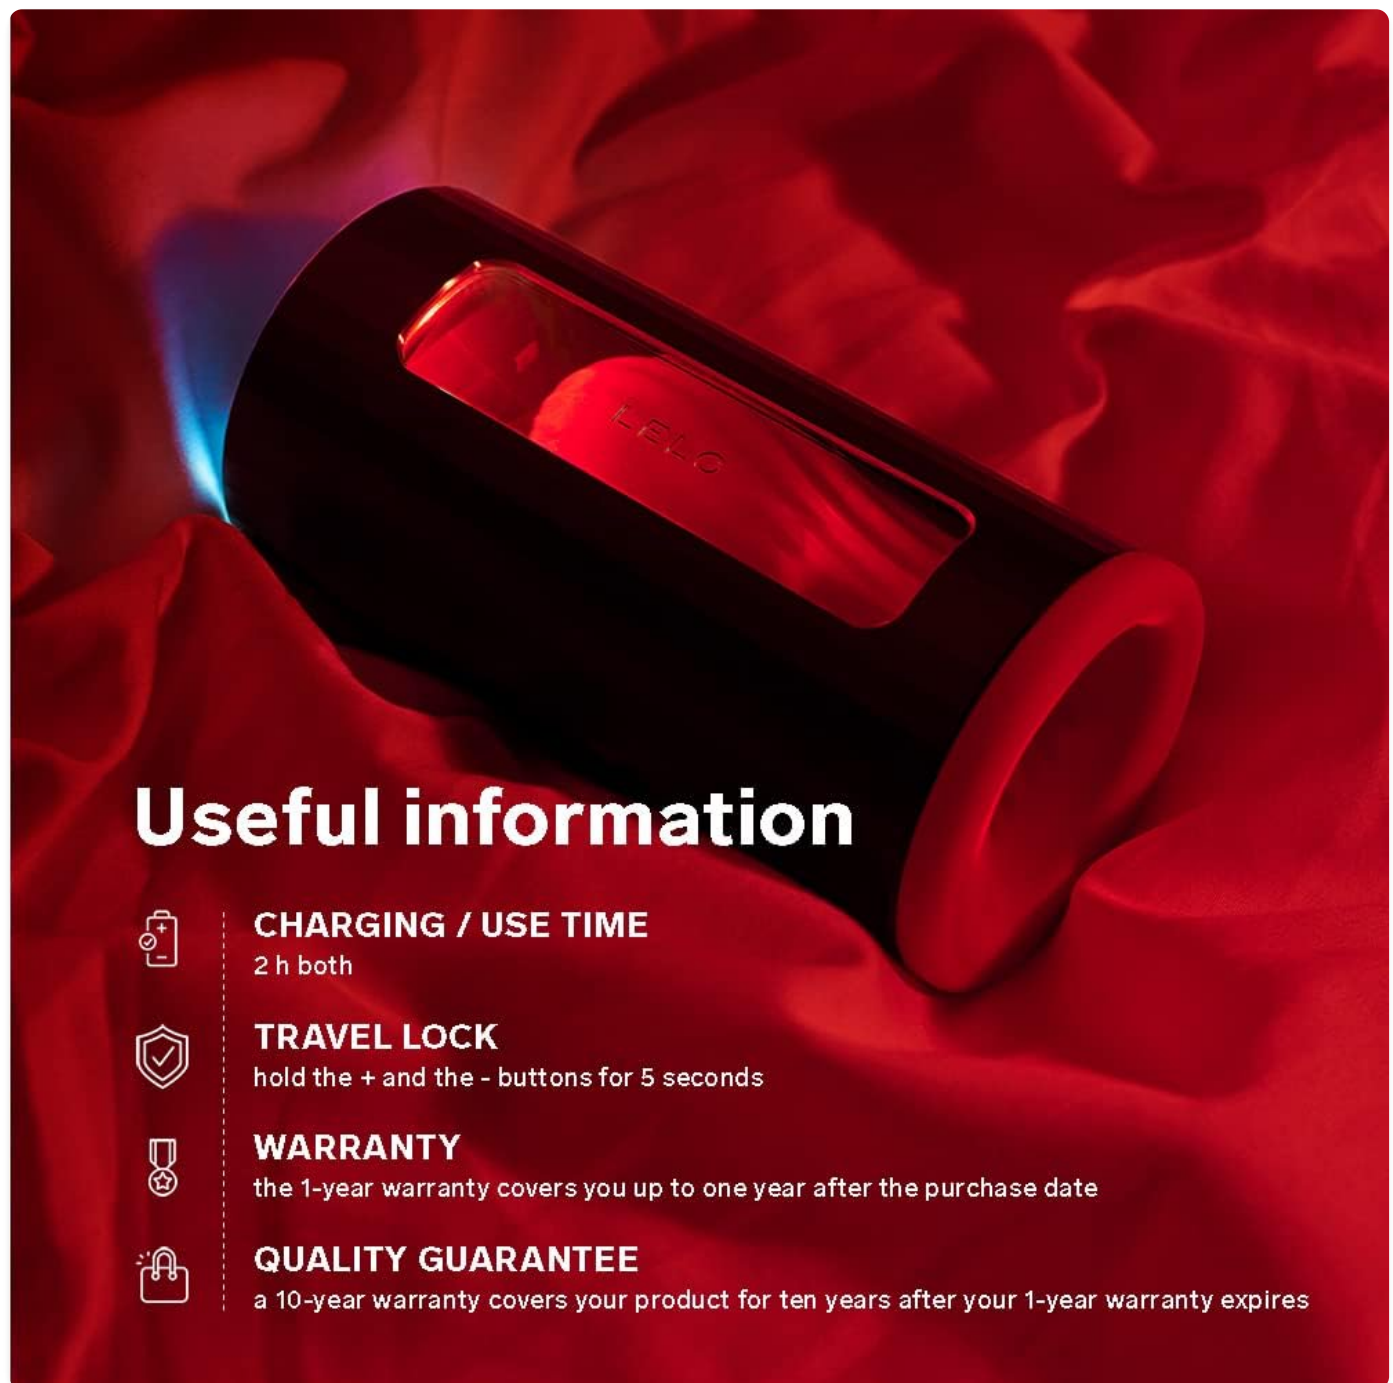

Useful information

-  **CHARGING / USE TIME**
2 h both
-  **TRAVEL LOCK**
hold the + and the - buttons for 5 seconds
-  **WARRANTY**
the 1-year warranty covers you up to one year after the purchase date
-  **QUALITY GUARANTEE**
a 10-year warranty covers your product for ten years after your 1-year warranty expires

Image: Visual guide showing the LELO F1S V2 and its charging cable, highlighting charging duration and cable usage.

1. Insert the small plug of the USB charging cord into the DC port located at the top of your F1S V2.
2. Insert the main USB plug into any standard USB port (e.g., computer, wall adapter).
3. The LED on the interface will pulse to indicate charging. When fully charged, the LED will emit a steady glow.
4. A full charge typically takes 2 hours. Always use the provided LELO charging cable to prevent battery damage. Do not leave the device charging overnight.
5. If the LED does not turn on immediately when connected, the battery may be completely empty. It may take a few minutes for the device to register the charge and for the LED to illuminate.
6. Once fully charged, disconnect the cable before powering on the device.

Unlocking and Locking for Travel

Your F1S V2 is locked for transportation. To unlock it after charging:

How to use

BEFORE THE FIRST USE

charge your F1S™ V2 for 2 hours

TO TURN IT ON

press the center button for 1 second

THE LED LIGHTS WILL BLINK

to show the battery level

THE LED LIGHTS WILL GO STEADY

showing the vibration level

TO ADJUST THE VIBRATION INTENSITY

press the + or – button

TO TURN IT OFF

press the center button for 3 seconds

APP-CONNECTED

connect your device to set up your pleasure on the LELO™ APP



Image: A hand demonstrating how to press the buttons on the LELO F1S V2 for operation.

- Hold down the '+' and '-' buttons simultaneously for 3 seconds until the lights turn on.
- To lock the device for travel, repeat the same procedure: hold down the '+' and '-' buttons simultaneously for 3 seconds.

Operating Your LELO F1S V2

The LELO F1S V2 can be used both independently or connected to the dedicated LELO app.

Using Without the App

1. To turn on: Press and hold the center button for 3 seconds.
2. To adjust vibration strength: Use the '+' and '-' buttons. Experiment to find your preferred intensity.
3. To switch vibration patterns: Use the middle button.
4. To turn off: Press and hold the center button for 3 seconds.

Using With the LELO App

The LELO F1S V2 app is compatible with both iOS and Android devices, offering enhanced control and features.

Your browser does not support the video tag. Please update your browser to view this content.

Video: An official instructional video demonstrating the features and usage of the LELO F1S V2, including app connectivity and cleaning.

1. Ensure Bluetooth is activated on your mobile phone.
2. Press the center button on your F1S V2 for 3 seconds to turn it on and activate its Bluetooth functionality.
3. Open the LELO F1S V2 app on your phone. Once the confirmation message appears, press the center button on the device to confirm the connection.
4. All LED lights on the device will go steady, indicating a successful connection.
5. If the connection fails, the device will automatically turn off after 30 seconds. Please try again.

App Features and Customization

- The app interface displays battery level and vibration strength.
- Navigate the app to set your preferences and explore various modes.
- Control both engines by increasing or decreasing their power.
- Switch between different vibration settings to find what feels best.
- The F1S V2 also features a stroke-controlled arcade game called COCKPIT. Choose the game from the menu and use your device to control the player, with each stroke activating shooting mode and direction translating to screen movement.

Initial Use and Application

For optimal experience, apply a generous amount of LELO Personal Moisturizer to the F1S V2 internal sleeve before use. The more moisturizer, the better the experience. Turn on the device and slowly insert yourself. The F1S V2 will begin working when it senses you are inside.

Technology Behind F1S V2

F1S V3 & F1S V3 XL

Check out the **LATEST** launched versions.



Image: Diagram illustrating the SenSonic and Cruise Control technologies within the LELO F1S V2.

The LELO F1S V2 incorporates two patented LELO technologies:

- **SenSonic™ Technology:** Emits powerful sonic waves that permeate deeply, resonating from all directions simultaneously.
- **Cruise Control™:** Detects any slowing down of the dual motors and boosts them back up, ensuring consistent power and intensity throughout use.

Maintenance and Storage

Proper cleaning and storage will ensure the longevity and hygiene of your LELO F1S V2.

Cleaning

- The F1S V2 is fully waterproof, making cleaning simple.
- Always clean the device thoroughly before and after each use.
- The safest method is to use LELO PREMIUM Cleaning Spray. Rinse the device, apply the spray, and then rinse again before allowing it to air dry.
- Alternatively, you can wash the silicone with warm water and antibacterial soap. Rinse with clean water and pat dry with a lint-free cloth or towel.
- Never use cleaners containing alcohol, petrol, or acetone, as these can damage the silicone.
- Although the F1S V2 is fully waterproof, always ensure the charging port is completely dry before its next use. The port is vacuum-sealed, so water damage is not a concern if properly dried.

Storage

After cleaning, store your LELO F1S V2 in a dry and safe place. Avoid exposure to any heat or direct sunlight.

Troubleshooting

- **Device not turning on:** Ensure the device is fully charged. If the battery is completely empty, it may take a few minutes of charging before the LED lights indicate activity.
- **Device not connecting to app:** Ensure Bluetooth is active on your phone and the device. If the connection fails, the device will automatically turn off after 30 seconds; try connecting again.
- **Device locked:** If the device is unresponsive, it may be in travel lock mode. Hold down the '+' and '-' buttons simultaneously for 3 seconds to unlock it.

Specifications

Feature	Detail
Model Name	F1S V2
Item Model Number	8359
Brand	LELO
Color	Red
Material	ABS Plastic, Silicone
Product Dimensions	5.63 x 2.8 x 2.8 inches
Weight	10.02 ounces
Batteries	1 Lithium Polymer battery required
Waterproof	Yes

Warranty and Support

LELO offers comprehensive support and warranty for your device:

- **1-Year Warranty:** If your LELO F1S V2 is faulty within 1 year of purchase, you may be eligible for a replacement product.
- **10-Year Quality Guarantee:** If your LELO F1S V2 is faulty more than 1 year after purchase, you can claim a 50% discount on your next purchase on LELO.com (limited for one-time use only, applicable to up to 5 items in a single order).

Register Your Device

To claim your warranty, you must register your product on [LELO.com](https://lelo.com). Click on 'REGISTER/LOG IN' at the top right-hand corner of the page. Once you create or log into your account, click 'Register Product' and fill in the requested details, including the serial number found on your Product Authenticity Card.

If you purchased your F1S V2 from a retailer, please retain your receipt for warranty purposes.

Contact Customer Service

For any further questions or support, feel free to contact LELO Customer Service at customercare@lelo.com.

Safety and Legal Information

Statements regarding this product have not been evaluated by the FDA and are not intended to diagnose, treat, cure, or prevent any disease or health condition. Always consult with a healthcare professional for any health concerns.

© 2025 LELO. All rights reserved.

ASK A QUESTION ABOUT THIS MANUAL

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question and use this page's manual context to help answer it.

Name

Email

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. [Privacy details](#).

Question

Details

Submit question

