

[Manuals.plus](#) /

› [ASHATA](#) /

› ASHATA Personal AM/FM Radio User Manual

ASHATA 753mtkn5d3zi8360-12

ASHATA Personal AM/FM Radio User Manual

Model: 753mtkn5d3zi8360-12

1. PRODUCT OVERVIEW

The ASHATA Personal AM/FM Radio is a compact, portable digital tuning stereo radio designed for on-the-go listening. Featuring an LCD display, rechargeable battery, and included earphones, it is suitable for various activities such as walking, gym workouts, and camping.

Key Features:

- **Compact and Portable Design:** Small size allows for easy carrying and flexible use in various environments.
- **FM Stereo Capability:** Enhances sound clarity, especially in noisy surroundings.
- **High Sensitivity and Selectivity:** Capable of receiving a wide range of broadcast signals globally.
- **Integrated Earphone and Lanyard:** Provides convenient and secure use.
- **Durable Construction:** Made from smooth and long-lasting ABS material.
- **Rechargeable Battery:** Built-in 500mAh battery for extended use.

Small in size

Small in size, can be carried around, and its flexibility in operation brings a lot of joyful in operation to users.



Image: The ASHATA Personal AM/FM Radio is shown resting in the palm of a hand, highlighting its compact and portable design, making it easy to carry for various activities.

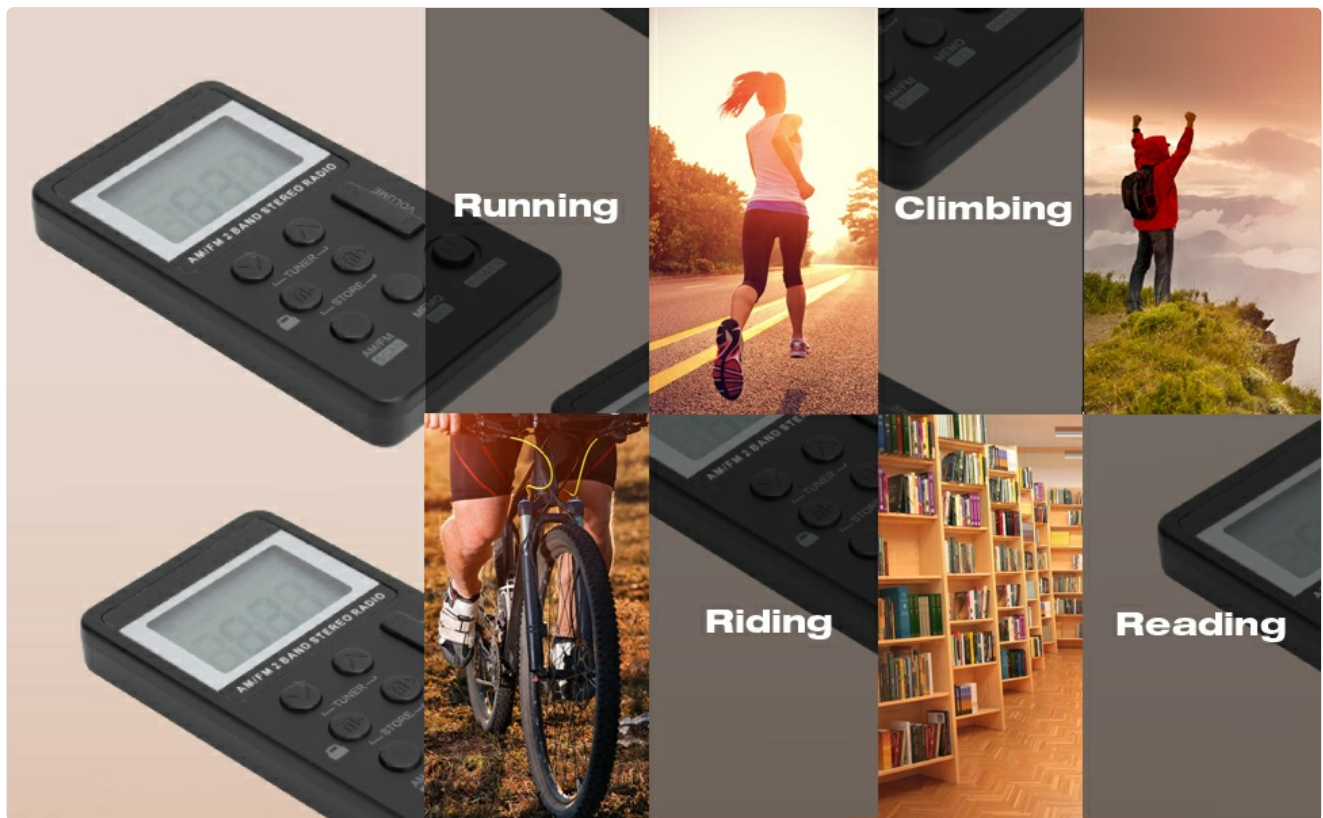


Image: A visual representation of the radio's versatility, showing it can be used during activities such as running, climbing, cycling, and reading, emphasizing its portability and suitability for an active lifestyle.

2. PACKAGE CONTENTS

Please check the package carefully to ensure all items are present and in good condition:

- ASHATA Personal AM/FM Radio (Silver)
- In-ear Earphones
- USB Charging Cable
- Lanyard
- Owner's Manual (this document)



Image: The ASHATA Personal AM/FM Radio is displayed alongside its accessories: a pair of in-ear earphones, a USB charging cable, and a lanyard, illustrating the complete package contents.

3. PRODUCT DIAGRAM AND CONTROLS

Familiarize yourself with the radio's buttons and ports for optimal use.



Image: A clear front view of the ASHATA Personal AM/FM Radio, displaying its LCD screen and the layout of its control buttons, including Power, Volume, Tuner, Store, Scan, and Memo/Del.



Image: A detailed close-up of the radio's control panel, showing the individual buttons for tuning, storing, scanning, and power, along with the volume slider, providing a clear view of each function label.

Button Functions:

Button/Control	Function
POWER	Press to turn the radio On or Off.
VOLUME +/-	Slide up or down to increase or decrease the volume.
TUNER (Up/Down Arrows)	Press to manually tune to the next or previous frequency.
STORE (M+/M-)	Press to store the current station or recall a stored station.
AM/FM SCAN	Press to switch between AM and FM bands. Long press to automatically scan and store available stations.
MEMO/DEL	Press to access memory functions. Long press to delete a stored station.

4. SETUP

4.1 Charging the Battery

The radio features a built-in 500mAh rechargeable battery. Before first use, it is recommended to fully charge the device.

1. Connect the small end of the included USB charging cable to the charging port on the radio.
2. Connect the standard USB end of the cable to a USB power adapter (not included) or a computer's USB port.
3. The LCD display will indicate charging status. Once fully charged, the charging indicator will change or turn off.
4. Disconnect the charging cable when charging is complete.



Image: The ASHATA Personal AM/FM Radio is shown alongside a graphic indicating its 500mAh rechargeable battery, emphasizing its power source and convenience.

4.2 Connecting Earphones

For personal listening, connect the included earphones to the 3.5mm audio jack on the radio. The earphones also function as the FM antenna.

1. Locate the 3.5mm audio jack on the side or top of the radio.
2. Insert the earphone plug firmly into the audio jack.
3. Ensure the earphones are properly seated for optimal sound quality and FM reception.

5. OPERATING INSTRUCTIONS

5.1 Power On/Off

- To turn on the radio, press the **POWER** button. The LCD display will light up and show the current frequency.
- To turn off the radio, press the **POWER** button again. The display will turn off.

5.2 Tuning Radio Stations (AM/FM)

- **Switching Bands:** Press the **AM/FM SCAN** button to toggle between AM and FM radio bands. The current band will be displayed on the LCD.
- **Manual Tuning:** Press the **TUNER** up or down arrow buttons to manually adjust the frequency in small increments.
- **Automatic Scan:** Long press the **AM/FM SCAN** button. The radio will automatically scan for and store all available strong stations in the current band.



Image: The ASHATA Personal AM/FM Radio (black model) is depicted with stylized sound waves, illustrating its FM stereo feature which provides enhanced audio clarity.

5.3 Adjusting Volume

- Slide the **VOLUME** control up to increase the volume.
- Slide the **VOLUME** control down to decrease the volume.

5.4 Storing and Recalling Presets

- **To Store a Station:**
 - a. Tune to the desired station.
 - b. Press the **STORE (M+)** button. The display will show a memory location number.
 - c. Use the **TUNER** buttons to select the desired memory preset number.
 - d. Press the **STORE (M+)** button again to confirm and save the station.
- **To Recall a Stored Station:**
 - a. Press the **STORE (M-)** button to enter memory recall mode.
 - b. Use the **TUNER** buttons to cycle through the stored preset stations.
 - c. The radio will automatically tune to the selected preset.
- **To Delete a Stored Station:**
 - a. Recall the station you wish to delete.
 - b. Long press the **MEMO/DEL** button until the station is removed from memory.

6. MAINTENANCE

6.1 Care and Cleaning

- Keep the radio dry. If it gets wet, wipe it dry immediately.
- Use a soft, dry cloth to clean the exterior of the radio. Do not use harsh chemicals, cleaning solvents, or strong detergents.
- Avoid exposing the radio to extreme temperatures, direct sunlight, or high humidity.
- Do not drop, knock, or shake the device, as this can damage internal components.
- Store the radio in a clean, dust-free environment when not in use.

7. TROUBLESHOOTING

7.1 Common Issues and Solutions

Problem	Possible Cause	Solution
Radio does not turn on.	Battery is depleted.	Charge the radio using the provided USB cable.
Poor radio reception.	Weak signal in the area; Earphones not properly connected (for FM).	Move to an area with better signal. Ensure earphones are fully plugged in, as they act as the FM antenna.
No sound from earphones.	Volume too low; Earphones not connected properly; Faulty earphones.	Increase volume. Re-insert earphones firmly. Try a different pair of 3.5mm earphones to check if the original pair is faulty.
Cannot store or delete stations.	Incorrect button sequence.	Refer to section 5.4 for correct procedures for storing and deleting presets.

8. SPECIFICATIONS

Feature	Detail
Brand	ASHATA
Model Number	753mtkn5d3zi8360-12
Tuner Technology	Digital Tuning, AM/FM
Frequency Range	AM: 522-1710 KHz, FM: 64-108 MHz

Feature	Detail
Display Type	LCD
Power Source	Battery Powered (Rechargeable)
Battery Capacity	500mAh (Built-in)
Audio Interface	3.5mm Audio Jack
Material	Acrylonitrile Butadiene Styrene (ABS)
Product Dimensions	1 x 1 x 1 cm
Product Weight	103 g
Color	Silver

9. WARRANTY INFORMATION

Specific warranty details for this product were not provided in the available information. Please refer to the product packaging or contact the manufacturer directly for warranty terms and conditions.

10. CUSTOMER SUPPORT

For technical assistance, troubleshooting, or general inquiries regarding your ASHATA Personal AM/FM Radio, please contact ASHATA customer support. Contact information was not provided in the available data. Please refer to the product packaging or the official ASHATA website for support channels.