



Manuals.plus /

› Speedypress /

› SpeedyPress 100HD Steam Press Instruction Manual

## Speedypress 100HD

# SpeedyPress 100HD Steam Press Instruction Manual

Model: 100HD

## 1. IMPORTANT SAFETY INSTRUCTIONS

---

Please read all instructions carefully before using the SpeedyPress 100HD Steam Press. Keep this manual for future reference.

- Always place the steam press on a stable, heat-resistant surface.
- Do not leave the appliance unattended while it is powered on or in use.
- Keep out of reach of children and pets.
- Use only distilled or demineralized water to prevent mineral buildup and prolong the life of the unit.
- Do not immerse the appliance in water or other liquids.
- Ensure the power cord is not damaged and is kept away from hot surfaces.
- Always unplug the steam press when filling the water tank, cleaning, or when not in use.
- Exercise caution when handling hot surfaces and steam to avoid burns.
- Utilize the safety locks to secure the press when not in operation.

## 2. PRODUCT OVERVIEW

---

The SpeedyPress 100HD is a professional-grade steam press designed for efficient and effective garment care. It features a large ironing surface, multiple steam settings, and a digital display for precise control.

### Key Features:

- **Powerful Steam Jets:** Ensures optimal heat distribution for wrinkle removal.
- **Extra Large 40" Ironing Surface:** Accommodates larger garments and fabrics, reducing ironing time.
- **Digital Display:** Easy-to-read interface for temperature and fabric settings.
- **Removable Water Tank with Water Filter:** Prevents scale buildup and allows for easy refilling.
- **Wide-Angle Opening:** Facilitates easy placement of garments and enhances safety.
- **Safety Locks:** Keeps the press securely closed when not in use.
- **Washable and Burn-Proof Cover:** Durable and easy to maintain.

# **SPEEDYPRESS COMMERCIAL GRADE 40" PRESS IRON STEAMER**

- The Professional Solution to Endless Ironing -



*Image 1: The SpeedyPress 100HD Steam Press, showcasing its large ironing surface and control panel.*

What's  
Inside?

**EXTRA LONG**   
**IRONING SURFACE**



Image 2: Diagram showing the removable water reservoir, anti-scale filter, and burnproof cover.



Image 3: Close-up of the digital display, non-stick heating plate, and safety locks.

### 3. SETUP

- 1. Unpack the Unit:** Carefully remove the SpeedyPress 100HD from its packaging. Retain all packaging materials for potential future transport or storage.
- 2. Placement:** Place the steam press on a sturdy, flat, and heat-resistant surface. Ensure there is adequate space around the unit for safe operation.
- 3. Fill Water Tank:**
  - Locate the removable water tank, typically found underneath the ironing surface.
  - Pull out the water tank. If a water filter is included, ensure it is properly installed within the tank.
  - Fill the tank with clean distilled or demineralized water. The tank capacity is approximately 23oz. Do not overfill.
  - Slide the filled water tank back into its position until it clicks securely.
- 4. Power Connection:** Plug the power cord into a grounded electrical outlet. The digital display should illuminate.

5. **Initial Heat-Up:** Allow the unit to heat up to the desired temperature. This may take a few minutes.

Your browser does not support the video tag.


*Video 1: This video demonstrates the setup process, including filling the water tank and preparing the press for use.*

## 4. OPERATING INSTRUCTIONS

The SpeedyPress 100HD offers intuitive controls for various fabric types and ironing needs.

### 4.1 Powering On and Setting Temperature

1. Press the **ON/OFF** button to power on the unit.
2. Use the **SELECT** button to cycle through different fabric modes (Nylon, Silk, Wool, Cotton, Linen). The digital display will show the corresponding temperature.
3. Allow the press to reach the selected temperature before use.

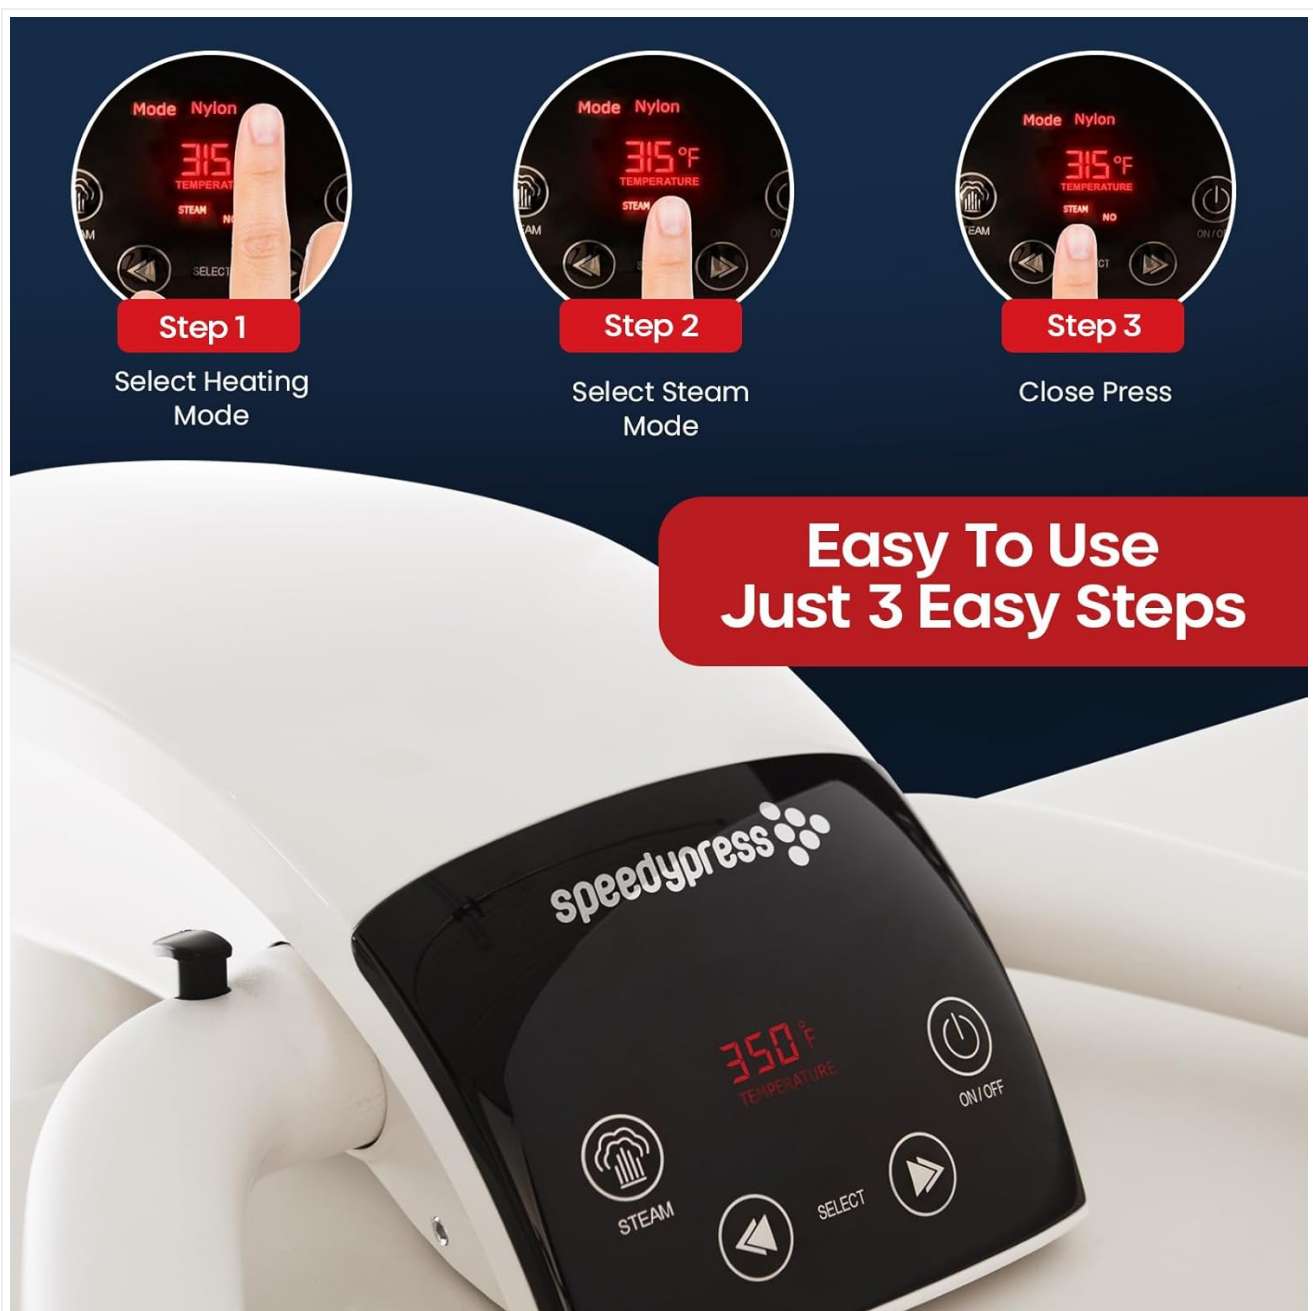

*Image 4: The control panel showing temperature and fabric selection buttons.*

### 4.2 Ironing Process

1. Place the garment flat on the ironing surface. Utilize the wide-angle opening for easy positioning.
2. Gently lower the upper plate onto the garment. The safety locks are designed to prevent accidental closure.
3. For steam, press the **STEAM** button. Hold the press down for approximately 5-10 seconds, depending on the fabric and wrinkle severity.
4. Lift the upper plate and reposition the garment as needed.
5. Repeat the process until the garment is wrinkle-free.



Image 5: Illustrates the wide opening angle and powerful steam jets for effective ironing.

### 4.3 Using the Sleeve Board (if applicable)

For sleeves, collars, and other small or intricate areas, the sleeve board attachment can be used. Slide the sleeve board onto the main ironing surface. Place the garment section over the sleeve board and press as usual.

## 5. MAINTENANCE

Regular maintenance ensures optimal performance and extends the lifespan of your SpeedyPress 100HD.

- **Cleaning the Ironing Surface:** Allow the unit to cool completely. Wipe the non-stick heating plate with a soft,

damp cloth. Do not use abrasive cleaners.

- **Cleaning the Water Tank:** Periodically remove and rinse the water tank. Ensure it is dry before refilling.
- **Water Filter Replacement:** The anti-scale water filter helps prevent mineral buildup. Replace the filter as recommended by the manufacturer or when you notice reduced steam output or mineral residue.
- **Cover Care:** The burn-proof cover is washable. Remove it from the ironing surface and wash according to its care instructions. Ensure it is dry before reattaching.
- **Storage:** When not in use, engage the safety locks and store the press in a cool, dry place.

## 6. TROUBLESHOOTING

---

Problem	Possible Cause	Solution
No power/Unit not turning on	Not plugged in; power outlet issue; unit malfunction.	Check power cord connection. Test outlet with another appliance. If problem persists, contact customer support.
No steam or low steam output	Water tank empty; water filter clogged; steam jets blocked; incorrect temperature setting.	Refill water tank. Clean or replace water filter. Clean steam jets. Ensure appropriate fabric setting is selected.
Water leaking from unit	Water tank not properly seated; overfilled water tank; damaged seal.	Ensure water tank is securely in place. Do not overfill. If leaking continues, contact customer support.
Garments not wrinkle-free	Incorrect temperature/steam setting; insufficient pressing time; fabric type.	Adjust temperature and steam settings according to fabric. Increase pressing duration. Some fabrics may require multiple presses.

## 7. SPECIFICATIONS

---

- **Model Number:** 100HD
- **Brand:** Speedypress
- **Product Dimensions:** 43 x 13 x 26 inches
- **Item Weight:** 40 pounds
- **Material:** Iron
- **Color:** Silver
- **Upper Temperature Rating:** 200 Degrees Celsius
- **Water Tank Capacity:** Approximately 23oz
- **UPC:** 195893229284

## 8. WARRANTY AND SUPPORT

---

For warranty information, product support, or to purchase replacement parts (such as water filters or covers), please refer to the contact information provided with your purchase or visit the official Speedypress website. Keep your proof of purchase for warranty claims.