

[Manuals.plus](#) /

› [POCHFAN](#) /

› POCHFAN 42-inch Retractable Ceiling Fan User Manual

POCHFAN 1238X

POCHFAN 42-inch Retractable Ceiling Fan User Manual

Model: 1238X

Brand: POCHFAN

INTRODUCTION

Thank you for choosing the POCHFAN 42-inch Retractable Ceiling Fan. This modern fandelier combines the functionality of a ceiling fan with the illumination of an LED light fixture, designed to enhance the comfort and aesthetics of your bedroom or living room. Featuring a quiet DC motor, 6 fan speeds, 3 color temperature options, and dimmable lighting, this fan provides versatile climate control and ambiance. The retractable blades offer a sleek, compact look when not in use. Please read this manual thoroughly before installation and operation to ensure safe and optimal performance.



Image: The POCHFAN 42-inch Retractable Ceiling Fan, showcasing its brushed nickel finish, integrated LED light, and clear retractable blades. The remote control and a wall mount bracket are also visible.

SAFETY INSTRUCTIONS

Always follow basic safety precautions when installing and operating electrical appliances to reduce the risk of fire, electric shock, and personal injury.

- Read all instructions carefully before beginning installation.
- Installation must be performed by a qualified electrician.
- Turn off power at the circuit breaker or fuse box before wiring.
- Ensure all electrical connections comply with local codes and ordinances.
- The fan must be mounted to a structurally sound ceiling joist or outlet box capable of supporting the fan's weight (7.76 kg).
- Do not bend the blades when cleaning the fan.
- Do not insert objects into the path of the rotating blades.
- This appliance is not intended for use by persons (including children) with reduced physical, sensory or mental capabilities, or lack of experience and knowledge, unless they have been given supervision or instruction concerning use of the appliance by a person responsible for their safety.

PACKAGE CONTENTS

Verify that all components are present and undamaged before proceeding with installation.

- Ceiling Fan Motor Assembly
- Retractable Fan Blades (pre-attached)
- LED Light Kit
- Remote Control
- Remote Control Wall Mount Bracket
- Downrods (Short: 5 inches, Long: 8 inches)
- Mounting Hardware (screws, wire nuts, etc.)
- Instruction Manual
- AAA Batteries (2 included for remote)

SETUP AND INSTALLATION

Follow these steps for proper installation of your ceiling fan. Professional installation is recommended.

1. **Prepare the Mounting Location:** Ensure the electrical box is securely fastened to the building structure and can support the fan's weight. Turn off power at the main circuit breaker.
2. **Install the Mounting Bracket:** Attach the mounting bracket to the outlet box using the provided screws.
3. **Assemble the Downrod:** Choose the appropriate downrod (5-inch or 8-inch) based on your ceiling height and desired fan clearance. Insert the downrod through the canopy and connect it to the fan motor assembly.

2 Downrod Options



UP to 5000 CFM*
air volume

6 Fan Speeds

Room Size:
13ft x 13ft to 18ft x 18ft



Image: This diagram illustrates the two available downrod lengths (5 inches and 8 inches) and their corresponding total fan heights (15 inches and 18 inches). It also provides a recommended room size range of 13ft x 13ft to 18ft x 18ft for optimal air circulation.

- 4. Hang the Fan:** Carefully lift the fan assembly and hang it on the mounting bracket.
- 5. Wire the Fan:** Connect the electrical wires according to the wiring diagram provided in the separate wiring instructions (typically black to black, white to white, and green/bare copper to ground). Secure connections with wire nuts.
- 6. Attach the Canopy:** Slide the canopy up to the ceiling and secure it to the mounting bracket with the screws.
- 7. Install the Light Kit:** Connect the light kit wires to the fan motor assembly wires and secure the light kit to the fan housing.
- 8. Restore Power:** Once installation is complete, restore power at the circuit breaker.

OPERATING INSTRUCTIONS

Your POCHFAN ceiling fan is controlled by the included remote control. Ensure the two AAA batteries are correctly installed in the remote.

Easy to Use Remote Control

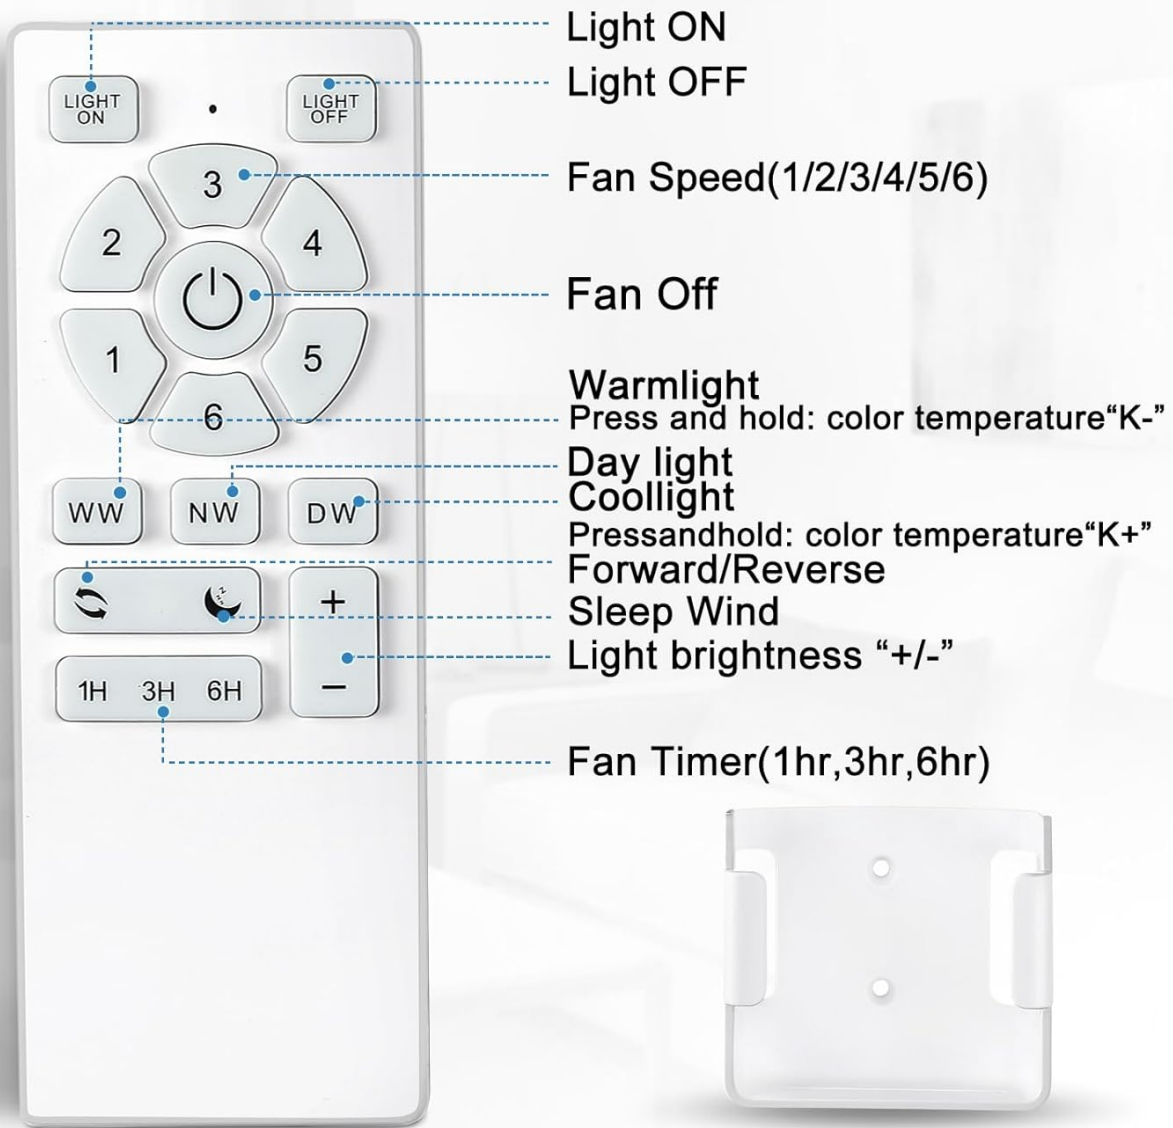


Image: A detailed diagram of the remote control for the POCHFAN ceiling fan, showing buttons for light ON/OFF, fan speed (1-6), fan OFF, color temperature adjustment (Warmlight, Day light, Coollight), forward/reverse mode, sleep wind, light brightness adjustment (+/-), and fan timer (1H, 3H, 6H).

Remote Control Functions:

- **Light ON/OFF:** Press the "Light ON" or "Light OFF" buttons to control the light.
- **Fan Speed (1-6):** Buttons labeled 1 through 6 control the fan speed, from lowest (1) to highest (6).
- **Fan OFF:** Press the "Fan OFF" button to turn off the fan.
- **Color Temperature Change:**
 - "WW" (Warm White): Activates 3000K warm white light.
 - "NW" (Natural White): Activates 4000K natural light.
 - "CW" (Cool White): Activates 6000K cool white light.
 - Press and hold "K-" or "K+" to fine-tune color temperature (if applicable).



3000K | Warm
White

4000K | Natural
Light

6000K | Cool
White

3 Color Temperature Changeable

36W LED light source, more energy efficient than traditional light bulbs

20%

50%

100%

20%-100% Smooth Dimmable

Image: This image displays the three adjustable color temperatures of the LED light: 3000K Warm White, 4000K Natural Light, and 6000K Cool White. It also indicates that the light is 20%-100% smooth dimmable.

- **Light Brightness Adjustment (+/-):** Use the "+" and "-" buttons to increase or decrease the light brightness (20%-100% dimmable).
- **Forward/Reverse Mode:** Press the "Forward/Reverse" button to change the direction of the fan blades. This allows for downdraft mode (summer) to create a cooling breeze or updraft mode (winter) to circulate warm air.

Cool in Summer & Warm in Winter

easy to switch by remote control

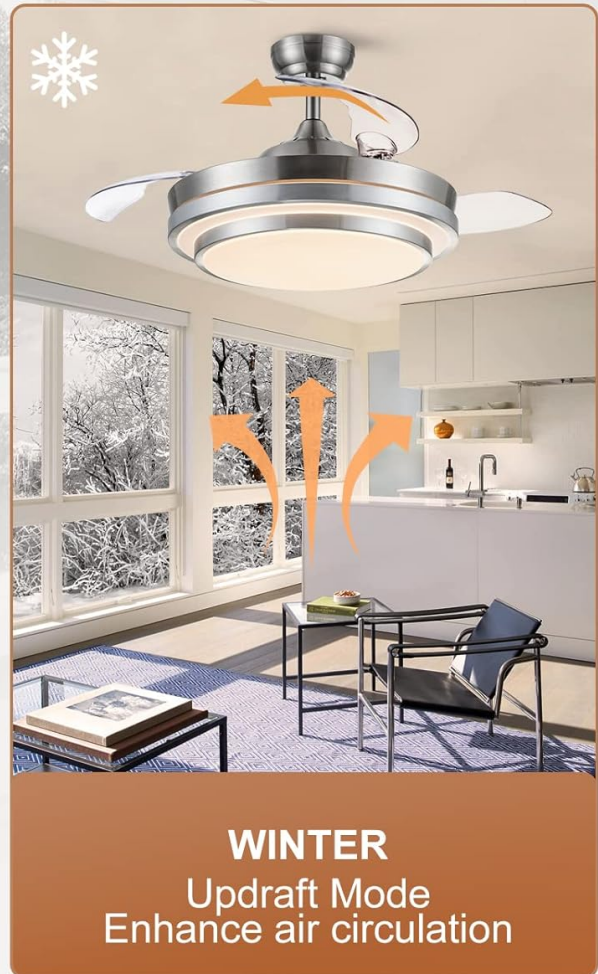



Image: This visual explains the reversible motor function, showing arrows for downdraft mode (cool and comfortable for summer) and updraft mode (enhances air circulation for winter warmth).

- **Sleep Wind:** Activates a gentle, fluctuating breeze for comfortable sleep.
- **Fan Timer (1H, 3H, 6H):** Set the fan to automatically turn off after 1, 3, or 6 hours.



 **6 Fan Speeds**
1/2/3/4/5/6

 **Timer Setting**
1H/3H/6H

 **Dimmable**
brightness
Adjustable(20%-100%)

 **Reversible Motor**
Summer Cool & Winter Warm

 **Quiet DC Motor**
<30db

Image: The POCHFAN ceiling fan installed in a modern living room, with icons highlighting its key features: 6 fan speeds, timer setting (1H/3H/6H), dimmable brightness (20%-100%), reversible motor for summer cool and winter warm, and a quiet DC motor (<30db).

MAINTENANCE

Regular maintenance will ensure the longevity and optimal performance of your ceiling fan.

- **Cleaning:** To avoid damage to the finish, clean the fan with a soft, damp cloth. Do not use abrasive cleaners or solvents. Ensure power is off before cleaning.
- **Blade Care:** The retractable blades are designed to fold in when the fan is off. When cleaning, gently wipe the blades. Do not bend or apply excessive force.
- **Tighten Fasteners:** Periodically check all screws and fasteners on the fan and mounting hardware to ensure they are secure.
- **Light Source:** The integrated LED light source is designed for long life and is not user-replaceable. If the light fails, contact customer support.

TROUBLESHOOTING

If you experience issues with your fan, refer to the following common problems and solutions:

| Problem | Possible Cause | Solution |
|----------------------------|---|---|
| Fan does not start | No power to the fan; Loose wire connections; Remote control battery low/dead. | Check circuit breaker/fuse; Ensure all wires are securely connected; Replace remote control batteries (2 AAA). |
| Light does not work | Loose wire connection to light kit; Remote control issue; LED driver failure. | Check light kit wiring; Ensure remote batteries are good; Contact customer support if LED driver is suspected. |
| Fan wobbles | Loose mounting bracket; Unbalanced blades; Loose downrod connection. | Ensure mounting bracket is secure; Check blade balance (balancing kit not typically needed for retractable blades, but ensure they are clean and free of debris); Tighten downrod screws. |
| Noisy operation | Loose screws; Motor hum (normal for DC motors, but excessive noise indicates issue); Obstruction. | Check and tighten all screws; Ensure no wires or objects are touching the fan; If noise persists, contact customer support. |
| Remote control not working | Dead batteries; Remote not paired (if applicable); Obstruction between remote and receiver. | Replace batteries; Refer to pairing instructions (if provided separately); Ensure clear line of sight. |

SPECIFICATIONS

- **Brand:** POCHFAN
- **Model Number:** 1238X
- **Product Dimensions (L x W x H):** 106.68 x 106.68 x 45.72 cm (42 x 42 x 18 inches)
- **Item Weight:** 7.76 Kilograms (17.1 lbs)
- **Number of Blades:** 3 (retractable)
- **Number of Light Sources:** 1 (integrated LED)
- **Voltage:** 110 Volts
- **Wattage:** 60 Watts
- **Batteries Required:** Yes (2 AAA for remote, included)
- **Motor Type:** Quiet DC Motor
- **Fan Speeds:** 6
- **Light Color Temperatures:** 3000K (Warm White), 4000K (Natural Light), 6000K (Cool White)
- **Dimmable:** Yes (20%-100%)
- **Timer Settings:** 1H, 3H, 6H

WARRANTY AND SUPPORT

Information regarding product warranty and availability of spare parts is not explicitly provided in the product details. For any support inquiries, technical assistance, or warranty claims, please contact your retailer or the manufacturer directly using the contact information provided at the point of purchase.

