

## Candy AQUA 104LE/2-S

# Candy AQUAMATIC AQUA 104LE/2-S Washing Machine User Manual

Model: AQUA 104LE/2-S | Brand: Candy

## 1. INTRODUCTION

Welcome to the user manual for your new Candy AQUAMATIC AQUA 104LE/2-S washing machine. This appliance is designed to provide efficient and convenient laundry care for smaller spaces. Please read this manual carefully before using the washing machine to ensure safe and optimal performance. Keep this manual for future reference.

## 2. SAFETY INFORMATION

Your safety and the safety of others are paramount. Always observe the following safety precautions:

- Ensure the appliance is properly grounded before use.
- Do not allow children to play with or operate the washing machine.
- Never force the door open during operation.
- Unplug the appliance from the power supply before cleaning or maintenance.
- Do not install the appliance in a damp environment or where it may be exposed to water splashes.
- Only use detergents and additives suitable for automatic washing machines.

## 3. PRODUCT OVERVIEW

The Candy AQUAMATIC AQUA 104LE/2-S is a compact, front-loading washing machine designed for efficiency and space-saving. It features a 4 kg capacity and a durable stainless steel drum.



Figure 3.1: Front view of the Candy AQUAMATIC AQUA 104LE/2-S washing machine, showing the control panel, detergent drawer, and drum door.



Figure 3.2: The washing machine integrated into a bathroom space, demonstrating its compact size next to a sink vanity.



Figure 3.3: The washing machine positioned under a countertop in a contemporary bathroom, highlighting its suitability for small areas.

## Control Panel

The control panel features a program selector dial, function buttons, and indicator lights. The symbol bezel provides clear visual cues for program selection and machine status.

## 4. INSTALLATION AND SETUP

---

### Unpacking

Carefully remove all packaging materials. Locate and remove the transport bolts from the rear of the machine. Keep these bolts for future transport if needed.

### Positioning

Place the washing machine on a firm, level surface. Adjust the feet to ensure the machine is stable and does not wobble. Allow adequate space around the machine for ventilation and connections.

### Water Connection

Connect the water inlet hose to a cold water tap with a 3/4" thread. Ensure all connections are tight to prevent leaks. Position the drain hose into a suitable standpipe or sink, ensuring it is securely fixed to prevent displacement during draining.

### Electrical Connection

Plug the appliance into a grounded electrical outlet. Ensure the voltage and frequency match the specifications on the rating plate of the machine. Do not use extension cords or adapters.

## 5. OPERATING INSTRUCTIONS

---

### Before First Use

Before washing laundry for the first time, run a short cycle without laundry and detergent to clean the drum and remove any manufacturing residues.

### Loading Laundry

Open the door and load the laundry into the drum. Do not overload the machine; ensure there is enough space for the laundry to tumble freely. The maximum capacity is 4 kg.

### Adding Detergent and Additives

Pull out the detergent dispenser drawer. Add the appropriate amount of detergent to the main wash compartment and fabric softener to its designated compartment. Refer to detergent packaging for dosage recommendations.

### Selecting a Program

Turn the program selector dial to choose the desired washing program based on the fabric type and soil level of your laundry.

### Starting a Wash Cycle

Press the Start/Pause button to begin the selected wash cycle. The machine will automatically proceed through the wash, rinse, and spin phases.

### Ending a Wash Cycle

Once the program is complete, the machine will signal the end of the cycle. Wait for the door lock indicator to turn off before opening the door and unloading your laundry.

## 6. WASHING PROGRAMS

---

The Candy AQUAMATIC AQUA 104LE/2-S offers a variety of programs to suit different laundry needs:

Program	Description	Max. Load	Temp. Range
Cotton	For durable cottons, whites, and colored items.	4 kg	30-90°C
Synthetics	For synthetic fabrics like polyester, nylon.	2 kg	30-60°C
Delicates	For delicate items like silk, lace, and wool.	1.5 kg	20-40°C
Quick Wash	For lightly soiled items needing a fast wash.	1.5 kg	30°C
Rinse & Spin	For rinsing and spinning hand-washed items.	4 kg	Cold

## 7. MAINTENANCE AND CLEANING

---

Regular maintenance ensures the longevity and efficiency of your washing machine.

### Cleaning the Detergent Dispenser

Periodically remove the detergent dispenser drawer and rinse it under running water to remove any detergent residue. Clean the housing of the drawer with a brush.

### Cleaning the Filter

The filter should be cleaned regularly to prevent blockages. Locate the filter at the bottom front of the machine,

unscrew it carefully, and remove any lint or foreign objects. Drain any residual water before removing the filter.

### Cleaning the Drum

Run a maintenance wash cycle (e.g., a hot cotton cycle without laundry) with a descaling agent or washing machine cleaner every few months to prevent odor and limescale buildup.

### External Cleaning

Wipe the exterior of the machine with a soft, damp cloth. Do not use abrasive cleaners or solvents.

## 8. TROUBLESHOOTING

If you encounter any issues with your washing machine, refer to the table below for common problems and solutions:

Problem	Possible Cause	Solution
Machine does not start	No power supply; Door not closed properly; Program not selected.	Check power plug and fuse; Ensure door is firmly closed; Select a program and press Start.
Excessive vibration/noise	Transport bolts not removed; Machine not level; Uneven load.	Remove transport bolts; Adjust leveling feet; Redistribute laundry evenly.
Water leakage	Hoses not connected tightly; Detergent drawer overflowing.	Check and tighten hose connections; Do not overfill detergent drawer.
Water not draining	Drain hose kinked or blocked; Filter blocked.	Straighten drain hose; Clean the filter.

## 9. SPECIFICATIONS

Key technical specifications for the Candy AQUAMATIC AQUA 104LE/2-S washing machine:






Feature	Specification
Model	AQUA 104LE/2-S
Capacity	4 Kilograms
Dimensions (HxWxD)	70 x 51 x 43.5 cm
Weight	47 Kilograms
Maximum Spin Speed	1000 Revolutions per Minute
Noise Emission (Spin)	78 dB
Annual Energy Consumption	69 Kilowatt-hours
Drum Material	Stainless Steel
Installation Type	Freestanding
Voltage	230 Volt


## 10. WARRANTY AND SUPPORT

Your Candy AQUAMATIC AQUA 104LE/2-S washing machine comes with a standard manufacturer's warranty. Please refer to the warranty card included with your purchase for specific terms and conditions.

For technical assistance, spare parts, or service inquiries, please contact Candy customer support. Contact details can typically be found on the manufacturer's official website or in the documentation provided with your appliance.
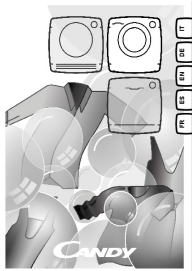
### Related Documents - AQUA 104LE/2-S

	<p><a href="#">Candy Aquamatic Washing Machine User Manual</a></p> <p>Comprehensive user manual for Candy Aquamatic washing machines (models 6, 6T, 8T, 10T), covering installation, operation, maintenance, and troubleshooting.</p>
	<p><a href="#">Candy GVW 364TC Washer Dryer: Features and Specifications</a></p> <p>Discover the Candy GVW 364TC, a space-saving washer dryer with a 6kg wash capacity, 4kg drying capacity, and 1300 RPM spin speed. This guide details its features, programs, performances, and technical specifications.</p>
	<p><a href="#">Candy Washing Machine User Manual: Installation, Operation, and Maintenance</a></p> <p>Comprehensive user manual for Candy washing machines, covering installation, safe operation, maintenance, troubleshooting, and energy-saving tips. Includes detailed instructions and safety precautions.</p>
	<p><a href="#">Candy HE 1294TWM6/1-S Ultra Hygiene Washing Machine Specifications</a></p> <p>Detailed specifications for the Candy HE 1294TWM6/1-S Ultra Hygiene washing machine, including features, technical characteristics, energy efficiency, and dimensions.</p>
	<p><a href="#">Candy CSTG282DE/1-S 8kg Smart Top-Load Washing Machine</a></p> <p>Discover the Candy CSTG282DE/1-S, an 8kg top-load washing machine with 1200 RPM spin speed and Class D energy efficiency. Features Smart Touch NFC technology, Mix Power System+, Gentle Touch Opening, and 16 versatile programs for optimal laundry care.</p>

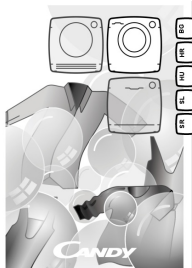

### [Candy Перална Машина: Пълно Ръководство за Безопасна и Ефективна Употреба](#)

Открийте как да използвате вашата нова Candy перална машина безопасно и ефективно с това изчерпателно ръководство. Включва инструкции за инсталация, поддръжка, програми и съвети за пестене на енергия и вода.