

Manuals+

[Q & A](#) | [Deep Search](#) | [Upload](#)

[manuals.plus](#) /

› [YAOHUIMI](#) /

› [YAOHUIMI Replacement Remote Control User Manual for Dual Axxera Jensen Car Audio Receivers](#)

YAOHUIMI YAOHUIMI Replacement Remote

YAOHUIMI Replacement Remote Control User Manual

For Dual, Axxera, and Jensen Car Audio Digital Media Receivers

INTRODUCTION

This manual provides comprehensive instructions for the YAOHUIMI replacement remote control. This remote is designed to operate various Dual, Axxera, and Jensen car audio digital media receivers. Please refer to the compatibility list to ensure this remote is suitable for your specific unit.

Important Note: This is a dedicated replacement remote control and is not a universal remote. Verify compatibility with your specific receiver model before use.

COMPATIBLE RECEIVER MODELS

This replacement remote control is compatible with the following Dual, Axxera, and Jensen car audio digital media receiver models:

- MXD337BT
- MCP1337BT
- XDM16BT
- CMR322
- WCP365BT
- CMR2629
- MPR2110
- MPR319
- MPR529
- JDM118BT
- AM118BT
- AM229BT
- AM228BT
- DXM59BT
- MXD378SXM
- DXRM57BT
- DXRM58BT
- DXRM59BT

- XRM49BT
- XRM47BT

SETUP AND BATTERY INSTALLATION

The remote control typically comes with a pre-installed battery or requires a standard CR2025 coin cell battery. Follow these steps to install or replace the battery:

1. Locate the battery compartment on the back of the remote control.
2. Slide the battery tray out or open the battery cover.
3. Insert a new CR2025 battery with the positive (+) side facing up, ensuring correct polarity.
4. Close the battery compartment securely.

No programming is usually required for this replacement remote; it should function immediately with compatible receivers once the battery is installed.

OPERATING INSTRUCTIONS

Familiarize yourself with the buttons on your replacement remote control. The layout is designed to mimic the original remote for ease of use. Below is a general guide to the common functions:



Image: Front view of the YAOHUIMI replacement remote control, showing all buttons and their labels.

- **Power Button ()**: Turns the receiver on or off. Located at the top right.
- **MODE**: Cycles through available audio sources (e.g., Radio, USB, Bluetooth, AUX). Located at the top left.
- **VOL ▲ / ▼**: Adjusts the volume level up or down. Located at the top center and middle left.
- **AUDIO**: Accesses audio settings such as bass, treble, balance, and fader. Located below the top left volume button.
- **TUNE ◀◀ / ▶▶**: Skips tracks or tunes radio frequencies. Located below MODE and AUDIO buttons.
- **BAND**: Changes radio bands (e.g., FM1, FM2, AM). Located to the right of the lower volume button.
- **Call Answer (Green Phone Icon)**: Answers incoming calls when connected via Bluetooth. Located below the left TUNE button.
- **1 ▶/⏸ (Play/Pause)**: Plays or pauses media. Also functions as preset 1.
- **2 INT (Intro Scan)**: Scans and plays the first few seconds of each track. Also functions as preset 2.
- **3 RPT (Repeat)**: Repeats the current track or album. Also functions as preset 3.
- **4 RDM (Random/Shuffle)**: Plays tracks in a random order. Also functions as preset 4.
- **5 (Folder Down)**: Navigates to the previous folder in media playback. Also functions as preset 5.

- **6 (Folder Up):** Navigates to the next folder in media playback. Also functions as preset 6.
- **AS/PS (Auto Store/Preset Scan):** Automatically stores strong radio stations or scans through presets. Located at the bottom left.
- **MUTE:** Silences the audio output. Located at the bottom right.

Point the remote control directly at the receiver's infrared sensor for optimal performance.

MAINTENANCE AND CARE

- **Cleaning:** Use a soft, dry cloth to clean the remote control. Avoid using liquid cleaners or solvents.
- **Battery Replacement:** Replace the battery when the remote's range decreases or it stops responding. Always use a fresh CR2025 battery.
- **Storage:** Store the remote in a cool, dry place away from direct sunlight and extreme temperatures.
- **Avoid Damage:** Do not drop the remote or expose it to water.

TROUBLESHOOTING

Problem	Solution
Remote is not responding.	<p>Ensure the remote has a fresh CR2025 battery installed correctly.</p> <p>Check for any obstructions between the remote and the receiver's IR sensor.</p> <p>Verify that the remote is pointed directly at the receiver.</p> <p>Confirm that your receiver model is listed as compatible.</p>
Buttons are not functioning correctly.	<p>Clean the remote control surface and buttons with a dry cloth.</p> <p>Replace the battery.</p> <p>Ensure the remote is compatible with your specific receiver model.</p>
Short operating range.	<p>Replace the battery with a new one.</p> <p>Ensure there are no strong light sources or other IR devices interfering with the signal.</p>

SPECIFICATIONS

- **Product Type:** Replacement Remote Control
- **Brand:** YAOHUIMI
- **Compatible Devices:** Dual, Axxera, Jensen Car Audio Digital Media Receivers (specific models listed in "Compatible Receiver Models" section)
- **Battery Type:** CR2025 (Coin Cell)
- **Special Feature:** Ergonomic design
- **Max Number of Supported Devices:** 1

WARRANTY AND SUPPORT

For warranty information or technical support regarding your YAOHUIMI replacement remote control, please refer to the documentation provided with your purchase or contact the seller directly. Specific warranty terms may vary.

© 2024 YAOHUIMI. All rights reserved.