

Mahli MBOT3002BK

Mahli Robotic 3-in-1 Vacuum Cleaner

USER MANUAL - MODEL MBOT3002BK

Introduction

Thank you for choosing the Mahli Robotic 3-in-1 Vacuum Cleaner. This intelligent omni-directional robotic vacuum is designed to simplify your home cleaning routine, effectively cleaning hardwood and tile floors. Please read this manual thoroughly before operating the device to ensure safe and optimal performance.

Important Safety Instructions

When using an electrical appliance, basic precautions should always be followed, including the following:

- Read all instructions before using this appliance.
- Do not operate the vacuum cleaner in areas with flammable or combustible liquids, gases, or explosive dust.
- Keep hair, loose clothing, fingers, and all parts of body away from openings and moving parts.
- Do not pick up anything that is burning or smoking, such as cigarettes, matches, or hot ashes.
- Do not use without dust bin and/or filters in place.
- Use only as described in this manual. Use only manufacturer's recommended attachments.
- Do not allow to be used as a toy. Close attention is necessary when used by or near children.
- Unplug from outlet when not in use and before servicing.
- If the appliance is not working as it should, has been dropped, damaged, left outdoors, or dropped into water, return it to a service center.

Package Contents

Please check the package contents upon opening to ensure all items are present:

- Mahli Robotic 3-in-1 Vacuum Cleaner (MBOT3002BK)
- Charging Cable
- Side Brushes (pre-installed or separate)
- User Manual (this document)



Image: The Mahli Robotic 3-in-1 Vacuum Cleaner, showcasing its sleek, circular design and top panel.

Product Components

Familiarize yourself with the different parts of your robotic vacuum:



Image: Top view of the Mahli Robotic Vacuum, highlighting the power button and the access panel for the dustbin.

1. **Power Button:** Press to start/stop cleaning.
2. **Dustbin Cover:** Lift to access the dustbin.
3. **Indicator Light:** Shows charging status and operational mode.

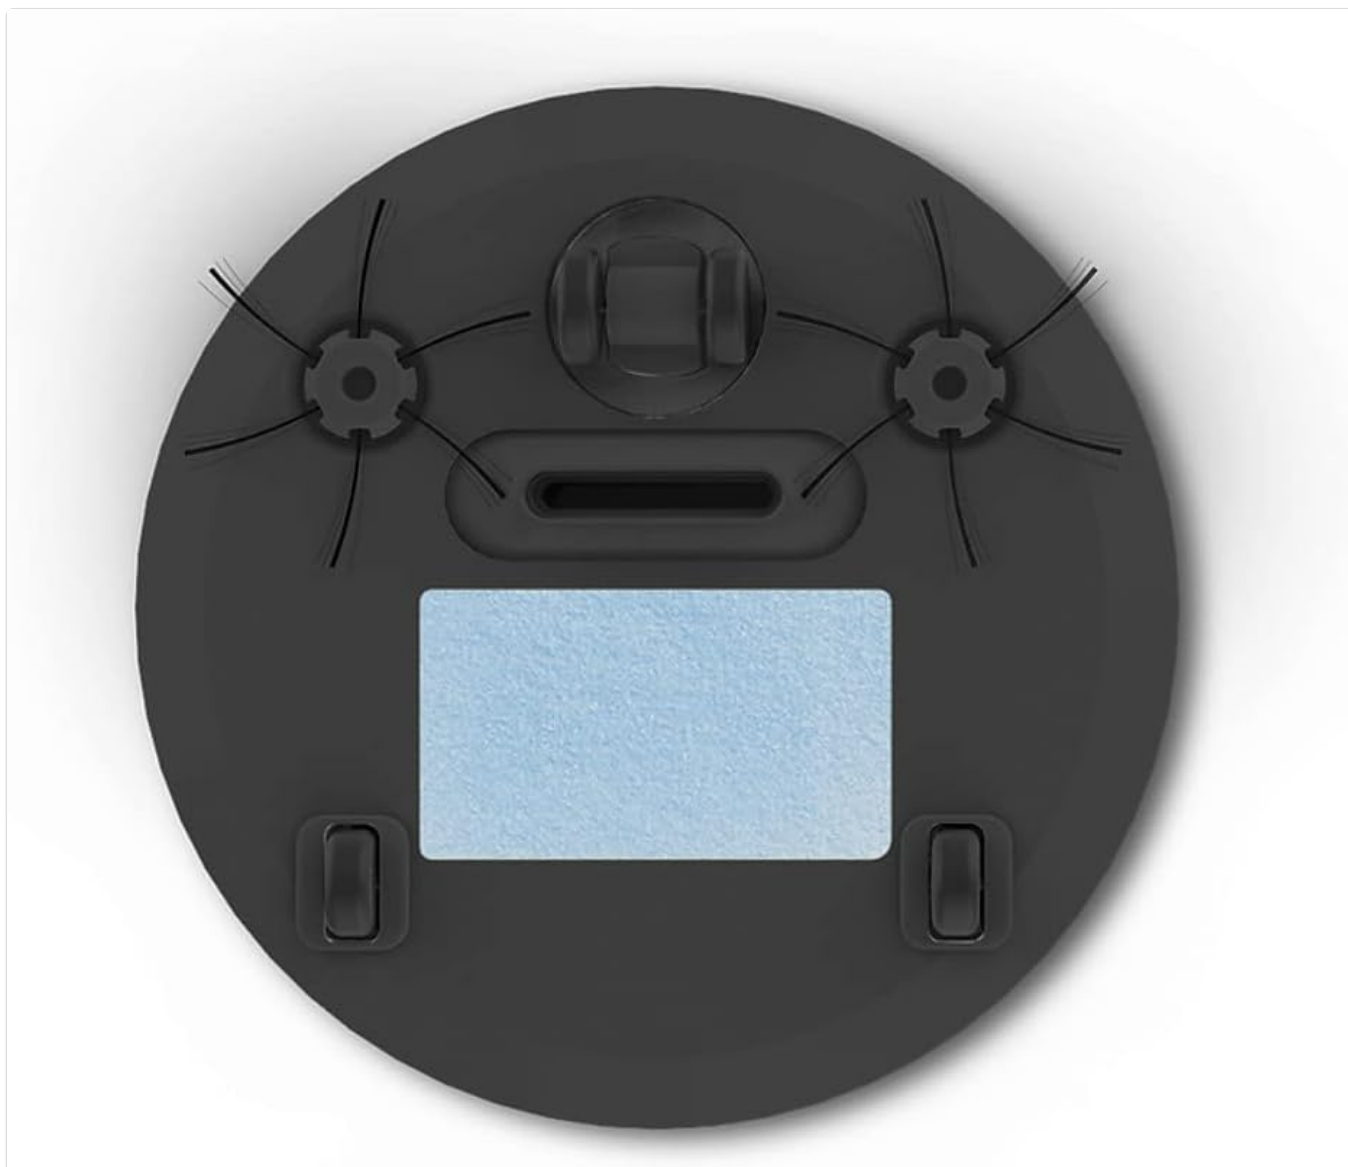


Image: Bottom view of the Mahli Robotic Vacuum, showing the two side brushes, driving wheels, and the removable filter compartment.

4. **Side Brushes:** Sweep debris into the vacuum's path.
5. **Driving Wheels:** Allow the vacuum to move across surfaces.
6. **Charging Contacts:** For connecting to the charging cable.
7. **Dustbin Release:** Button or latch to remove the dustbin.
8. **Filter:** Captures fine dust and particles.

Setup

1. **Unpack:** Carefully remove the vacuum cleaner and all accessories from the packaging.
2. **Charge Battery:** Before first use, fully charge the vacuum cleaner. Connect the charging cable to the vacuum's charging port and plug the adapter into a wall outlet. The indicator light will show charging status (e.g., red for charging, blue for fully charged). A full charge takes approximately 2 hours.
3. **Install Side Brushes:** If not pre-installed, gently push the side brushes onto their respective posts on the bottom of the vacuum until they click into place.

4. **Prepare Cleaning Area:** Remove any large obstacles, loose cables, or small items from the floor that could entangle the vacuum or obstruct its path.

Operating Instructions

1. **Starting a Cleaning Cycle:**

Ensure the vacuum is fully charged and placed on the floor in the area you wish to clean. Press the power button on the top of the vacuum. The indicator light will turn blue, and the vacuum will begin its cleaning cycle.

2. **Stopping a Cleaning Cycle:**

To pause or stop the vacuum during operation, press the power button again. The vacuum will stop, and the indicator light may change color or turn off.

3. **Automatic Cleaning:**

The Mahli Robotic Vacuum uses intelligent omni-directional technology to navigate and clean your floors. It will automatically adjust its path to cover the cleaning area and avoid obstacles. It is designed for hard floors such as hardwood and tile.

Maintenance

Regular maintenance is crucial for optimal performance and longevity of your robotic vacuum. Always turn off the vacuum and unplug it before performing any maintenance.

1. **Emptying the Dustbin:**

It is recommended to empty the dustbin after each cleaning cycle or when the dustbin full indicator (if available) illuminates. Lift the dustbin cover, remove the dustbin, and empty its contents into a trash can. Rinse the dustbin with water if necessary, but ensure it is completely dry before reinserting.

2. **Cleaning the Filter:**

The filter should be cleaned regularly, ideally after every 1-3 uses depending on usage. Tap the filter gently to remove dust. For a deeper clean, the filter can be rinsed under running water. Allow the filter to air dry completely for at least 24 hours before reinserting it into the dustbin.

3. **Cleaning Side Brushes:**

Check the side brushes periodically for tangled hair or debris. Gently pull them off their posts to clean. If brushes are worn or damaged, replace them with new ones.

4. **Cleaning Wheels:**

Inspect the driving wheels for any hair or debris that might impede movement. Clean as needed.

5. **Cleaning Sensors:**

Wipe the sensors (located on the bottom and front of the vacuum) with a clean, dry cloth to ensure proper navigation.

Troubleshooting

If you encounter issues with your Mahli Robotic Vacuum, please refer to the following common problems and solutions:

Problem	Possible Cause	Solution
Vacuum does not turn on.	Low battery; Power button not pressed correctly.	Charge the vacuum fully. Press the power button firmly.

Problem	Possible Cause	Solution
Vacuum stops unexpectedly.	Dustbin full; Obstruction; Low battery.	Empty dustbin. Remove obstructions. Recharge vacuum.
Poor cleaning performance.	Dustbin full; Clogged filter; Worn side brushes.	Empty dustbin. Clean or replace filter. Clean or replace side brushes.
Vacuum gets stuck frequently.	Too many obstacles; Dark surfaces (cliff sensors).	Clear the cleaning area. The vacuum may struggle on very dark floors or rugs.

Specifications

Feature	Detail
Brand	Mahli
Model Number	MBOT3002BK
Color	Black
Product Dimensions	12 x 12 x 4 inches
Item Weight	2.77 pounds
Battery Life	Up to 2 Hours
Power Source	Battery Powered
Control Method	Touch
Filter Type	Cartridge

Warranty and Support


Mahli products are manufactured to the highest quality standards. For information regarding warranty coverage, technical support, or replacement parts, please refer to the warranty card included with your product or visit the official Mahli website. Keep your purchase receipt as proof of purchase.


For further assistance, please contact Mahli Customer Service.



© 2024 Mahli. All rights reserved.

Related Documents

	<p>Mahli XL Robotic 3-in-1 Vacuum Cleaner MBOT3002 User Guide</p> <p>User guide for the Mahli XL Robotic 3-in-1 Vacuum Cleaner, model MBOT3002. Includes setup, operation, maintenance, and safety information.</p>
---	---

 

[MÄHLI Seaside Diffuser User Guide MDB1055](#)

User guide for the MÄHLI Seaside Diffuser (MDB1055), detailing setup, operation, precautions, and warranty information for this aroma diffuser with soothing mood lighting.