

SNOOKER SK-219S

SNOOKER SK-219S Ice Machine User Manual

Model: SK-219S | Brand: SNOOKER

INTRODUCTION

This user manual provides comprehensive instructions for the safe and efficient operation, maintenance, and troubleshooting of your SNOOKER SK-219S Ice Machine. Please read this manual thoroughly before operating the appliance and retain it for future reference. The SNOOKER SK-219S is designed to produce ice efficiently for various applications.

IMPORTANT SAFETY INSTRUCTIONS

To reduce the risk of fire, electric shock, or injury when using your ice machine, follow these basic precautions:

- Read all instructions before using the appliance.
- Do not touch the evaporator or ice bin when the machine is operating.
- Ensure the machine is properly grounded.
- Do not operate any appliance with a damaged cord or plug, or after the appliance malfunctions or has been damaged in any manner.
- Do not immerse cord, plug, or any part of the appliance in water or other liquids.
- Unplug the ice machine before cleaning or performing any maintenance.
- Keep ventilation openings in the appliance enclosure or in the built-in structure clear of obstruction.
- This appliance is not intended for use by persons (including children) with reduced physical, sensory or mental capabilities, or lack of experience and knowledge, unless they have been given supervision or instruction concerning use of the appliance by a person responsible for their safety.

PARTS AND COMPONENTS

Familiarize yourself with the main parts of your SNOOKER SK-219S Ice Machine:



Figure 1: Front view of the SNOOKER SK-219S Ice Machine, showing the control panel, ice dispenser, and ventilation grilles.



Figure 2: Angled side view of the SNOOKER SK-219S Ice Machine, highlighting its compact design and side ventilation.

- **Control Panel:** Digital display and buttons for operation.
- **Ice Dispenser:** Area where ice is dispensed.
- **Water Inlet:** Connection point for water supply.
- **Drain Outlet:** For water drainage.
- **Ventilation Grilles:** Located on the front and sides for air circulation.
- **Adjustable Feet:** For leveling the machine.

SETUP

Follow these steps for the initial setup of your ice machine:

1. **Unpacking:** Carefully remove the ice machine from its packaging. Retain packaging materials for future transport if needed.
2. **Placement:** Place the machine on a flat, stable surface away from direct sunlight and heat sources. Ensure there is adequate ventilation around the unit (at least 6 inches clearance from walls).
3. **Leveling:** Use the adjustable feet to ensure the machine is perfectly level. This is crucial for proper water flow and ice production.

4. **Water Connection:** Connect the water inlet hose to a potable water supply. Ensure all connections are secure and leak-free.
5. **Drain Connection:** Connect the drain hose to a suitable drain. Ensure the drain hose has a continuous downward slope to prevent water accumulation.
6. **Power Connection:** Plug the power cord into a grounded electrical outlet. Ensure the voltage matches the machine's requirements (refer to specifications).
7. **Initial Cleaning:** Before first use, clean the interior of the ice machine according to the "Maintenance" section.

OPERATING INSTRUCTIONS

Once set up, operating your SNOOKER SK-219S is straightforward:

1. **Power On:** Press the "Power" button on the control panel to turn on the machine.
2. **Ice Production Cycle:** The machine will automatically begin its ice production cycle. The display may show the current status or countdown.
3. **Ice Collection:** Once ice is produced, it will drop into the ice storage bin.
4. **Dispensing Ice:** Use the ice scoop (if provided) or the dispenser mechanism to retrieve ice.
5. **Automatic Shut-off:** The machine will automatically stop producing ice when the ice bin is full or if there is a water supply issue. It will resume when ice levels drop or water supply is restored.
6. **Power Off:** Press the "Power" button again to turn off the machine when not in use for extended periods.

Note: The first few batches of ice may be smaller or irregular. Discard these initial batches.

MAINTENANCE

Regular cleaning and maintenance are essential for the longevity and optimal performance of your ice machine.

Daily Maintenance:

- Wipe down the exterior with a soft, damp cloth.
- Clean the ice scoop after each use.

Weekly Maintenance:

- Empty and clean the ice storage bin with a mild detergent and warm water. Rinse thoroughly.
- Check and clean the water filter (if applicable).

Monthly Maintenance:

- **Descaling:** Use an ice machine descaling solution to clean the water system and evaporator. Follow the descaling product's instructions carefully.
- **Condenser Cleaning:** Clean the condenser coils using a soft brush or vacuum cleaner to remove dust and debris. Ensure the machine is unplugged before cleaning the condenser.
- Inspect water and drain hoses for any kinks or damage.

Caution: Always unplug the machine before performing any cleaning or maintenance. Do not use abrasive cleaners or sharp objects that could damage the machine's surfaces.

TROUBLESHOOTING

Refer to the table below for common issues and their solutions:

Problem	Possible Cause	Solution
Machine not producing ice	No power; Water supply off; Clogged water filter; High ambient temperature.	Check power connection; Ensure water supply is on; Clean/replace water filter; Move machine to a cooler location.
Ice is too thin or soft	Low water pressure; Dirty evaporator; Incorrect water temperature.	Check water pressure; Clean evaporator; Ensure water supply temperature is within recommended range.
Machine is noisy	Unlevel machine; Loose components; Fan obstruction.	Level the machine; Check for loose parts; Clear any obstructions from the fan.
Water leakage	Loose hose connections; Clogged drain; Damaged water line.	Tighten hose connections; Clear drain; Inspect and replace damaged water lines.

If the problem persists after attempting these solutions, please contact customer support.

SPECIFICATIONS

Key technical specifications for the SNOOKER SK-219S Ice Machine:

Feature	Detail
Brand	SNOOKER
Model Name	SK-219S
Refrigerant	R600a
Material	Plastic
Manufacturer	SNOOKER
GTIN	00850003682266
First Available	April 24, 2021

WARRANTY AND SUPPORT

For warranty information and customer support, please refer to the documentation provided with your purchase or contact the manufacturer directly. Keep your proof of purchase for warranty claims.

For technical assistance or service inquiries, please visit the official SNOOKER website or contact their customer service department. Contact details are typically found on the product packaging or the manufacturer's official website.

ASK A QUESTION ABOUT THIS MANUAL

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question and use this page's manual context to help answer it.

Name

Anonymous

Email

you@example.com

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. [Privacy details](#).

Question

Example: How do I reset this device or fix this error?

Details

Model number, symptoms, what you tried, or the section of the manual you are using.

Submit question