

Mahli MBOT3002

Mahli Smart Robotic 3-in-1 Vacuum Cleaner User Manual

Model: MBOT3002

INTRODUCTION

Thank you for choosing the Mahli Smart Robotic 3-in-1 Vacuum Cleaner. This manual provides important information on the safe use, operation, and maintenance of your device. Please read it thoroughly before first use and keep it for future reference.



Figure 1: Mahli Smart Robotic 3-in-1 Vacuum Cleaner and Remote Control

This image displays the Mahli Smart Robotic 3-in-1 Vacuum Cleaner in white, accompanied by its remote control. The vacuum cleaner is round with a power button on top, and the remote control is rectangular with navigation and function buttons.

SAFETY INSTRUCTIONS

- Read all instructions before using the appliance.

- Do not operate the vacuum cleaner in wet environments or near water.
- Keep hair, loose clothing, fingers, and all parts of the body away from openings and moving parts.
- Use only as described in this manual. Use only manufacturer's recommended attachments.
- Do not use with a damaged cord or plug. If appliance is not working as it should, has been dropped, damaged, left outdoors, or dropped into water, return it to a service center.
- Do not pull or carry by cord, use cord as a handle, close a door on cord, or pull cord around sharp edges or corners. Do not run appliance over cord. Keep cord away from heated surfaces.
- Do not unplug by pulling on cord. To unplug, grasp the plug, not the cord.
- Do not handle plug or appliance with wet hands.
- Do not put any object into openings. Do not use with any opening blocked; keep free of dust, lint, hair, and anything that may reduce air flow.
- Turn off all controls before unplugging.
- Use extra care when cleaning on stairs.
- Do not use to pick up flammable or combustible liquids, such as gasoline, or use in areas where they may be present.
- Do not pick up anything that is burning or smoking, such as cigarettes, matches, or hot ashes.
- Do not use without dust bag and/or filters in place.
- Prevent unintentional starting. Ensure the switch is in the off-position before connecting to battery pack, picking up or carrying the appliance.
- Recharge only with the charger specified by the manufacturer.
- Do not modify or attempt to repair the appliance or the battery pack.

PRODUCT COMPONENTS

The Mahli Smart Robotic 3-in-1 Vacuum Cleaner comes with the following components:

- Main Robotic Vacuum Unit
- Remote Control
- USB Charging Cable
- Side Brushes (2x)
- Mop Cloth (1x)
- Cleaning Brush (1x)

ROBOTIC VACUUM SPECIFICATIONS		MBOT3001	MBOT3002	MBOT3003	MBOT3004
Size	Diameter: 9 in, Height: 2.6 in	Diameter: 12.5 in, Height: 1.8 in	Diameter: 12.5 in, Height: 1.8 in	Diameter: 12.5 in, Height: 1.8 in	Diameter: 11 in, Height: 2.8 in
Capacity	150 mAh	150 mAh	2000 mAh	2000 mAh x 2	350 mAh
Rechargeable Battery	1200 mAh	2000 mAh	2000 mAh x 2	2000 mAh x 2	350 mAh
Number Of Motors	2	4	5	5	5
Working Time	2 hrs	2 hrs	2 hrs	2 hrs	2 hrs
Suitable Floor	Wood, Tile, Linoleum	Wood, Tile, Linoleum	Wood, Tile, Linoleum	Wood, Tile, Linoleum, Low Medium-Pile carpets	Wood, Tile, Linoleum, Low Medium-Pile carpets
360 Cleaning	•	•	•	•	•
Auto Random	•	•	•	•	•
U Pattern			•	•	•
Spot Clean			•	•	•
Anti Fall Sensors			•	•	•
Remote			•	•	•
Accessories	USB cable, Brush x2, Dust cloth, User manual	USB cable, Brush x2, Dust cloth, 3M tape, User manual	Remote control, USB cable, Brush x5, Mop x1, Screw driver x1, Screw ad. User manual	Remote control, USB cable, Brush x3, Mop x1, Screw driver x1, Screw ad. User manual	Remote control, USB cable, Brush x3, Mop x1, Screw driver x1, Screw ad. User manual

Figure 2: Included Components

This image shows the Mahli Smart Robotic 3-in-1 Vacuum Cleaner along with its accessories: two side brushes, a mop cloth, a USB charging cable, and a small cleaning brush.

SETUP

1. Charging the Vacuum Cleaner

1. Connect the USB charging cable to the charging port on the vacuum cleaner.
2. Plug the other end of the USB cable into a compatible USB power adapter (not included) or a computer USB port.
3. The charging indicator light will illuminate. A full charge takes approximately 3 hours.
4. Once fully charged, the indicator light may change or turn off. Disconnect the vacuum cleaner from the power source.

2. Attaching Side Brushes

Gently press the side brushes onto the designated posts on the underside of the vacuum cleaner until they click into place.

3. Attaching the Mop Cloth (Optional)

If using the mopping function, attach the mop cloth to the designated area on the bottom of the vacuum cleaner. Ensure it is securely fastened.

OPERATING INSTRUCTIONS

1. Powering On/Off

- To power on, press the power switch on the side or bottom of the vacuum cleaner. Alternatively, for some models, simply touch the power button on the top surface after ensuring the main power switch is on.
- To power off, press the power switch again or hold the power button on the top surface.

2. Cleaning Modes

The vacuum cleaner features intelligent omni-directional and auto-route technology for efficient cleaning.

- **Automatic Cleaning:** Once powered on, the vacuum cleaner will automatically begin cleaning, navigating around obstacles and covering the floor area.
- **Remote Control Operation:** Use the provided remote control for manual direction changes or to start/stop cleaning.



Figure 3: Remote Control

This image shows the white remote control for the Mahli Smart Robotic 3-in-1 Vacuum Cleaner. It features a circular directional pad at the top, with two smaller circular buttons below it.

3. Mopping Function

If the mop cloth is attached, the vacuum cleaner will perform mopping simultaneously with sweeping and vacuuming. Ensure the mop cloth is clean and slightly damp for best results.

MAINTENANCE

1. Emptying the Dustbin

Regularly empty the dustbin to maintain optimal cleaning performance. Locate the dustbin compartment, open it, and dispose of collected debris. Clean the dustbin with the provided cleaning brush or a soft cloth.

2. Cleaning Side Brushes

Check the side brushes for tangled hair or debris. Remove any obstructions carefully. If brushes are worn, they may need replacement.

3. Cleaning the Mop Cloth

After each use, remove the mop cloth and wash it thoroughly. Allow it to air dry completely before reattaching.

4. Cleaning Sensors

Wipe the anti-fall sensors and other optical sensors on the bottom and front of the vacuum cleaner with a clean, dry cloth to ensure proper navigation.

TROUBLESHOOTING

Problem	Possible Cause	Solution
Vacuum cleaner does not turn on.	Battery is low or depleted. Main power switch is off.	Charge the vacuum cleaner. Ensure the main power switch is in the ON position.
Vacuum cleaner stops unexpectedly.	Dustbin is full. Obstruction detected. Battery is low.	Empty the dustbin. Remove any obstructions. Recharge the vacuum cleaner.
Poor cleaning performance.	Dustbin is full. Side brushes are tangled or worn. Sensors are dirty.	Empty the dustbin. Clean or replace side brushes. Clean all sensors.
Vacuum cleaner gets stuck frequently.	Too many obstacles in the cleaning area. Sensors are dirty.	Clear the cleaning area of excessive clutter. Clean all sensors.

SPECIFICATIONS

Feature	Detail

Feature	Detail
Model	MBOT3002
Function	Sweeping, Vacuuming, Mopping (3-in-1)
Battery Capacity	2000mAh
Charging Time	Approx. 3 hours
Working Time	Approx. 2 hours
Rated Voltage	3.7V
Working Noise	55dB
Dimensions	Diameter: 12.5 inches, Height: 1.8 inches
Suitable Floor Types	Wood, Tile, Linoleum
Special Features	Intelligent Omni-Directional, Auto Route Technology, Smart Navigation, 360 Motion, Advanced Sensors, Anti-Fall Sensors
Included Components	Sweeper, 2x Brush, 1x Mop, 1x USB Charging Cable, 1x Cleaning Brush, Remote Control



Figure 4: Robotic Vacuum Specifications Overview

This image displays a table comparing specifications for various Mahli robotic vacuum models (MBOT3001, MBOT3002, MBOT3003, MBOT3004). Key specifications include size, capacity, battery, motors, working time, suitable floor, cleaning patterns, sensors, remote, and accessories.

WARRANTY AND SUPPORT

For warranty information and customer support, please refer to the contact details provided on the product packaging or the official Mahli website. Keep your purchase receipt as proof of purchase.

Related Documents - MBOT3002

	<p><u>Mahli XL Robotic 3-in-1 Vacuum Cleaner MBOT3002 User Guide</u></p> <p>User guide for the Mahli XL Robotic 3-in-1 Vacuum Cleaner, model MBOT3002. Includes setup, operation, maintenance, and safety information.</p>
	<p><u>MÄHЛИ Seaside Diffuser User Guide MDB1055</u></p> <p>User guide for the MÄHЛИ Seaside Diffuser (MDB1055), detailing setup, operation, precautions, and warranty information for this aroma diffuser with soothing mood lighting.</p>
	<p><u>Lidl Weekly Ad: Holiday Decorations, Food, Apparel & More</u></p> <p>Discover the latest Lidl weekly ad featuring a wide selection of holiday decorations, festive food items, apparel, and home goods. Find deals on Christmas trees, LED lights, ornaments, seasonal treats, pajamas, and more. Includes details on the myLidl rewards program and special Thanksgiving offers.</p>