

Kary LA-1118

Kary LA-1118 LED Desk Lamp Instruction Manual

Model: LA-1118

INTRODUCTION

Thank you for purchasing the Kary LA-1118 LED Desk Lamp. This manual provides essential information for the safe and efficient operation of your new desk lamp. Please read it thoroughly before use and retain it for future reference.

SAFETY INSTRUCTIONS

- Ensure the power adapter is compatible with your local power supply before connecting.
- Do not disassemble or modify the lamp. This may cause damage or electric shock.
- Avoid exposing the lamp to water or high humidity.
- Keep the lamp away from heat sources and direct sunlight.
- Clean the lamp with a soft, dry cloth. Do not use abrasive cleaners or solvents.
- If any issues arise, disconnect the power immediately and contact customer support.

PACKAGE CONTENTS

Please check the package for the following items:

- 1 x Kary 24W LED Desk Lamp with Clamp
- 1 x Power Adapter
- 1 x Welcome Guide (This manual)

SETUP

Follow these steps to set up your Kary LED Desk Lamp:

1. **Attach the Clamp:** Securely attach the clamp to the edge of your desk. The clamp supports a maximum desk edge thickness of 2.87 inches. Ensure it is tightened firmly to prevent wobbling.

2. **Insert the Lamp:** Insert the lamp's main pole into the clamp's receiver. Ensure it is fully seated.
3. **Adjust Position:** Utilize the flexible gooseneck to position the light bar over your workspace. The gooseneck allows for flexible height adjustment and multi-angle lighting.
4. **Connect Power:** Plug the power adapter into the lamp's power input, then plug the adapter into a standard electrical outlet.

Angenehmes gleichmäßiges Licht

Automatisch dimmender Augenschutz



Blendfrei



Flimmerfrei



Reduzierte
Augenbelastung



Image: Illustration of the Kary LED Desk Lamp being installed using its sturdy clamp on a desk.

Flexibles Schwanenhals-Design

Passt für verschiedene Arbeitshöhen



Image: The Kary LED Desk Lamp with its flexible gooseneck, demonstrating various height and angle adjustments for optimal lighting.

OPERATING INSTRUCTIONS

The Kary LED Desk Lamp features sensitive touch controls located on the top of the light bar.

5 Farbtemperaturen

3000K



6500K



5 Helligkeitsstufen

20%



100%



Image: Close-up of the touch control panel on the Kary LED Desk Lamp, showing icons for Auto, Temperature, On/Off, Brightness, and Timer.

1. **Power On/Off:** Touch the **On/Off** icon to turn the lamp on or off.
2. **Brightness Adjustment:** Touch the **Brightness** icon repeatedly to cycle through 5 dimmable brightness levels (20%, 40%, 60%, 80%, 100%).
3. **Color Temperature Adjustment:** Touch the **Temperature** icon repeatedly to cycle through 5 color temperature modes (3000K, 4000K, 5000K, 6000K, 6500K).
4. **Auto-Dimming Function:** Touch the **Auto** icon to activate the intelligent light sensor. The lamp will automatically adjust its brightness to the optimal level for your environment.
5. **Timer Function:** Touch the **Timer** icon to activate the 50-minute auto-off timer. The lamp will automatically turn off after 50 minutes.
6. **Memory Function:** The lamp features a memory function that restores your last brightness and color temperature settings when turned back on.

MAINTENANCE

- **Cleaning:** Disconnect the power before cleaning. Use a soft, dry cloth to wipe the lamp. Do not use liquid or aerosol cleaners.
- **Storage:** If storing the lamp for an extended period, ensure it is clean and dry. Store in a cool, dry place away from direct sunlight.

TROUBLESHOOTING

Problem	Possible Cause	Solution
Lamp does not turn on.	Power adapter not connected or faulty.	Check power connections. Ensure the adapter is securely plugged into both the lamp and the outlet. Try a different outlet.
Light flickers.	Unstable power supply or internal issue.	Ensure the power supply is stable. If flickering persists, discontinue use and contact customer support.
Touch controls are unresponsive.	Temporary software glitch or dirty sensor.	Disconnect and reconnect power. Clean the touch control area with a dry cloth.

SPECIFICATIONS

Model Number: LA-1118

Brand: Kary

Wattage: 24W

Brightness: 1800 LM

Light Bar Width: 31.5 inches

Color Temperature Modes: 5 (3000K - 6500K)

Dimmable Brightness Levels: 5

Timer: 50 Minutes Auto Off

Color Rendering Index (CRI): >90

Material: Aluminum, Metal

Mounting Type: Tabletop Clamp

Max Clamp Thickness: 2.87 inches

Power Source: Corded Electric

Control Method: Touch

Dimensions (D x W x H): 2.17"D x 32.28"W x 27.56"H

WARRANTY AND SUPPORT

The Kary LA-1118 LED Desk Lamp comes with an 18-month warranty from the date of purchase. This warranty covers manufacturing defects and material flaws under normal use. For warranty claims, technical support, or any inquiries, please contact Kary customer service through the retailer where the product was purchased. Please retain your proof of purchase for warranty validation.

ASK A QUESTION ABOUT THIS MANUAL

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question and use this page's manual context to help answer it.

Name

Anonymous

Email

you@example.com

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. [Privacy details](#).

Question

Example: How do I reset this device or fix this error?

Details

Model number, symptoms, what you tried, or the section of the manual you are using.

Submit question