

[Manuals.plus](#) /

› [ASHATA](#) /

› ASHATA 32Pin Game Cartridge Slot for DS NDSL GBA Console User Manual

ASHATA 32Pin Game Cartridge Slot (ASIN: B0949FBPRF)

ASHATA 32Pin Game Cartridge Slot

USER MANUAL

1. Introduction

This manual provides comprehensive instructions for the ASHATA 32Pin Game Cartridge Slot, a high-quality replacement component designed for Nintendo DS, NDSL, and Game Boy Advance (GBA) consoles. This part is essential for restoring game cartridge functionality to your console, replacing worn or damaged original slots.

 
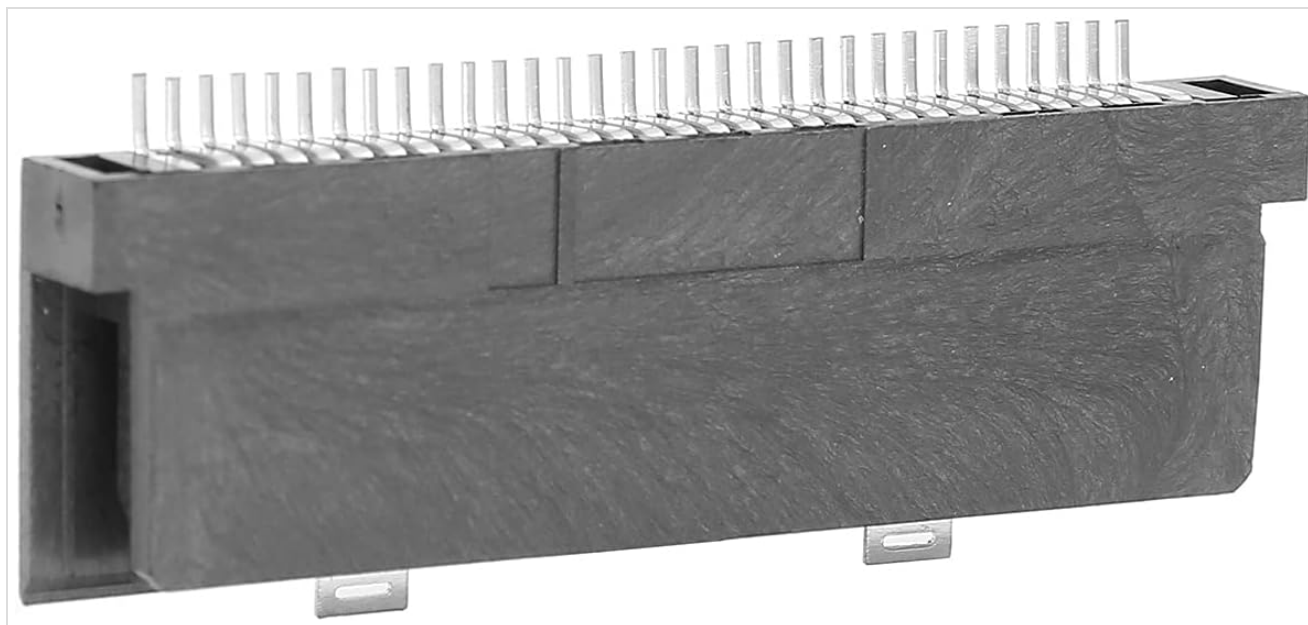 


Figure 1.1: Overview of the ASHATA 32Pin Game Cartridge Slot.

Key features of this replacement slot include:

- Specifically designed for DS, NDSL, and GBA consoles.
- Direct replacement for worn or damaged 32Pin connectors.
- Constructed from durable, high-quality plastic material.
- Ensures stable and reliable performance for game cartridge reading.

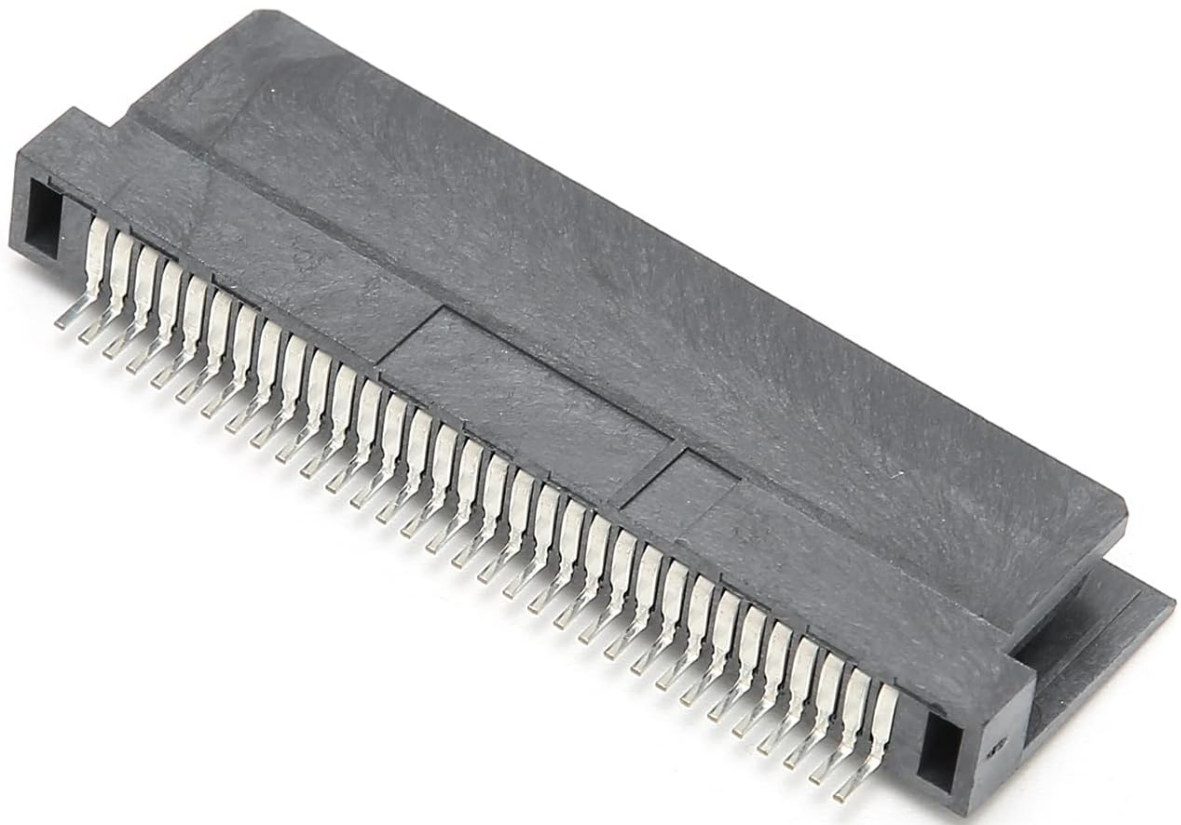

Game Cartridge Slot

- Fit for DS NDSL GBA console
- Directly replace worn or damaged 32Pin connector slot
- Easy to install and disassemble, stable performance

Figure 1.2: The 32Pin Game Cartridge Slot highlighting its compatibility and ease of replacement.

2. Setup and Installation

Installation of the ASHATA 32Pin Game Cartridge Slot requires careful handling and basic tools. It is recommended that this procedure be performed by individuals comfortable with small electronics repair.

2.1. Tools Required

- Small cross-head screwdriver (Phillips head)
- Prying tool (plastic spudger recommended)
- Anti-static wrist strap (optional, but recommended)

2.2. Installation Steps

1. **Power Off and Disconnect:** Ensure your DS, NDSL, or GBA console is completely powered off and disconnected from any power sources. Remove any game cartridges and the battery.
2. **Disassemble Console:** Carefully open the console casing. This typically involves removing screws from the

back and gently prying open the shell. Refer to specific console disassembly guides if unsure.

3. **Locate and Remove Old Slot:** Identify the existing game cartridge slot on the console's motherboard. It will be a rectangular component with a row of pins. Carefully desolder or unclip the old 32Pin connector. Note its orientation before removal.



Figure 2.1: Angled view of the 32Pin Game Cartridge Slot, showing the connector pins.

4. **Install New Slot:** Align the new ASHATA 32Pin Game Cartridge Slot with the corresponding pads or connector on the motherboard. Ensure all 32 pins are correctly seated. If soldering is required, ensure clean and secure connections.

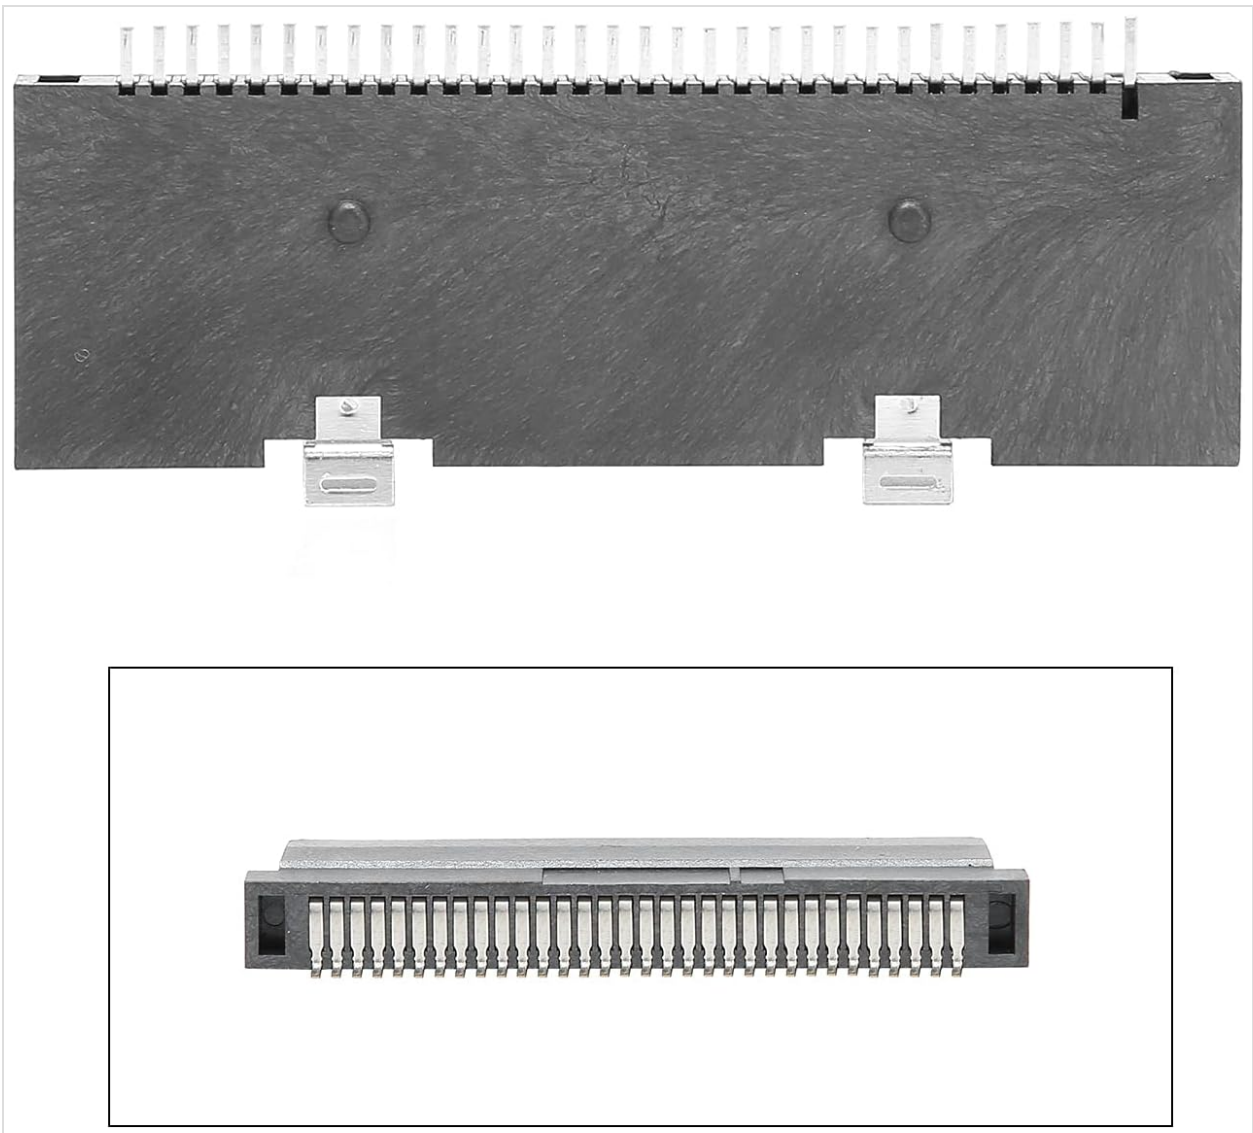 


Figure 2.2: Top view of the 32Pin Game Cartridge Slot, useful for orientation during installation.

5. **Reassemble Console:** Carefully reassemble the console casing, ensuring all components are properly seated and screws are tightened securely but not overtightened.
6. **Test Functionality:** Reinsert the battery and power on the console. Insert a known working game cartridge to verify that the new slot is functioning correctly.

Caution: Improper installation can damage your console. If you are not confident in performing this repair, seek professional assistance.

3. Operating Instructions

Once the ASHATA 32Pin Game Cartridge Slot is successfully installed, operating it is straightforward, mirroring the original console functionality.

3.1. Inserting a Game Cartridge

1. Ensure the console is powered off.
2. Hold the game cartridge with the label facing the same direction as the console's screen (or as indicated by the console's design).

3. Gently slide the game cartridge into the 32Pin slot until it clicks into place or is fully seated. Do not force the cartridge.

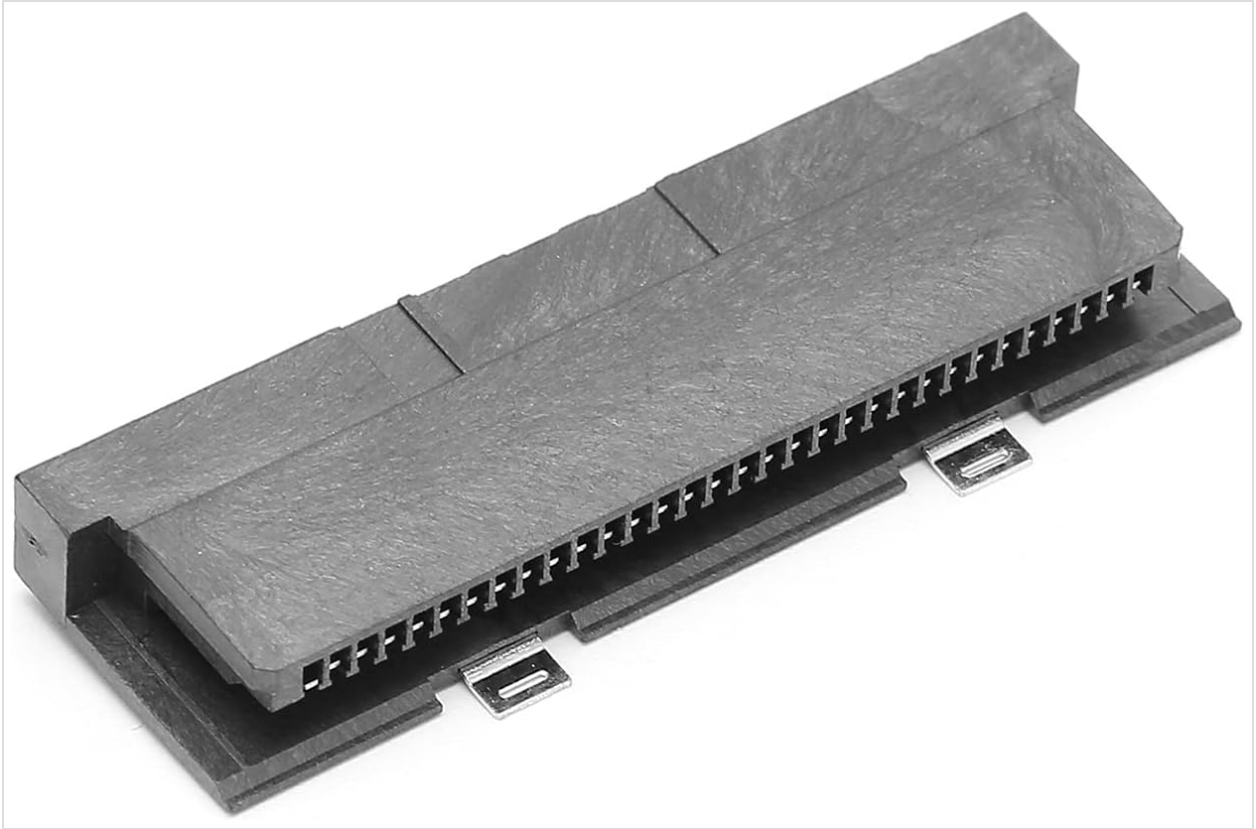 


Figure 3.1: Angled view of the 32Pin Game Cartridge Slot, showing the opening where game cartridges are inserted.

4. Power on the console. The game should now be recognized and playable.

3.2. Removing a Game Cartridge

1. Ensure the console is powered off to prevent data corruption or damage to the cartridge/console.
2. Gently pull the game cartridge straight out from the slot. Avoid wiggling or twisting.

4. Maintenance

Proper maintenance of the game cartridge slot can extend its lifespan and ensure consistent performance.

- **Keep Clean:** Periodically inspect the slot for dust, debris, or foreign objects. Use a can of compressed air to gently blow out any loose particles. Avoid inserting sharp objects into the slot.
- **Handle with Care:** Always insert and remove game cartridges gently and straight into/out of the slot. Forcing cartridges or inserting them at an angle can bend or damage the internal pins.
- **Avoid Liquids:** Keep the console and the cartridge slot away from liquids to prevent corrosion or short circuits.

5. Troubleshooting

If you encounter issues after installing the ASHATA 32Pin Game Cartridge Slot, consider the following common problems and solutions:

5.1. Game Cartridge Not Recognized

- **Re-seat Cartridge:** Remove the game cartridge and reinsert it firmly, ensuring it is fully seated in the slot.
- **Clean Cartridge Contacts:** Use a cotton swab lightly dampened with isopropyl alcohol to clean the gold contacts on the game cartridge. Allow to dry completely before reinserting.
- **Inspect Slot Pins:** With the console powered off, carefully inspect the pins inside the 32Pin slot for any bent, broken, or corroded pins. If pins are bent, they may need to be carefully straightened with a fine tool, or the slot may need replacement.
- **Verify Installation:** If the issue persists, it may indicate an improper installation. Re-open the console and verify that the 32Pin slot is correctly soldered or connected to the motherboard and that all connections are secure.

5.2. Loose Connection / Intermittent Reading

- This often points to an issue with the physical connection. Ensure the game cartridge is fully inserted.
- If the problem occurs with multiple cartridges, it is likely an issue with the slot's connection to the motherboard. Re-check the installation as described in Section 2.2.

6. Specifications

Technical specifications for the ASHATA 32Pin Game Cartridge Slot:

Feature	Detail
Product Dimensions	0.39 x 0.39 x 0.39 inches
Item Weight	0.317 ounces
ASIN	B0949FBPRF
Manufacturer	eboxer-1
Country of Origin	China
Compatibility	DS, NDSL, GBA Consoles (32-Pin)
Material	High-quality Plastic

7. Warranty Information

ASHATA products are manufactured to high-quality standards. This product comes with a standard limited warranty against defects in materials and workmanship from the date of purchase. Please retain your proof of purchase for warranty claims. The warranty does not cover damage caused by improper installation, misuse, accident, or unauthorized repair.

8. Customer Support

For further assistance, technical support, or warranty inquiries, please contact ASHATA customer service through the retailer where you purchased the product or visit the official ASHATA store online. You can find more information and contact details at the [ASHATA Store on Amazon](#).

© 2024 ASHATA. All rights reserved. Product specifications are subject to change without notice.

ASK A QUESTION ABOUT THIS MANUAL

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question and use this page's manual context to help answer it.

Name

Anonymous

Email

you@example.com

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. [Privacy details](#).

Question

Example: How do I reset this device or fix this error?

Details

Model number, symptoms, what you tried, or the section of the manual you are using.

Submit question

Open the live page

<https://manuals.plus/asin/B0949FBPRF>

More documents and user manuals: <https://manuals.plus/>