

Manuals.plus /
› KitchenAid /
› KitchenAid Compact Dish Rack User Manual

KitchenAid KE895BXWHA

KitchenAid Compact Dish Rack User Manual

Model: KE895BXWHA
Brand: KitchenAid

1. PRODUCT OVERVIEW

The KitchenAid Compact Dish Rack is designed for efficient dish drying in smaller kitchen spaces. It features a compact footprint while offering ample capacity for various kitchenware. This unit includes a dish rack, a self-draining drainboard, and a removable flatware caddy.



Figure 1: Assembled KitchenAid Compact Dish Rack.

2. KEY FEATURES

- **Compact Design:** Optimized for smaller kitchens, minimizing countertop space usage while maximizing drying capacity. Accommodates up to 9 plates and 5 cups.
- **Easy Assembly:** Designed for effortless, tool-free setup.
- **Self-Draining System:** Angled drainboard directs water directly into the sink, preventing pooling and keeping

countertops dry. The drainboard is removable for easy cleaning.

- **Premium Quality Construction:** Features heavy-duty, satin-coated, rust-resistant wires for secure item placement and optimal airflow. Sturdy stainless steel panels ensure durability.
- **Removable Flatware Caddy:** Includes a 3-compartment caddy for organizing utensils, which detaches for convenient unloading into drawers and cabinets.
- **Non-slip Stability:** Soft, non-slip feet on the base prevent movement and protect countertops from scratches.

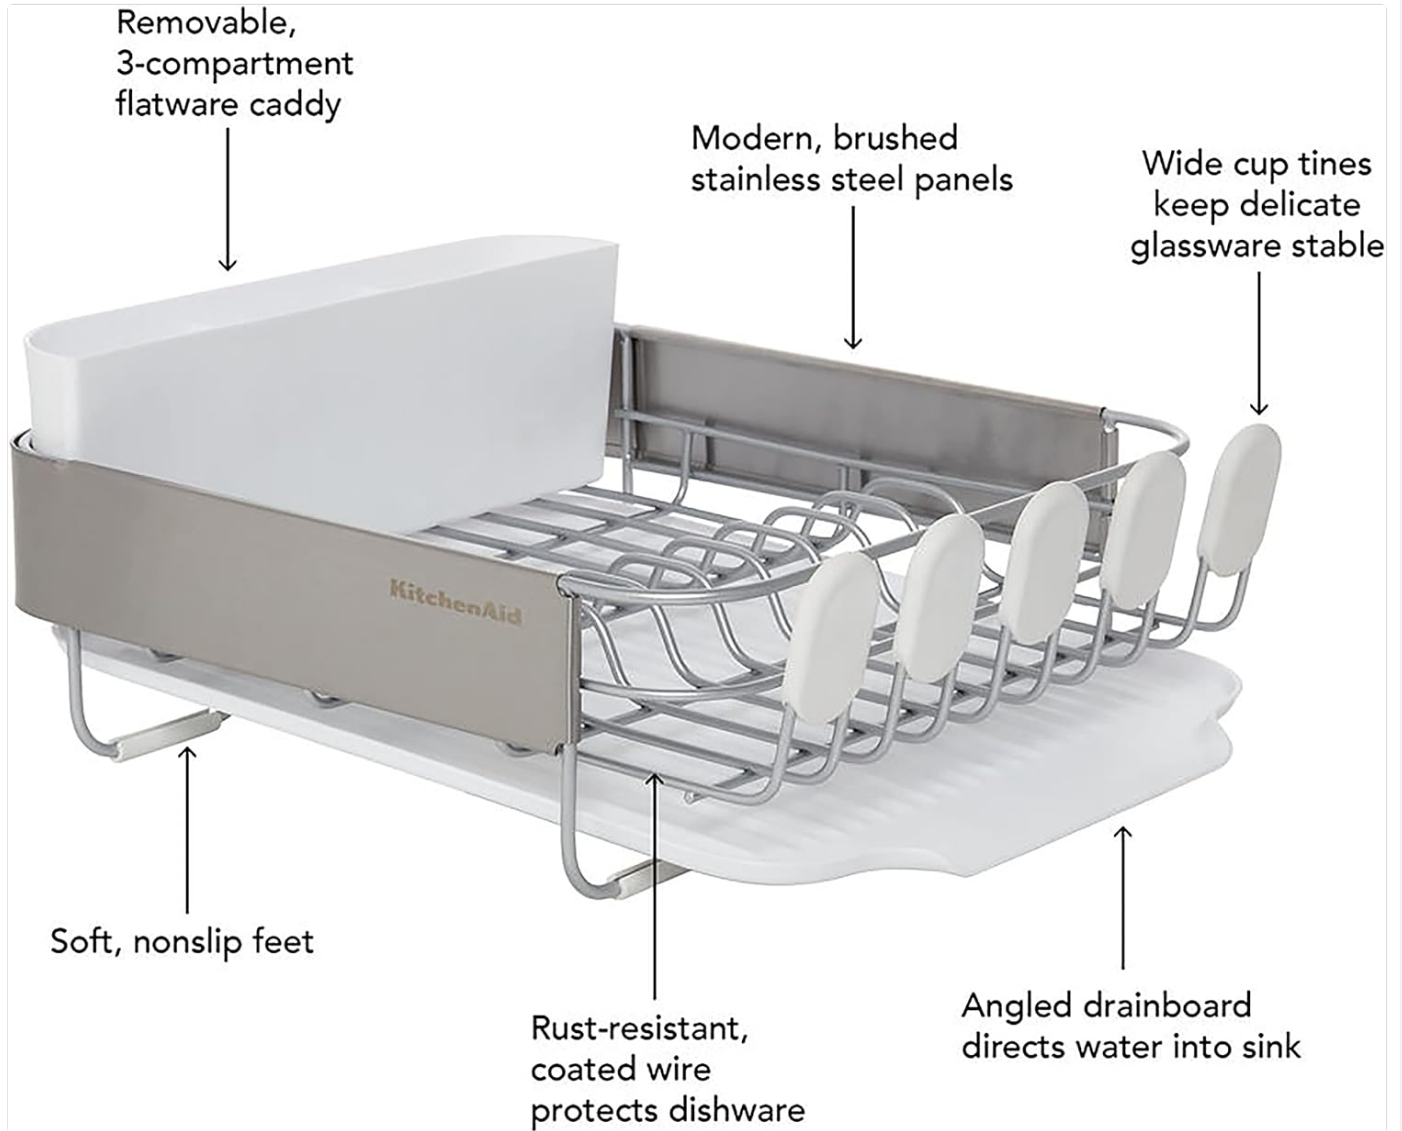


Figure 2: Labeled features of the dish rack, including removable caddy, brushed stainless steel panels, wide cup tines, non-slip feet, rust-resistant wire, and angled drainboard.

3. SETUP INSTRUCTIONS

1. Unpack all components: dish rack frame, drainboard, and flatware caddy.
2. Place the drainboard on a flat, stable surface near your sink. Ensure the angled side is positioned to drain into the sink.
3. Carefully place the dish rack frame onto the drainboard, aligning its feet with the designated areas on the drainboard. The non-slip feet should rest securely.
4. Insert the 3-compartment flatware caddy into its designated slot on the side of the dish rack.
5. Verify that all components are securely in place before loading dishes.

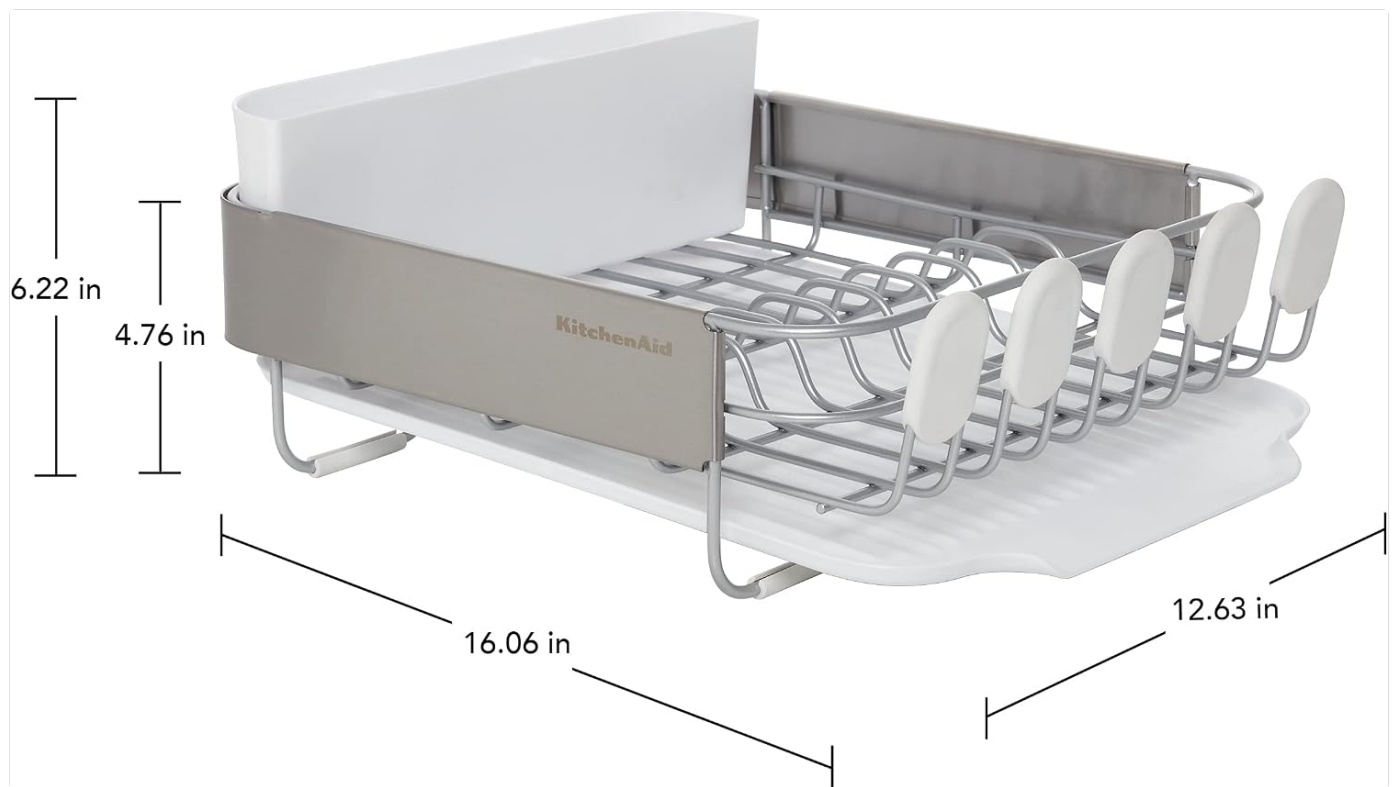


Figure 3: Product dimensions for placement reference.

4. OPERATING THE DISH RACK

To use the KitchenAid Compact Dish Rack, simply place your washed dishes, cups, and flatware onto the appropriate sections for air drying.

- **Plates:** Position plates vertically in the main wire rack section, utilizing the deep slots for stability.
- **Cups/Glasses:** Invert cups and glasses over the wide cup tines on the side of the rack to allow for proper drainage and airflow.
- **Flatware:** Place forks, spoons, and knives into the separate compartments of the removable flatware caddy.
- **Pots/Pans:** Larger items like pots and pans can be placed on the flat section of the wire rack.



Figure 4: Dish rack in use, holding various kitchen items.



Figure 5: Dish rack demonstrating capacity for larger items like pots and pans.

5. MAINTENANCE AND CARE

To ensure the longevity and hygiene of your KitchenAid Compact Dish Rack, follow these care instructions:

- **Cleaning:** Hand wash all components of the dish rack. Do not place in a dishwasher.
- **Drainboard:** Regularly remove and clean the drainboard to prevent water spots and mineral buildup. Use warm, soapy water and a soft cloth.
- **Wire Rack & Caddy:** Clean the wire rack and flatware caddy with warm, soapy water. Rinse thoroughly and allow to air dry completely before reassembly.
- **Rust Prevention:** The satin-coated wires are rust-resistant, but proper drying after cleaning will further extend the product's life.

6. TROUBLESHOOTING

If you encounter any issues with your dish rack, consider the following common solutions:

Problem	Possible Cause	Solution
Water pooling on countertop	Drainboard not angled correctly or drain spout is blocked.	Ensure the drainboard's angled side is positioned directly over the sink. Check and clear any debris from the drain spout.
Dish rack unstable or sliding	Non-slip feet are dirty or the surface is uneven.	Clean the non-slip feet and the countertop surface. Ensure the rack is placed on a flat, level surface.
Water spots/mineral buildup	Infrequent cleaning or hard water.	Clean the drainboard and other components regularly with warm, soapy water. For stubborn mineral deposits, use a solution of white vinegar and water.

7. SPECIFICATIONS

Attribute	Detail
Brand	KitchenAid
Model Number	KE895BXWHA
Material	Stainless Steel (satin-coated, rust-resistant wires and panels)
Color	White
Product Dimensions (L x W x H)	15.87"W x 12.63"D x 5.54"H
Item Weight	2.99 pounds (1.36 Kilograms)
Mounting Type	Sink, Tabletop
Special Feature	Portable
UPC	024131473748

8. WARRANTY AND SUPPORT

This KitchenAid Compact Dish Rack is backed by a **Lifetime Limited Warranty**. This warranty covers defects in material and workmanship under normal household use.

For warranty claims, product support, or any inquiries, please contact KitchenAid Customer Service through their official website or the contact information provided with your product packaging.

Please retain your proof of purchase for warranty validation.

ASK A QUESTION ABOUT THIS MANUAL

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question and use this page's manual context to help answer it.

Name

Anonymous

Email

you@example.com

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. [Privacy details](#).

Question

Example: How do I reset this device or fix this error?

Details

Model number, symptoms, what you tried, or the section of the manual you are using.

Submit question

Open the live page

<https://manuals.plus/asin/B0949KJKVJ>

More documents and user manuals: <https://manuals.plus/>