

[Manuals.plus](#) /

> [Venturer](#) /

> [Venturer 7 Inch Voyager 16GB Storage 2GB RAM Bluetooth WiFi Dual Cameras Android 10 Tablet User Manual](#)

Venturer Venturer Voyager VCT9F78 Q22NM0

Venturer Voyager 7 Inch Tablet User Manual

Model: Venturer Voyager VCT9F78 Q22NM0

INTRODUCTION

This manual provides essential information for the safe and efficient operation of your Venturer Voyager 7 Inch Tablet. Please read this manual thoroughly before using the device and retain it for future reference.

The Venturer Voyager 7 Inch Tablet features a 1024 x 600 touchscreen display, 2GB RAM, 16GB internal storage (expandable via microSD), Bluetooth, Wi-Fi, and dual cameras, running on Android 10 Go Edition.

PACKAGE CONTENTS

Upon opening the package, ensure all the following items are present:

- Venturer Voyager 7 Inch Tablet
- USB-C Charger
- USB-C Cable
- User Manual (this document)

DEVICE OVERVIEW

Familiarize yourself with the various components and ports of your Venturer Voyager tablet.



Figure 1: Tablet Components Diagram. This image displays the Venturer Voyager 7 Inch Tablet from multiple angles, highlighting key features such as the Power on/off button, Volume +/Volume - buttons, Front camera, Reset button, USB-C port, Microphone, MicroSD card slot, Headphone jack, Rear camera, and Speakers.

- **Power On/Off Button:** Located on the top edge, used to power the tablet on or off, or to put it into sleep mode.
- **Volume Buttons:** Located on the top edge, used to adjust the audio volume.
- **Front Camera:** Located on the front bezel, used for video calls and selfies.
- **Rear Camera:** Located on the back of the tablet, used for taking photos and videos.
- **USB-C Port:** Located on the right side, used for charging the tablet and connecting to a computer.
- **MicroSD Card Slot:** Located on the left side, allows for storage expansion up to 128GB.
- **Headphone Jack:** Located on the left side, for connecting wired headphones.
- **Microphone:** Integrated for audio input during calls or recordings.
- **Speakers:** Located on the back, for audio output.
- **Reset Button:** A small pinhole button for force restarting the device if it becomes unresponsive.

SETUP

1. Charging the Tablet

Before first use, fully charge the tablet. Connect the USB-C cable to the tablet's USB-C port and the other end to the provided USB-C charger. Plug the charger into a power outlet. The charging indicator will typically show the charging status on the screen. A full charge takes approximately 5 hours.

2. Powering On/Off

- **To Power On:** Press and hold the Power On/Off button until the Venturer logo appears on the screen.
- **To Power Off:** Press and hold the Power On/Off button until a power-off menu appears. Select "Power off" and confirm.
- **Sleep Mode:** Briefly press the Power On/Off button to put the tablet into sleep mode or wake it up.

3. Initial Setup Wizard

Upon first power-on, the tablet will guide you through an initial setup process. This includes selecting your language, connecting to a Wi-Fi network, setting up your Google account, and configuring basic settings.

4. Inserting a MicroSD Card (Optional)

To expand storage, insert a MicroSD card (up to 128GB) into the MicroSD card slot. Ensure the tablet is powered off before inserting or removing the card. Gently push the card into the slot until it clicks into place.

OPERATING THE TABLET

1. Navigating the Android Interface

The Venturer Voyager runs on Android 10 Go Edition. Navigation is primarily done via the touchscreen:

- **Tap:** To open apps, select items, or press buttons.
- **Swipe:** To scroll through pages, lists, or switch between home screens.
- **Pinch-to-Zoom:** To zoom in or out on images or web pages.
- **Long Press:** To access contextual menus or move icons.

2. Connecting to Wi-Fi

To access the internet and download apps, connect to a Wi-Fi network:

1. Go to **Settings > Network & Internet > Wi-Fi**.
2. Toggle Wi-Fi **On**.
3. Select your desired Wi-Fi network from the list.
4. Enter the password if prompted and tap **Connect**.

3. Bluetooth Connectivity

Pair your tablet with Bluetooth devices like headphones or speakers:

1. Go to **Settings > Connected devices > Bluetooth**.
2. Toggle Bluetooth **On**.
3. Ensure your Bluetooth device is in pairing mode.
4. Select the device from the list of available devices to pair.





4. Using Cameras

The tablet features both front and rear cameras. Open the Camera app to take photos or record videos. You can switch between the front and rear cameras within the app interface.



9:58 AM



 Search...   



Google



Play Store



Figure 2: Tablet Front View. This image shows the Venturer Voyager 7 Inch Tablet in portrait orientation, displaying its screen with various app icons and a search bar, illustrating its user interface.

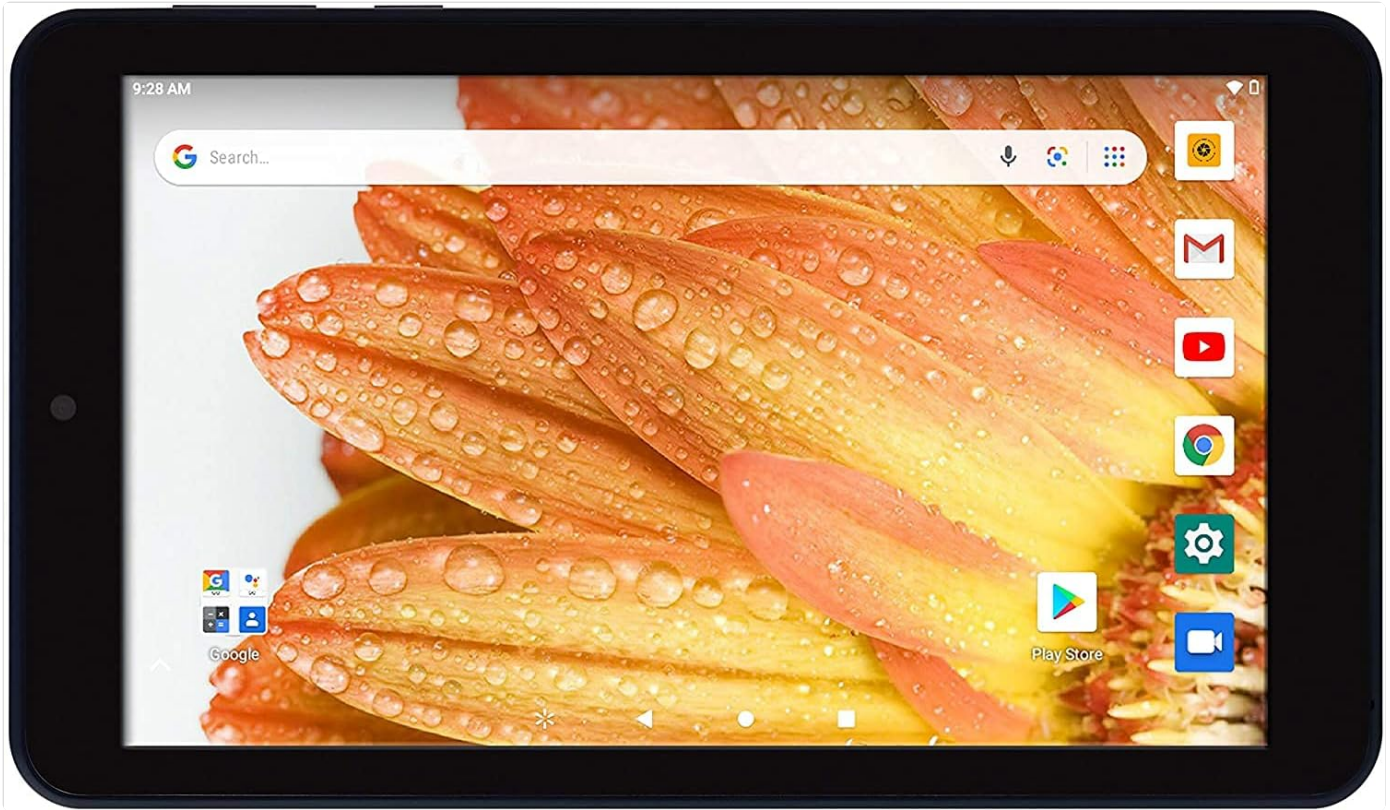


Figure 3: Tablet Landscape View. This image presents the Venturer Voyager 7 Inch Tablet in landscape orientation, showcasing its wider display suitable for media consumption and gaming.

MAINTENANCE

- **Cleaning:** Use a soft, lint-free cloth to clean the screen and body of the tablet. Do not use liquid cleaners or aerosols directly on the tablet.
- **Storage:** Store the tablet in a cool, dry place away from direct sunlight and extreme temperatures.
- **Battery Care:** To prolong battery life, avoid fully discharging the battery frequently. Charge the tablet regularly, and if storing for a long period, ensure it has at least a 50% charge.
- **Software Updates:** Periodically check for system updates in **Settings > System > System update** to ensure optimal performance and security.

TROUBLESHOOTING

Problem	Possible Cause	Solution
Tablet does not turn on.	Battery is depleted.	Connect the charger and allow it to charge for at least 30 minutes before attempting to power on.
Tablet is unresponsive.	Software crash.	Press and hold the Power On/Off button for 10-15 seconds to force a restart. If that fails, use a thin object (like a paperclip) to press the Reset button.

Problem	Possible Cause	Solution
Cannot connect to Wi-Fi.	Incorrect password, out of range, or router issue.	Verify Wi-Fi password, ensure you are within range of the router, restart your Wi-Fi router, or try connecting to a different network.
Apps are running slowly.	Too many apps open, low storage, or outdated software.	Close unused apps, clear app caches, free up storage space, or check for system updates.
Battery drains quickly.	High screen brightness, background apps, or poor signal.	Reduce screen brightness, close background apps, disable Wi-Fi/Bluetooth when not in use, or check for app updates.

SPECIFICATIONS

Voyager 7 BY VENTURER™	
7" LCD Touchscreen Écran tactile LCD	1024 x 600 Resolution Résolution
Android™ 10 (Go edition) Operating System Système opérateur	Quad-Core Processor Processeur
16 GB Storage Mémoire	5 Hours Battery Life Heures Vie de la batterie
2 GB RAM	2MP + 2MP Dual Cameras Deux appareils photos
	

Figure 4: Key Specifications. This image summarizes the main technical specifications of the Venturer Voyager 7 Inch Tablet, including screen size, resolution, operating system, processor, storage, RAM, battery life, and camera details.

Feature	Detail
Model Name	Venturer Voyager (VCT9F78 Q22NM0)
Display	7 Inches IPS Touch Display
Resolution	1024 x 600
Operating System	Android 10 Go Edition
Processor	Quad-Core Processor
RAM	2 GB
Internal Storage	16 GB

Feature	Detail
Expandable Storage	MicroSD up to 128 GB
Cameras	Front-facing, Rear-facing (5 MP Rear Webcam Resolution)
Connectivity	Dual-band Wi-Fi, Bluetooth
Battery Life	Approximately 5 hours
Charging Port	USB-C
Dimensions	20.2 x 12.3 x 4.4 cm
Weight	440 g



Figure 5: Model and Certification Details. This image shows the back of the Venturer Voyager 7 Inch Tablet, displaying the model number (VCT9F78), power input (5V === 1A), FCC ID (2IHCT9E78Q), and IC (3903A-CT9E78Q), along with the "Made in China" label.

WARRANTY AND SUPPORT

Your Venturer Voyager 7 Inch Tablet comes with a **Manufacturer's 1-year limited warranty**. This warranty covers defects in materials and workmanship under normal use. For warranty claims or technical support, please contact Venturer customer service. Keep your proof of purchase for warranty validation.

For further assistance, visit the official Venturer support website or contact their customer service line. Contact information can typically be found on the manufacturer's packaging or official website.