

## Deerma CM1900

# Deerma CM1900 Cordless Anti-Dust Mite Vacuum Cleaner User Manual

Model: CM1900

## 1. INTRODUCTION

Thank you for choosing the Deerma CM1900 Cordless Anti-Dust Mite Vacuum Cleaner. This manual provides essential information for the safe and efficient operation, maintenance, and troubleshooting of your device. Please read it thoroughly before use and retain it for future reference.

## 2. SAFETY INSTRUCTIONS

- Always ensure the vacuum cleaner is switched off before cleaning or performing maintenance.
- Do not use the appliance to vacuum water or other liquids, hot ashes, or sharp objects.
- Keep hair, loose clothing, fingers, and all parts of the body away from openings and moving parts.
- Do not expose the UV-C lamp directly to eyes or skin. The UV-C lamp is designed to activate only when the vacuum is in contact with a surface.
- Use only the charging adapter supplied with the appliance.
- Store the vacuum cleaner in a dry place when not in use.

## 3. PRODUCT OVERVIEW

The Deerma CM1900 is a versatile 2-in-1 cordless vacuum cleaner designed for effective dust and mite removal. It features a powerful suction system, a UV-C sterilization lamp, and multiple brush heads for various cleaning tasks.



**Figure 3.1:** The Deerma CM1900 handheld unit with its various attachments, including the crevice tool and brush head, ready for assembly.

## 4. SETUP AND CHARGING

### 4.1 Initial Charging

Before first use, fully charge the vacuum cleaner. Connect the charging cable to the charging base and plug it into a power outlet. Place the vacuum cleaner onto the charging base. The indicator lights will show the charging status.



**Figure 4.1:** The Deerma CM1900 vacuum cleaner securely placed on its charging base, indicating it is ready for charging or storage.

## 4.2 Attaching Accessories

The CM1900 comes with standard multi-functional brush heads. To attach a brush head, align it with the suction nozzle and push firmly until it clicks into place. To remove, pull the brush head away from the nozzle.

# 5. OPERATING INSTRUCTIONS

## 5.1 Powering On/Off

Press the power button located on the handle to turn the vacuum cleaner on. Press it again to turn it off.

## 5.2 Using the UV-C Anti-Mite Function

The integrated UV-C quartz glass lamp is designed to assist in killing mites and their eggs. This function activates automatically when the vacuum cleaner is in contact with a surface, such as a mattress or upholstery, ensuring safe operation.



**Figure 5.1:** The Deerma CM1900 in action, illustrating its UV-C anti-mite function on a bed surface, with visual cues indicating its operation.

### 5.3 General Cleaning

Use the appropriate brush head for the surface you are cleaning. The powerful suction is effective for collecting dust, snack debris, and other small particles from various surfaces including carpets, hard floors, and upholstery.



**Figure 5.2:** A user operating the Deerma CM1900 to clean debris from a sofa, demonstrating its handheld versatility and effective suction.

## 6. MAINTENANCE

### 6.1 Emptying the Dust Cup

Regularly empty the dust cup to maintain optimal suction performance. Press the release button to detach the dust cup from the main unit, then open it to discard collected debris.

### 6.2 Cleaning Filters

The CM1900 features a 5-fold filtration system including a stainless steel filter, HEPA filter, and filter cotton. These filters should be cleaned periodically. Remove the filters from the dust cup and tap them gently to remove dust. For thorough cleaning, rinse them under running water and ensure they are completely dry before reassembling.

### 6.3 Battery Care

To prolong battery life, avoid fully discharging the battery frequently. Charge the unit when the battery indicator shows low power. If storing the unit for an extended period, charge it periodically to maintain battery health.

## 7. TROUBLESHOOTING

- **No Power:** Ensure the unit is fully charged. Check if the power button is pressed correctly.
- **Low Suction:** Empty the dust cup. Clean or replace the filters. Check for blockages in the nozzle or brush head.
- **UV-C Lamp Not Activating:** Ensure the vacuum cleaner is in contact with a flat surface. The lamp is designed with a safety mechanism that prevents activation when lifted.
- **Unusual Noise:** Turn off the unit and check for any foreign objects lodged in the brush head or suction path.

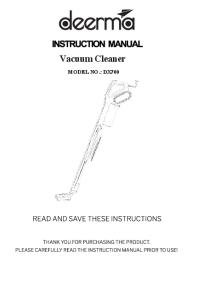
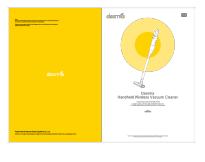
If problems persist after attempting these solutions, please contact customer support.

## 8. SPECIFICATIONS

Feature	Specification
Brand	Deerma
Model	CM1900
Form Factor	Handheld
Power Source	Battery Powered
Battery Type	Lithium-Ion
Wattage	350 watts
Is it cordless?	Yes
Filter Type	Cartridge (HEPA)
Included Components	Brush, HEPA Filter
Surface Recommendation	Carpet, Hard Floor, Upholstery

## 9. WARRANTY AND SUPPORT

For warranty information and customer support, please refer to the warranty card included with your product or visit the official Deerma website. Keep your purchase receipt as proof of purchase for any warranty claims.

	<p><b><a href="#">Deerma VC20 Plus Handheld Cordless Vacuum Cleaner User Manual</a></b></p> <p>Comprehensive user manual for the Deerma VC20 Plus handheld cordless vacuum cleaner. Includes instructions on operation, safety precautions, cleaning, maintenance, troubleshooting, and technical specifications.</p>
	<p><b><a href="#">Deerma VC31 Handheld Wireless Vacuum Cleaner User Manual</a></b></p> <p>Comprehensive user manual for the Deerma VC31 Handheld Wireless Vacuum Cleaner, covering safety precautions, technical specifications, installation, usage, maintenance, and troubleshooting.</p>
	<p><b><a href="#">Deerma DX700 Vacuum Cleaner Instruction Manual</a></b></p> <p>Comprehensive instruction manual for the Deerma DX700 vacuum cleaner, covering safety precautions, assembly, usage, cleaning, maintenance, and storage.</p>
	<p><b><a href="#">Deerma Vacuum Cleaner DX118C User Manual</a></b></p> <p>User manual for the Deerma Vacuum Cleaner DX118C, providing instructions on product structure, application methods, product parameters, packing list, troubleshooting, and cleaning/maintenance.</p>
	<p><b><a href="#">Deerma Perú Warranty Terms and Conditions: Coverage, Exclusions, and Product Guide</a></b></p> <p>Understand the official warranty terms and conditions for Deerma Perú products. This guide details coverage, exclusions, contact information, and a comprehensive table of product warranty periods.</p>
	<p><b><a href="#">Deerma Handheld Wireless Vacuum Cleaner VC01 User Manual</a></b></p> <p>Comprehensive user manual for the Deerma VC01 Handheld Wireless Vacuum Cleaner, covering setup, operation, cleaning, maintenance, troubleshooting, and technical specifications. Learn how to effectively use and care for your Deerma vacuum.</p>

**TERMINOS DE LA GARANTIA DEERMA PERU**

Los productos comercializados por Deerna Peru están garantizados contra defectos, tanto en material como en mano de obra, durante el periodo de garantía establecido según el tipo de producto (ver tabla de periodo de garantía) a partir de la fecha de compra al consumidor final según la factura o boleta de venta. En caso de presentarse algún inconveniente técnico, Deerna responderá por el correcto funcionamiento de los equipos

**1. Condiciones de la garantía**

Deerna garantiza el servicio de reparación gratuita de los productos comercializados en su territorio Peruano. Para hacer efectiva la garantía, el cliente deberá dirigirse a Centro de Atención al Cliente o a la oficina de servicio más cercana y/o solicitar al WhatsApp o al correo electrónico: [atencion.clientes@deernaperu.com](mailto:atencion.clientes@deernaperu.com), el horario de atención es de lunes a viernes de 10:00 a.m. y 10:00 p.m. y brindar la información solicitada. La garantía Deerna cubre los defectos de fabricación y/o de uso de los productos que se pudieren producir el uso normal y en condiciones óptimas de funcionamiento. En este caso los reparos se realizan en el centro de atención más cercano y se le cobrará el costo para el cliente. La reparación se realiza en la medida que el servicio de reparación no sea factible en el lugar de compra del producto, conforme a la disponibilidad de los servicios ofrecidos en el centro de atención al cliente. La garantía expira cuando finaliza el periodo de uso según la tabla de garantía.

**2. ¿Qué cubre la garantía PERU**

La garantía cubre los defectos de fabricación, a partir de la fecha de compra original (boleta o factura). Antes de ponerse en contacto con nuestro Centro de Atención al Cliente, asegúrate de haber realizado lo siguiente:

- Comprobar que el producto está correctamente armado y conectado.
- Revise primero el manual de usuario físico que viene en la caja del producto y/o manual virtual que se encuentra en la página web: <http://www.deernaperu.com.pe/paginas/importantes-de-uso> en la sección "Ayuda" o "solución de problemas", es porque te podrían ayudar a resolver el problema rápidamente.
- Efectuar la limpieza general (retirar el filtro Fp, tapete, comedor, soporte, cableado interior y exterior, etc) de las partes del equipo.

De forma general, se recomienda dirigirse a nuestro Centro de Atención al Cliente, donde se brindarán las orientaciones para corroborar que haya realizado los descartes detallados anteriormente, antes de realizar cualquier coordinación y/o citación a las oficinas para el intercambio del equipo y posterior evaluación.

## Deerma Perú Warranty Terms and Conditions: Coverage, Exclusions, and Product Guide

Understand the official warranty terms and conditions for Deerma Perú products. This guide details coverage, exclusions, contact information, and a comprehensive table of product warranty periods.

lang:es score:33 filesize: 435.05 K page count: 4 document date: 2024-06-17

**¿Qué cubre la garantía?**  
La garantía es válida para el primer comprador a partir de la fecha de compra original (bajo todo criterio). Antes de ponerse en contacto con nuestro Centro de Atención al Cliente, asegúrese de haber realizado lo siguiente:

- Compruebe que el dispositivo que ha adquirido cumple con el anuncio y conocido como "funcionamiento de diseño". Revisa que viene en la caja el producto y manual virtual que se encuentra en la página web <https://www.deemra.com/paginas/manuales-de-usuaria>
- Analice y "solucione" la avería, es posible que le ayudar a resolver el problema sea más sencillo y económico.
- Efectuar la impresión general (retirar el filtro Hg, conectarlo, soplarlo, cebáelo inferior y recto), de las partes del equipo.

Después de presentar la avería deberá comunicarse con nuestro Centro de Atención al Cliente, donde le brindarán el asesoramiento de comprobación que haya realizado los descartes establecidos anteriormente, antes de realizar cualquier coordinación y/o citación a las oficinas para el informe del equipo y posterior evaluación.

## Беспроводной пылесос Xiaomi Deerma Wireless Cleaner



## [pdf] Instructions

Инструкция Беспроводной пылесос Xiaomi Deerma Wireless Vacuum Cleaner CM1900 для пылесоса Delmar wireless mites vacuum cleaner Пылесос — купить в интернет магазине mi house ru с доставкой по Москве и всей России DEM asserts instructions 1481 1 |||

Xiaomi Deerma Wireless Cleaner 1. : 2. : : 0,4 : 120 : 50 : - : 253,7 : - : 2200 : 30 : -4 :

HEPA : 6000 :: -335 225 170 : -1800 : 350 265 210 : 2200 :- 3. 23 , . . . : . , . , . , . . .

lang:it score:30 filesize: 455.84 K page\_count: 7 document date: 0000-00-00

#### 4. Tabla de plazos de garantía por código y producto

[pdf]

Has clic para ver la tabla de garantíaOferta Especial ¡Tiempo Limitado!Tabla plazos garantia por codigo y productocdn shopify s files 1 0679 9766 3456 Tabla producto v 1718744527 |||

4. Tabla de plazos de garanta por cdigo y producto CODIGO DEM-FB15W DEM-KZ130W DEM-KZ200 BM-DH060B ... 2 MESES 12 MESES DEM-FD10W DEM-FD15W CM1300 CM1900 CM800 DX1000 TJ200 BY200 DX1000 DX115C DX118C DX118C\_GR DX600 DX700 DX700S DX888 DX900 NG TJ2...

lang:i-klingon score:20 filesize: 340.89 K page count: 2 document date: 2024-06-18