

Saved from manuals.plus.

Open the live page for links to other documents and user manuals.

[Manuals.plus](#) /

› [CUSIMAX](#) /

› CUSIMAX Stainless Steel 2 Slice Toaster User Manual

CUSIMAX CMWT-8150EB

CUSIMAX Stainless Steel 2 Slice Toaster User Manual

Model: CMWT-8150EB

INTRODUCTION

This manual provides essential information for the safe and efficient operation, maintenance, and troubleshooting of your CUSIMAX Stainless Steel 2 Slice Toaster. Please read this manual thoroughly before first use and retain it for future reference.



Figure 1: CUSIMAX Stainless Steel 2 Slice Toaster with toast.

IMPORTANT SAFETY INFORMATION

Always follow basic safety precautions when using electrical appliances to reduce the risk of fire, electric shock, and/or injury to persons, including the following:

- Read all instructions.
- Do not touch hot surfaces. Use handles or knobs.
- To protect against electrical shock, do not immerse cord, plugs, or toaster in water or other liquid.
- Close supervision is necessary when any appliance is used by or near children.
- Unplug from outlet when not in use and before cleaning. Allow to cool before putting on or taking off parts.
- Do not operate any appliance with a damaged cord or plug or after the appliance malfunctions, or has been damaged in any manner.
- The use of accessory attachments not recommended by the appliance manufacturer may cause injuries.
- Do not use outdoors.
- Do not let cord hang over edge of table or counter, or touch hot surfaces.
- Do not place on or near a hot gas or electric burner, or in a heated oven.

- Extreme caution must be used when moving an appliance containing hot oil or other hot liquids.
- Always attach plug to appliance first, then plug cord into the wall outlet. To disconnect, turn any control to "off", then remove plug from wall outlet.
- Do not use appliance for other than intended use.
- Oversize foods, metal foil packages, or utensils must not be inserted in a toaster as they may create a risk of fire or electric shock.
- A fire may occur if toasters are covered or touching flammable material, including curtains, draperies, walls, and the like, when in operation.
- Do not attempt to dislodge food when toaster is plugged in.
- Do not operate unattended.

SETUP

1. ****Unpacking****: Carefully remove the toaster and all packaging materials. Retain packaging for future storage or transport if needed.
2. ****Placement****: Place the toaster on a stable, flat, heat-resistant surface, away from flammable materials such as curtains or walls. Ensure adequate ventilation around the appliance.
3. ****Initial Cleaning****: Before first use, wipe the exterior with a damp cloth. Ensure the crumb tray is properly inserted.
4. ****Power Connection****: Plug the power cord into a standard 120V AC electrical outlet.

MAKE IT TO BE YOUR DAILY TOASTER



Figure 2: Key features of the CUSIMAX 2 Slice Toaster.

OPERATING INSTRUCTIONS

General Toasting

1. ****Insert Bread****: Place up to two slices of bread, bagels, or other items into the extra-wide slots. The 1.5-inch wide slots accommodate various bread types, including thick-cut bread, croissants, English muffins, and bagels.
2. ****Select Browning Setting****: Turn the browning control dial to your desired setting, from 1 (lightest) to 6 (darkest). The unique LED display will show the selected browning setting and count down the remaining toasting time.
3. ****Start Toasting****: Press down the toast lever until it locks into place. The toasting cycle will begin.
4. ****Retrieve Toast****: Once the toasting cycle is complete, the toast will automatically pop up. Use the extra-high lift lever to manually raise the toast higher, making it easier to retrieve smaller items without burning your fingers.

6 BROWNING SETTINGS FOR YOUR PREFER

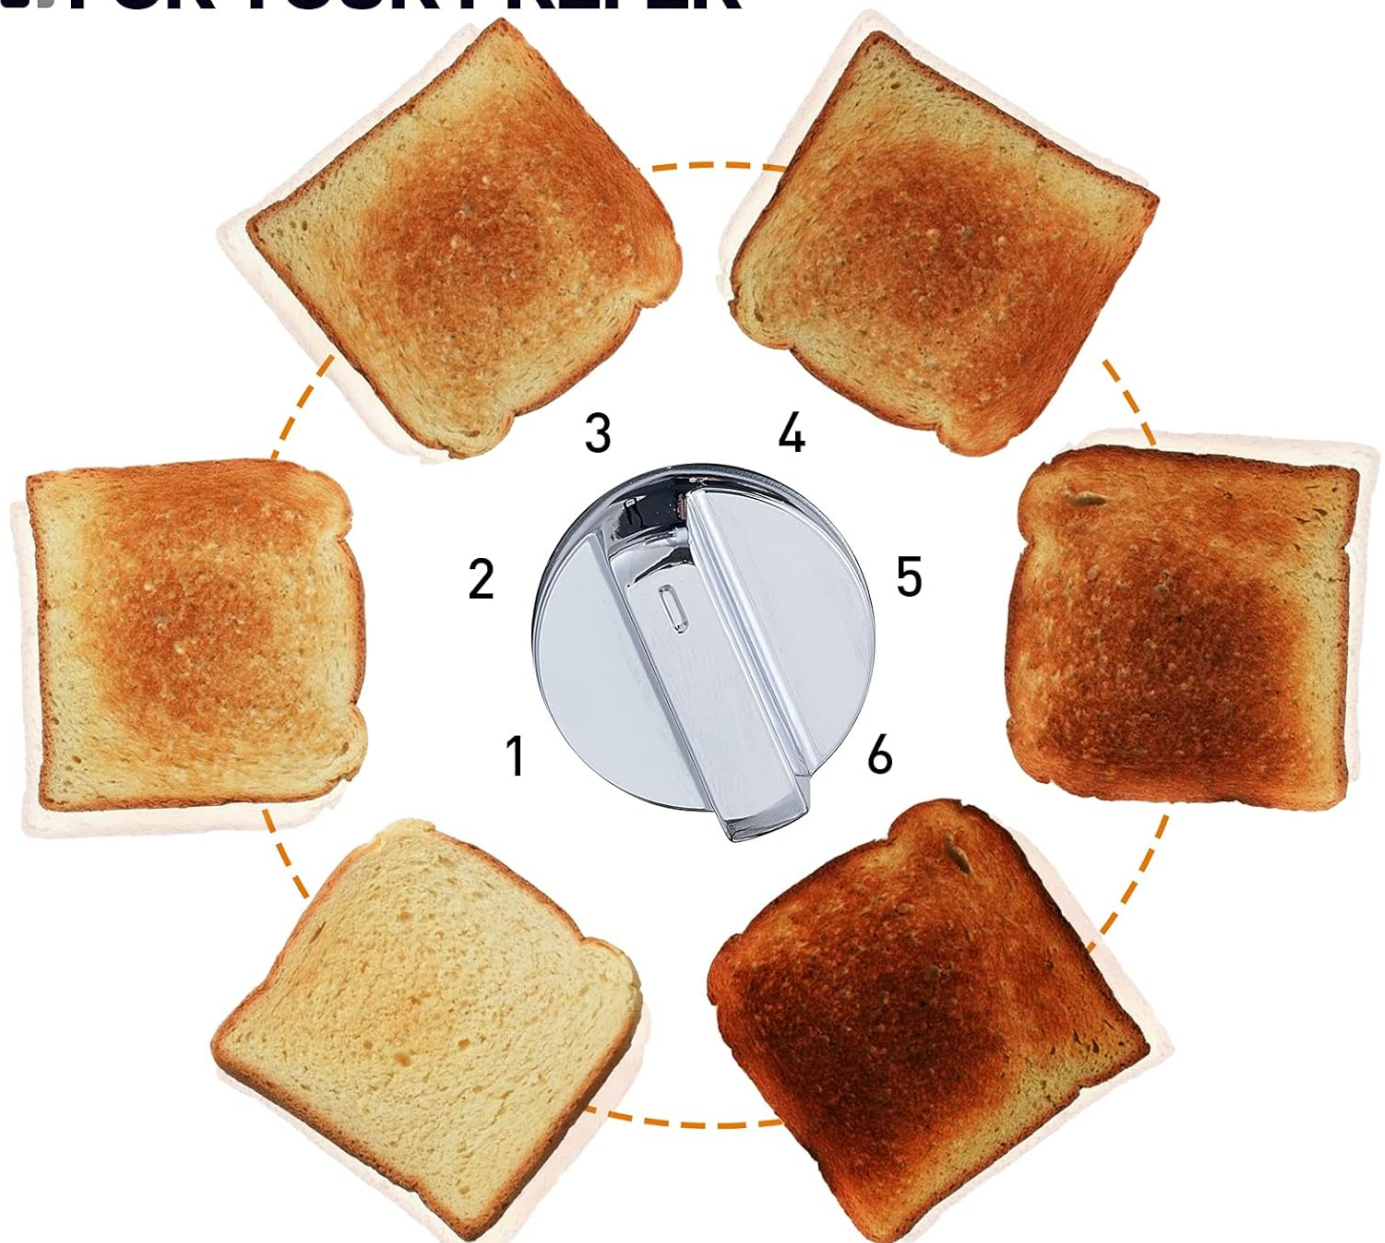


Figure 3: Visual guide to 6 browning settings.

Special Functions

The CUSIMAX Toaster features three dedicated function buttons, each indicated by a blue light when active:

- **CANCEL:** Press this button at any time to stop the toasting cycle and immediately pop up the toast.
- **BAGEL:** This function toasts the cut side of bagels while gently warming the outer side. Insert the bagel with the cut side facing inwards.
- **DEFROST:** Use this function to toast frozen bread. It automatically adjusts the toasting time to thaw and toast the bread without burning.

MULTIPLE FUNCTIONS IN YOUR NEED

CANCEL

Stop toasting anytime and pop up



BAGEL

Toast the cut side of bagel easily



DEFROST

Warm the frozen waffle
without burning



Figure 4: Explanation of the toaster's multiple functions.

Handy LED Display—CLEAR TO SEE



Figure 5: Detailed view of the SUPER-CLEAR LED Display.

MAINTENANCE AND CLEANING

Regular cleaning ensures optimal performance and extends the life of your toaster.

1. ****Unplug and Cool**:** Always unplug the toaster from the power outlet and allow it to cool completely before cleaning.
2. ****Empty Crumb Tray**:** The removable crumb tray collects bread crumbs at the bottom of the toaster. Slide out the tray from the back or side of the toaster, discard crumbs, and wipe the tray clean with a damp cloth. Ensure it is dry before reinserting.
3. ****Exterior Cleaning**:** Wipe the exterior stainless steel surface with a soft, damp cloth. For stubborn spots, a mild non-abrasive cleaner can be used. Do not use abrasive pads or harsh chemicals.
4. ****Interior Cleaning**:** Do not attempt to clean the inside of the toaster with any tools or sharp objects. If food becomes lodged, unplug the toaster and carefully turn it upside down to dislodge the item.

TROUBLESHOOTING

Problem	Possible Cause	Solution
Toaster does not turn on.	Not plugged in; power outage; faulty outlet.	Ensure toaster is securely plugged in. Check circuit breaker. Try a different outlet.
Toast is too light/dark.	Browning setting is incorrect for desired result.	Adjust the browning control dial to a higher (darker) or lower (lighter) setting.
Toast is unevenly browned.	Bread slices are too thick or unevenly cut; crumb tray is full.	Ensure bread fits well within slots. Empty and clean the crumb tray regularly.
Smoke coming from toaster.	Food lodged inside; crumb tray full of burnt crumbs.	Immediately unplug. Allow to cool. Remove any lodged food or clean crumb tray.

SPECIFICATIONS

Brand: CUSIMAX
Model Number: CMWT-8150EB
Color: Black Stainless 2 Slice
Material: Stainless Steel
Product Dimensions: 11.81"D x 7.87"W x 6.3"H
Wattage: 825 watts
Voltage: 120 Volts
Number of Slices: 2
Browning Settings: 6
Special Features: Variable Browning Control, LED Display, Extra-wide Slots, High-Lift Lever, Removable Crumb Tray, Cancel/Bagel/Defrost Functions

WARRANTY AND SUPPORT

CUSIMAX provides free Lifetime Customer Service and support for 18 Months Warranty. If you have any questions or suggestions during using, please contact CUSIMAX customer service. They will provide the best service and reply within 24 hours.

For support, please refer to the contact information provided with your product packaging or visit the official CUSIMAX website.

ASK A QUESTION ABOUT THIS MANUAL

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question and use this page’s manual context to help answer it.

Name

Anonymous

Email

you@example.com

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. [Privacy details](#).

Question

Example: How do I reset this device or fix this error?

Details

Model number, symptoms, what you tried, or the section of the manual you are using.

Submit question

Open the live page

<https://manuals.plus/asin/B094FYQ2Y6>

More documents and user manuals: **<https://manuals.plus/>**