

[Manuals.plus](#) /

› [Electrolux](#) /

› Electrolux LFB2AF88S Built-in Refrigerator User Manual

Electrolux LFB2AF88S

Electrolux LFB2AF88S Built-in Refrigerator User Manual

Model: LFB2AF88S

1. INTRODUCTION

This manual provides essential information for the safe and efficient use of your Electrolux LFB2AF88S built-in refrigerator. Please read these instructions carefully before installation and use, and keep them for future reference. This appliance is designed for domestic use only.

The Electrolux LFB2AF88S is an integrated 1-door refrigerator featuring static cooling and energy-efficient LED lighting. It includes a dedicated 4-star freezer compartment and offers convenient storage solutions such as glass shelves, an egg compartment, a bottle holder, and a vegetable container. The refrigerator section features automatic defrosting, while the freezer requires manual defrosting. The door is reversible for flexible installation.

2. SAFETY INFORMATION

Your safety and the safety of others are paramount. Always follow basic safety precautions, including the following:

- Ensure the appliance is properly earthed.
- Do not damage the refrigerant circuit.
- Do not use electrical appliances inside the food storage compartments unless they are of the type recommended by the manufacturer.
- Keep ventilation openings clear of obstruction.
- This appliance is not intended for use by persons (including children) with reduced physical, sensory or mental capabilities, or lack of experience and knowledge, unless they have been given supervision or instruction concerning use of the appliance by a person responsible for their safety.
- Children should be supervised to ensure that they do not play with the appliance.
- Before cleaning or maintenance, always unplug the appliance from the power supply.
- If the supply cord is damaged, it must be replaced by the manufacturer, its service agent, or similarly qualified persons to avoid a hazard.

3. SETUP AND INSTALLATION

3.1 Unpacking

Carefully remove all packaging materials. Inspect the appliance for any damage. Report any damage to your retailer immediately.

3.2 Location and Ventilation

This is a built-in appliance. Ensure the installation area meets the following niche dimensions:

- Recess Height: 880 mm
- Recess Width: 560 mm
- Recess Depth: 550 mm

Allow adequate ventilation around the appliance as specified in the installation instructions provided with the product. Proper ventilation is crucial for efficient operation and to prevent overheating.

3.3 Door Reversibility

The door of your refrigerator is reversible, allowing it to open from either the left or right side. Refer to the separate installation guide for detailed instructions on how to reverse the door swing, if desired.

3.4 Electrical Connection

Before connecting the appliance, ensure that the voltage and frequency indicated on the rating plate correspond to your household power supply. The appliance uses a Type E – 2 pin (French) power plug. The cable length is 2.4 meters. Always connect the appliance to a properly earthed socket.

3.5 First Use

Before placing food inside, clean the interior of the appliance with a mild detergent and warm water. After cleaning, allow the appliance to run for at least 4 hours before loading it with food to ensure it reaches the correct operating temperature.

4. OPERATING INSTRUCTIONS

4.1 Temperature Control

Your Electrolux LFB2AF88S refrigerator features adjustable temperature control. Use the thermostat dial or electronic controls (if applicable) inside the refrigerator compartment to set the desired temperature. Higher settings typically result in colder temperatures. Refer to the specific control panel diagram in your product's quick start guide for exact operation.

4.2 LED Lighting

The refrigerator is equipped with energy-efficient LED lighting, which illuminates the interior when the door is opened. LED lights are designed for long life and do not typically require replacement.



Image: Interior view of the refrigerator, showing the vertical LED light strip and various food items stored on shelves.

4.3 Storage Features

- **Glass Shelves:** The refrigerator includes 2 adjustable glass shelves for flexible storage of food items.
- **Egg Compartment:** A dedicated compartment for storing up to 6 eggs.
- **Bottle Holder:** A convenient holder designed to securely store bottles on the door.
- **Vegetable Container:** A transparent drawer at the bottom, ideal for keeping fruits and vegetables fresh.



Image: Close-up of the transparent vegetable container (crisper drawer) filled with various fresh vegetables like eggplant, fennel, and lettuce.



Image: Assortment of food storage containers and vacuum-sealed bags, demonstrating effective food preservation methods.

5. MAINTENANCE

5.1 Defrosting

- **Refrigerator Compartment:** The refrigerator compartment features automatic defrosting. Frost on the rear wall will melt periodically and drain through a channel to an evaporation tray at the back of the appliance. Ensure this drain hole is kept clear.
- **Freezer Compartment:** The freezer compartment requires manual defrosting. When the layer of frost reaches approximately 3-5 mm, defrost the freezer. To do this, switch off the appliance, remove all food, and allow the ice to melt naturally. Do not use sharp objects to remove ice. Once defrosted, clean and dry the interior before restarting the appliance.

5.2 Cleaning

Regular cleaning helps maintain the hygiene and efficiency of your refrigerator.

- **Interior:** Clean the interior regularly with a solution of lukewarm water and a mild, non-abrasive detergent. Rinse thoroughly and dry with a soft cloth. Avoid using harsh chemicals or abrasive cleaners.
- **Exterior:** Wipe the exterior surfaces with a soft, damp cloth. For stubborn marks, use a mild detergent.
- **Door Seals:** Clean the door seals regularly to ensure a tight seal. A dirty or sticky seal can prevent the door from closing properly, leading to increased energy consumption.
- **Condenser Coils:** Periodically clean the condenser coils at the back of the appliance (if accessible) with a soft brush or vacuum cleaner to remove dust and debris. This improves cooling efficiency.

6. TROUBLESHOOTING

Before contacting service, check the following common issues:

Problem	Possible Cause	Solution
---------	----------------	----------

Problem	Possible Cause	Solution
Appliance does not operate.	No power supply.	Check if the plug is correctly inserted into the socket. Check the fuse or circuit breaker.
Temperature is not cold enough.	Door not closed properly; too much food loaded; ambient temperature too high; thermostat setting too high.	Ensure door is fully closed. Reduce amount of food. Adjust thermostat to a colder setting. Ensure proper ventilation.
Excessive frost build-up in freezer.	Freezer door opened too frequently or not sealed properly.	Ensure freezer door is closed tightly. Reduce frequency of door openings. Manually defrost the freezer.
Water on the floor or inside the refrigerator.	Drain hole for automatic defrosting is blocked.	Clear the drain hole at the back of the refrigerator compartment.
Unusual noises.	Appliance not level; objects touching the back wall; normal operating sounds.	Adjust leveling feet. Ensure nothing is touching the back. Gurgling, humming, and cracking sounds are normal.

If the problem persists after checking these points, please contact Electrolux customer service.

7. SPECIFICATIONS

Feature	Specification
Model Name	LFB2AF88S
Brand	Electrolux
Type	Built-in Refrigerator (1-door)
Configuration	Integrated Refrigerator with 4-Star Freezer Compartment
Color	White
Net Refrigerator Volume	110 Liters
Freezing Capacity	2.6 kg/24h
Autonomy (Power Failure)	8.5 hours
Climate Class	SN-ST
Noise Level	37 dB
Annual Energy Consumption	178 kWh
Refrigerator Defrost System	Automatic
Freezer Defrost System	Manual

Feature	Specification
Number of Shelves	2 (Glass)
Adjustable Temperature Control	Yes
Power Source	Corded Electric
Voltage	230 Volts
Cable Length	2.4 meters
Recess Height	880 mm
Recess Width	560 mm
Recess Depth	550 mm
Appliance Height	873 mm
Appliance Width	548 mm
Appliance Depth	549 mm
EAN	7332543750672

8. WARRANTY AND SUPPORT

For detailed warranty information, please refer to the warranty booklet included with your appliance or visit the official Electrolux website for your region. Keep your purchase receipt as proof of purchase for warranty claims.

If you require technical assistance, spare parts, or wish to schedule a service appointment, please contact Electrolux customer service. You can find contact details on the Electrolux website or in the documentation provided with your appliance.

When contacting support, please have the model number (LFB2AF88S) and serial number of your appliance ready. This information is typically found on a rating plate inside the refrigerator compartment.

ASK A QUESTION ABOUT THIS MANUAL

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question and use this page’s manual context to help answer it.

Name

Anonymous

Email

you@example.com

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. [Privacy details](#).

Question

Example: How do I reset this device or fix this error?

Details

Model number, symptoms, what you tried, or the section of the manual you are using.

Submit question

Open the live page

<https://manuals.plus/asin/B094G56XW9>

More documents and user manuals: <https://manuals.plus/>