



Manuals.plus /

› JMEXSUSS /

› JMEXSUSS 168FT 600 LED White Christmas Lights Instruction Manual

JMEXSUSS EXS-S-0600

JMEXSUSS 168FT 600 LED White Christmas Lights Instruction Manual

Brand: JMEXSUSS | Model: EXS-S-0600

1. SAFETY INFORMATION

- This string light is made of 100% copper wire, designed to prevent overheating during prolonged use.
- The 30V low voltage power adapter is UL and CSA certified, ensuring safety for children and pets.
- **Important:** The transformer is **NOT** waterproof. Ensure it is placed in a dry location, protected from moisture.
- Always unplug the lights from the power source before installation, maintenance, or when not in use.
- Do not connect the string lights to the power supply while they are still in the packaging.
- Do not attempt to replace individual LEDs. The entire string is designed as a single unit.

2. PRODUCT OVERVIEW

The JMEXSUSS 168FT 600 LED White Christmas Lights are designed for both indoor and outdoor decorative lighting. These cool white string lights provide extensive coverage and feature multiple lighting modes, dimming options, and a timer function, all controllable via a wireless remote.

The lights come with a convenient storage reel to prevent tangling and simplify setup and takedown.



Figure 2.1: JMEXSUSS 168FT 600 LED White Christmas Lights in an outdoor setting.

3. PACKAGE CONTENTS

- 1x 600 LED White Christmas String Lights (168 feet) with a reel
- 1x Remote Control
- 1x UL Plug (Power Adapter)



Figure 3.1: Clear lights on the storage reel.



Figure 3.2: UL certified power adapter.



Figure 3.3: Wireless remote control.

4. SETUP INSTRUCTIONS

1. **Unpack:** Carefully unroll the string lights from the storage reel.
2. **Placement:** Determine the desired location for your lights. These lights are suitable for both indoor and outdoor use.
3. **Connect to Power:** Plug the UL certified power adapter into a standard electrical outlet. Ensure the transformer is in a dry, protected area if used outdoors.
4. **Connecting Multiple Strands:** Up to 5 strands of these lights can be connected end-to-end. To connect, align the male and female connectors and twist them securely.

Video 4.1: Demonstration of LED Christmas String Lights for outdoor decoration.

Video 4.2: JMEXSUSS White Christmas Tree Lights for indoor and outdoor use.

5. OPERATING INSTRUCTIONS

The string lights are operated using the included wireless remote control. Ensure the remote is aimed at the power adapter for optimal functionality (effective range up to 10ft).

5.1 Lighting Modes

The remote offers 8 distinct lighting modes:

1. Combination
2. In Waves
3. Sequential
4. Slo-Glo
5. Chasing/Flash
6. Slow Fade
7. Twinkle/Flash
8. Steady On



Figure 5.1: Remote control with 8 lighting modes.

5.2 Dimming Options

Adjust the brightness of the lights using the dimming buttons on the remote. Available brightness levels are 25%, 50%, 75%, and 100%.



Figure 5.2: Lights demonstrating 4 levels of brightness.

5.3 Timer Function

Activate the timer function via the remote. Once set, the lights will automatically turn on for 6 hours and then turn off for 18 hours, repeating the cycle daily.



Figure 5.3: Timer function (6 hours on, 18 hours off).

6. MAINTENANCE

- **Cleaning:** Disconnect from power before cleaning. Wipe lights gently with a soft, dry cloth. Do not use harsh chemicals or abrasive cleaners.
- **Storage:** Use the provided storage reel to neatly wind the lights when not in use. This prevents tangling and damage, ensuring they are ready for the next occasion. Store in a cool, dry place.
- **Waterproof Feature:** The string lights themselves are waterproof for outdoor use. However, always protect the power adapter/transformer from water.

7. TROUBLESHOOTING

- **Lights Not Turning On:**

- Ensure the power adapter is securely plugged into a working outlet.
- Check if the remote control batteries are functional and properly inserted.
- Verify that the remote is aimed directly at the power adapter.

- **Remote Not Responding:**

- Replace the remote control battery if necessary.
- Ensure there are no obstructions between the remote and the power adapter.

- **Flickering Lights:**

- Check all connections, especially if multiple strands are linked. Ensure they are twisted securely.
- Ensure the power source is stable.

- **Partial Section Not Lighting:**

- While individual LEDs are not replaceable, check for any visible damage to the wire or connections. If a section is permanently out, the entire strand may need replacement.

8. SPECIFICATIONS

Feature	Detail
Brand	JMEXSUSS
Model Number	EXS-S-0600
Color	White (Cool White)
Light Source Type	LED
Number of Light Sources	600
Item Length	168 Feet
Power Source	Corded Electric
Voltage	30 Volts
Wattage	5 watts
Material	Copper
Indoor/Outdoor Usage	Indoor, Outdoor
Special Feature	Timer, Remote Control, Dimmable, 8 Lighting Modes
Control Method	Remote Control
White Brightness	1600 Lumens
Item Weight	2.16 pounds

9. WARRANTY AND SUPPORT

For warranty information or technical support, please refer to the product packaging or contact JMEXSUSS customer service directly. Keep your purchase receipt for any warranty claims.

