

Manuals.plus /

› AIDITIYMI /

› AIDITIYMI FSR78 VAF7640 VAH0130 Replacement Remote Control User Manual for Yamaha Sound Bars

AIDITIYMI FSR78, VAF7640, VAH0130

AIDITIYMI FSR78 VAF7640 VAH0130 Replacement Remote Control User Manual

For Yamaha Sound Bar Models: ATS-1060, ATS-1070, YAS-106, YAS-207, YAS-107, ATS-1080, YAS-108, ATS-4080, YMS-408, YAS-408

1. INTRODUCTION

This manual provides comprehensive instructions for the AIDITIYMI FSR78 VAF7640 VAH0130 replacement remote control. This remote is designed to function as a direct replacement for various Yamaha Sound Bar models, offering seamless control without the need for complex programming. Please read this manual thoroughly to ensure proper usage and to maximize your experience with the remote control.

2. PRODUCT OVERVIEW

2.1 Key Features

- Direct replacement remote control.
- No programming required for operation.
- Compatible with a wide range of Yamaha Sound Bar models.

2.2 Remote Control Layout





Figure 1: AIDITIYMI FSR78 VAF7640 VAH0130 Replacement Remote Control. This image displays the black remote control with its various buttons for power, input selection, sound modes, and volume adjustments. The model numbers FSR78, VAF7640, VAH0130 are visible at the bottom.

The remote control features a standard layout for easy navigation and control of your Yamaha Sound Bar. Key buttons include:

- **Power Button ()**: Located at the top right, used to turn the sound bar on or off.
- **Input Selection Buttons (NET, HDMI, TV, ANALOG, BLUETOOTH)**: These buttons allow you to switch between different audio input sources.
- **Sound Mode Buttons (SURROUND, STEREO, 3D SURROUND, CLEAR VOICE)**: Select various audio processing modes for an optimized listening experience.
- **INFO Button**: Displays information about the current audio settings or input.
- **Special Function Buttons (BLUETOOTH STANDBY, DIMMER, NET RADIO, BASS EXTENSION)**: Control specific features of your sound bar.
- **SUBWOOFER (+/-)**: Adjusts the subwoofer level.
- **VOLUME (+/-)**: Controls the main volume level.
- **MUTE ()**: Silences the audio output.
- **NET RADIO (1, 2)**: Specific controls for Net Radio functions.

3. SETUP

3.1 Installing Batteries

To begin using your remote control, you will need to install two AAA batteries (not included). Locate the battery compartment on the back of the remote. Slide the battery cover downwards to open. Insert the batteries, ensuring the positive (+) and negative (-) terminals align correctly with the markings inside the compartment. Close the battery cover by sliding it back into place until it clicks.

3.2 Initial Pairing / Programming

This AIDITIYMI replacement remote control is designed to work immediately with compatible Yamaha Sound Bar models without any programming or pairing steps. Simply insert the batteries, and the remote is ready for use.

4. OPERATING INSTRUCTIONS

Point the remote control directly towards your Yamaha Sound Bar. Ensure there are no obstructions between the remote and the sound bar's sensor.

- **Power On/Off**: Press the red power button ().
- **Adjust Volume**: Use the VOLUME + and - buttons.
- **Mute Audio**: Press the MUTE () button. Press again to unmute.
- **Change Input**: Press the desired input button (e.g., HDMI, TV, BLUETOOTH).
- **Select Sound Mode**: Press SURROUND, STEREO, 3D SURROUND, or CLEAR VOICE to cycle through or select sound modes.
- **Adjust Subwoofer**: Use the SUBWOOFER + and - buttons to fine-tune bass levels.

5. COMPATIBLE MODELS

This replacement remote control is compatible with the following Yamaha Sound Bar models:

- ATS-1060
- ATS-1070
- YAS-106

- YAS-207
- YAS-107
- ATS-1080
- YAS-108
- ATS-4080
- YMS-408
- YAS-408

If your specific model is not listed, please refer to the product packaging or contact customer support for compatibility verification.

6. MAINTENANCE

6.1 Cleaning

To clean the remote control, use a soft, dry cloth. Do not use liquid cleaners, abrasive pads, or chemical solvents, as these may damage the surface or internal components.

6.2 Battery Replacement

Replace batteries when the remote control's response becomes sluggish or stops working. Always replace both batteries at the same time with new AAA batteries. Do not mix old and new batteries, or different types of batteries.

7. TROUBLESHOOTING

- **Remote not responding:** Ensure batteries are correctly installed and not depleted. Replace batteries if necessary.
- **Limited range:** Check for obstructions between the remote and the sound bar. Ensure the remote is pointed directly at the sound bar's sensor.
- **Specific functions not working:** Verify that your sound bar model supports the specific function you are trying to use.

If you encounter persistent issues or are unsure about compatibility, please contact the seller for assistance and suggestions.

8. SPECIFICATIONS

Product Dimensions	4.9 x 2 x 0.4 inches
Item Weight	1.51 ounces
Model Numbers	FSR78, VAF7640, VAH0130
Brand	AIDITIYMI
Color	Black
Power Source	2 x AAA Batteries (not included)

9. WARRANTY AND SUPPORT

For any questions regarding product functionality, compatibility, or troubleshooting not covered in this manual, please contact the seller or manufacturer directly. Specific warranty information may be provided with your purchase documentation. Keep your purchase receipt for warranty claims.