

LONPOO LP-D03

LONPOO Portable Boombox Instruction Manual

Model: LP-D03

INTRODUCTION

Thank you for purchasing the LONPOO Portable Boombox. This device offers versatile audio playback options including CD, Bluetooth, USB, AUX, and FM radio, all in a compact and portable design. Please read this manual carefully before using the product to ensure proper operation and to maximize your listening experience.

WHAT'S IN THE BOX

- LONPOO Portable CD Boombox (Model: LP-D03)
- 2-Prong US AC Power Cord (110V-240V)
- Auxiliary Cable
- User Manual

PRODUCT FEATURES

- **Multiple Playback Modes:** Supports CD, CD-R, CD-RW, MP3 CD, Bluetooth, USB, AUX-in, and FM Radio.
- **Built-in Stereo Speakers:** Equipped with 2x2W stereo speakers for clear audio.
- **Portable Design:** Compact and lightweight with a convenient carrying handle.
- **Power Options:** Operates via AC power or 4 x C-size batteries (not included) for portable use.
- **LCD Display:** Blue backlit LCD for easy viewing of mode and track information.
- **Headphone Jack:** 3.5mm headphone output for private listening.

PRODUCT OVERVIEW

Familiarize yourself with the various parts and controls of your LONPOO Portable Boombox.



Figure 1: Top Panel Controls and Features

This image shows the top view of the boombox, highlighting the Blue LCD display, CD Repeat (One/All/Off) function, AUX in port, USB port, Headphone jack, Metal Grill decoration, and EQ (Pop, Classic, Rock, Flat, Jazz) settings.



SUPPORT MP3 CD/ CD-R/ CD-RW



Hang Handle

FM Antenna

AC Port



Figure 2: Side and Rear Components

This image illustrates the Hang Handle, FM Antenna, and AC Port on the boombox. It also indicates support for MP3 CD/CD-R/CD-RW playback and the presence of 2x stereo speakers.

SETUP

Powering the Boombox

The LONPOO Portable Boombox can be powered by either AC electricity or batteries.

- **AC Power:** Insert the supplied 2-prong AC power cord into the AC port on the back of the boombox and plug the other end into a standard 110V-240V wall outlet.
- **Battery Power:** For portable use, open the battery compartment on the bottom of the unit and insert 4 x C-size (UM2) 1.5V batteries (not included), ensuring correct polarity.



Figure 3: Power Supply Options

This diagram illustrates both the battery compartment for 4 C batteries (not included) and the AC power connection (110V-240V 50/60Hz) for the boombox.

FM Antenna Setup

For optimal FM radio reception, extend the telescopic FM antenna located on the back of the unit. Adjust its position for the best signal clarity.



Figure 4: FM Antenna Extended

This image shows the boombox with its telescopic FM antenna fully extended for improved radio signal reception.

OPERATING INSTRUCTIONS

General Controls

- **Power Button ():** Press to turn the unit ON or OFF.
- **Volume Controls (VOL- / VOL+):** Adjust the master volume level.
- **Mode Button (MODE/EQ):** Press repeatedly to cycle through different playback modes: CD, Bluetooth (BT), USB, AUX, FM Radio. Long press to cycle through EQ presets (Pop, Classic, Rock, Flat, Jazz).
- **Tune/Skip Buttons (◀◀ / ▶▶):**
 - In CD/USB mode: Press to skip to the previous/next track.
 - In FM mode: Press to manually tune the frequency.

- **Play/Pause Button (▶▶/SCAN):**

- In CD/USB/Bluetooth mode: Press to play or pause playback.
- In FM mode: Long press to auto-scan and save available radio stations.

- **Repeat Button (REP/MEM):**

- In CD/USB mode: Press repeatedly to select repeat one track, repeat all tracks, or turn repeat off.
- In FM mode: Press to recall saved stations.



Figure 5: Control Panel Detail

This image provides a close-up view of the main control buttons, including power, volume, mode, track skip/tune, play/pause/scan, and repeat/memory functions.

CD Playback

1. Press the **OPEN/CLOSE** button to open the CD compartment lid.
2. Carefully place a CD (CD, CD-R, CD-RW, or MP3 CD) onto the spindle with the label side facing up.
3. Close the CD compartment lid firmly.
4. Press the **MODE** button until "CD" appears on the LCD display.
5. The CD will begin playing automatically. If not, press the ▶▶ button.
6. Use the ◀◀ / ▶▶ buttons to skip tracks.
7. Press the **REP** button to set repeat mode (single track, all tracks).



Figure 6: CD Compartment Open

This image shows the boombox with its CD compartment open, ready for disc insertion or removal.

Bluetooth Operation

1. Press the **MODE** button until "BT" (Bluetooth) appears on the LCD display. The unit will enter pairing mode, indicated by a flashing "BT" icon.
2. Enable Bluetooth on your mobile device (smartphone, tablet, etc.) and search for available devices.
3. Select "LONPOO LP-D03" from the list of devices.
4. Once paired, the "BT" icon will stop flashing and remain solid. You can now play audio from your device through the boombox.
5. Use the boombox's ◀◀/▶▶ buttons to control track skipping, or control directly from your paired device.



Figure 7: Bluetooth Connectivity

This image depicts the boombox wirelessly connected to a smartphone via Bluetooth, ready for audio streaming.

USB Playback

1. Insert a USB flash drive containing MP3 or WMA audio files into the USB port on the front of the boombox.
2. Press the **MODE** button until "USB" appears on the LCD display.
3. The unit will automatically detect and begin playing the audio files from the USB drive.
4. Use the ◀◀ / ▶▶ buttons to skip tracks.
5. Press the **REP** button to set repeat mode (single track, all tracks).



Figure 8: USB Playback Setup

This image shows the boombox positioned next to a USB flash drive, indicating its capability for USB audio playback.

AUX Input

1. Connect one end of the supplied auxiliary cable to the AUX-in port on the front of the boombox.
2. Connect the other end of the auxiliary cable to the headphone jack or audio output of your external audio device (e.g., MP3 player, smartphone).
3. Press the **MODE** button until "AUX" appears on the LCD display.
4. Play audio from your external device. The sound will be routed through the boombox's speakers.
5. Volume control is managed by the boombox's volume buttons and your external device's volume.

FM Radio

1. Extend the FM telescopic antenna for best reception.
2. Press the **MODE** button until "FM" appears on the LCD display.
3. **Auto Scan:** Long press the ►►/SCAN button to automatically scan and save available FM radio stations. The unit will store stations in memory.
4. **Manual Tune:** Press the ◀◀/►► buttons briefly to manually tune to a specific frequency.
5. **Recall Presets:** Press the **REP/MEM** button to cycle through saved radio stations.

Using Headphones

To listen privately, plug any standard 3.5mm stereo headphones (not included) into the "PHONES" jack on the front of the boombox. The internal speakers will automatically mute when headphones are connected.

MAINTENANCE

- **Cleaning:** Use a soft, dry cloth to clean the exterior of the unit. Do not use abrasive cleaners or solvents.
- **CD Lens Care:** If CD playback issues occur, use a commercially available CD lens cleaner disc.
- **Storage:** When not in use for extended periods, remove batteries and store the unit in a cool, dry place away from direct sunlight and extreme temperatures.
- **Ventilation:** Ensure proper ventilation around the unit during operation to prevent overheating. Do not block ventilation openings.

TROUBLESHOOTING

Problem	Possible Cause	Solution
No power	Power cord not connected; Batteries depleted or incorrectly inserted.	Check AC cord connection; Replace batteries or ensure correct polarity.
No sound	Volume too low; Headphones connected; Incorrect mode selected.	Increase volume; Disconnect headphones; Press MODE button to select correct source.
CD skips or doesn't play	CD dirty or scratched; CD inserted incorrectly; CD format not supported.	Clean CD with a soft cloth; Reinsert CD correctly; Ensure it's an audio CD or compatible MP3 CD.
Poor FM reception	Antenna not extended or positioned correctly; Weak signal area.	Fully extend and adjust the telescopic antenna; Try moving the unit to a different location.

Problem	Possible Cause	Solution
Bluetooth not pairing	Boombox not in BT mode; Device too far; Bluetooth not enabled on external device.	Ensure boombox is in BT mode; Move device closer; Enable Bluetooth on your device and rescan.

SPECIFICATIONS

Feature	Detail
Model Number	LP-D03
Product Dimensions (L x W x H)	9.3 x 8.3 x 4.5 inches (23.6 x 21.1 x 11.4 cm)
Item Weight	2.65 pounds (1.2 kg)
Connectivity Technology	Auxiliary, Bluetooth, USB
Speaker Type	Built-In Stereo Speakers (2x2W)
Supported Disc Formats	CD, CD-R, CD-RW, MP3 CD
Supported USB Formats	MP3, WMA


WARRANTY AND SUPPORT






LONPOO provides a **30-day hassle-free money-back guarantee** and a **1-year free replacement warranty** for this product. For any questions, technical support, or warranty claims, please contact LONPOO customer service through the retailer where you purchased the product or visit the official LONPOO website for contact information.

Please retain your purchase receipt as proof of purchase for warranty purposes.

© 2023 LONPOO. All rights reserved.

Related Documents - LP-D03

<div><div><div>LONPOO</div><div>User manual</div></div><div></div><div><div>Portable CD-MP3-RADIO Player</div><div></div></div></div>	<div>LONPOO LP-D03 Portable CD-MP3-RADIO Player User Manual</div> <div>User manual for the LONPOO LP-D03 Portable CD-MP3-RADIO Player, covering safety precautions, specifications, controls, and operation for CD, USB, AUX, BT, and FM radio modes.</div>
--	---

<div><div>EN</div><div><div>LONPOO</div><div>CD BOOMBOX LP-D01</div><div></div><div>USER MANUAL</div></div></div>	<p>LONPOO LP-D01 CD Boombox User Manual</p> <p>Comprehensive user manual for the LONPOO LP-D01 CD Boombox, detailing features, safety precautions, operation, and troubleshooting for this portable audio player.</p>
<div><div>Quick Start</div><div></div></div>	<p>LONPOO LP-D01 CD Player Quick Start Guide</p> <p>This guide provides instructions for setting up and operating the LONPOO LP-D01 CD player, including power, battery installation, source modes, volume adjustment, Bluetooth connection, radio, USB, and AUX IN.</p>
<div><div>Quick Start Guide</div><div></div></div>	<p>LONPOO Portable CD Player Boombox Quick Start Guide</p> <p>This quick start guide provides instructions for setting up and operating the LONPOO Portable CD Player Boombox, covering power, battery installation, source modes, disc playback, volume adjustment, radio, USB, Bluetooth, and AUX input.</p>
<div><div>LONPOO</div><div>DVD Player LP-099</div><div></div><div>USER'S MANUAL</div><div><small>To ensure the product to work in best status, Please read this user's manual carefully before operation and keep it well for future use.</small></div></div>	<p>LONPOO LP-099 DVD Player User Manual and Setup Guide</p> <p>Explore the LONPOO LP-099 DVD Player user manual for comprehensive instructions on setup, operation, troubleshooting, and maintenance. Learn about its Full-HD 1080p up-conversion, USB 2.0 input, multi-format playback (DVD, CD, VCD, MP3, JPEG), and remote control functions. This guide covers system connections, player settings, safety warnings, and specifications for optimal performance.</p>
<div><div>LONPOO</div><div>Blu-ray Disc™ Player MODEL: LP-100</div><div></div><div>User Manual</div></div>	<p>LONPOO LP-100 Blu-ray Disc Player User Manual</p> <p>Comprehensive user manual for the LONPOO LP-100 Blu-ray Disc Player, covering setup, operation, remote control functions, troubleshooting, and specifications.</p>