

Manuals+

[Q & A](#) | [Deep Search](#) | [Upload](#)

manuals.plus /

› [Logilink](#) /

› [Logilink UA0384 Full HD USB Webcam User Manual](#)

Logilink UA0384

Logilink UA0384 Full HD USB Webcam User Manual

Model: UA0384

INTRODUCTION

This manual provides detailed instructions for the setup, operation, maintenance, and troubleshooting of your Logilink UA0384 Full HD USB Webcam. Please read this manual thoroughly before using the device to ensure proper functionality and to maximize your user experience.

PRODUCT FEATURES

- Full HD 1080p resolution at 30 frames per second.
- 76° wide-angle lens for broader coverage.
- Integrated ring light with 3 adjustable brightness levels for optimal illumination.
- Automatic autofocus for clear image quality.
- Dual microphone with noise cancellation for clear audio.
- Automatic Low Light Correction, Exposure (AE), and White Balance (AWB).
- Plug and Play functionality, no driver installation required.
- Versatile mounting options: LCD screens, laptops, tabletops, or tripod.
- Compatible with Windows, Mac OS, Linux, Chrome OS, Xbox One, and Android.

PACKAGE CONTENTS

- Logilink UA0384 Full HD USB Webcam

SETUP

1. Unpacking and Placement

Carefully remove the webcam from its packaging. The webcam can be placed on a flat surface, clipped onto an LCD monitor or laptop screen, or mounted on a tripod using the integrated thread.



Image showing the Logilink UA0384 webcam, highlighting its compact design, integrated ring light, and flexible mounting options.

2. Connecting the Webcam

1. Locate an available USB port on your computer or device.
2. Plug the USB cable of the Logilink UA0384 webcam into the USB port.
3. The webcam is plug-and-play, meaning no additional drivers are typically required. Your operating system should automatically detect and install the necessary software.
4. Wait for your system to confirm that the device is ready for use. This may be indicated by a notification or a light on the webcam.

OPERATING INSTRUCTIONS

1. Basic Usage

Once connected, the webcam is ready for use with video conferencing applications (e.g., Skype, Zoom, Google Meet, FaceTime) or streaming software (e.g., OBS, XSplit, Twitch). Select the Logilink UA0384 as your preferred camera and microphone device within your application's settings.

2. Ring Light Operation

The integrated ring light provides additional illumination. To activate or adjust the brightness:

- Locate the touch-sensitive control on the webcam, typically around the ring light itself.
- Tap the control to cycle through the 3 brightness levels or to turn the light off.

3. Autofocus and Automatic Adjustments

The UA0384 features automatic autofocus, ensuring your image remains sharp even if you move. It also includes automatic low light correction, auto exposure, and auto white balance to adapt to various lighting conditions without manual intervention.

4. Dual Microphone

The built-in dual microphones with noise cancellation are designed to capture clear audio. Ensure the webcam is selected as the audio input device in your application settings for optimal sound quality.

MAINTENANCE

Cleaning the Lens and Body

- Ensure the webcam is disconnected from your computer before cleaning.
- Use a soft, lint-free cloth to gently wipe the lens. For stubborn smudges, a small amount of lens cleaning solution can be applied to the cloth (not directly to the lens).
- Wipe the body of the webcam with a dry or slightly damp soft cloth. Avoid using harsh chemicals or abrasive materials.

Storage

When not in use, store the webcam in a clean, dry place away from extreme temperatures and direct sunlight.

TROUBLESHOOTING

1. Webcam Not Detected

- **Check USB Connection:** Ensure the USB cable is securely plugged into both the webcam and the computer. Try a different USB port.
- **Restart Computer:** Sometimes a simple restart can resolve detection issues.
- **Test on Another Device:** If possible, try connecting the webcam to another computer to determine if the issue is with the webcam or your primary device.

2. No Video or Poor Video Quality

- **Application Settings:** Verify that the Logilink UA0384 is selected as the camera device in your video conferencing or streaming application.
- **Lighting Conditions:** Ensure adequate lighting. Use the integrated ring light if necessary.
- **Lens Cleanliness:** Clean the webcam lens as described in the Maintenance section.
- **System Resources:** Close other demanding applications that might be consuming system resources.

3. No Audio or Poor Audio Quality

- **Application Settings:** Confirm that the Logilink UA0384 is selected as the microphone device in your application settings.
- **System Volume:** Check your computer's microphone input volume settings.
- **Obstructions:** Ensure the microphones are not covered or obstructed.

SPECIFICATIONS

| Feature | Specification |
|--------------------------|--|
| Model Number | UA0384 |
| Brand | Logilink |
| Video Capture Resolution | 1080p Full HD |
| Frames Per Second | 30 fps |
| Field of View | 76° |
| Microphone Type | Dual Microphone with Noise Cancellation |
| Lens Type | 6 tempered glass and plastic elements |
| Aperture | f/2.1 |
| Focal Length | 7 cm |
| Special Features | Autofocus, Ring Light (3 levels), Low Light Correction |
| Connectivity | USB |
| Cable Length | 1.6 m |
| Product Dimensions | 2.44 x 1.81 x 2.91 inches |
| Item Weight | 5 ounces |

WARRANTY AND SUPPORT

For warranty information and technical support, please refer to the documentation provided with your purchase or visit the official Logilink website. Specific warranty terms may vary by region and retailer.