

Manuals+

[Q & A](#) | [Deep Search](#) | [Upload](#)

[manuals.plus](#) /

› [ALLIMITY](#) /

› [ALLIMITY CT-8035 CT8035 Replacement Remote Control Instruction Manual for Toshiba TV](#)

ALLIMITY CT-8035

ALLIMITY CT-8035 CT8035 Replacement Remote Control Instruction Manual

Model: CT-8035

INTRODUCTION

This manual provides essential instructions for the ALLIMITY CT-8035 CT8035 replacement remote control. This remote is designed to function as a direct replacement for your original Toshiba TV remote, offering full functionality without the need for complex programming. Please read this manual carefully before use.

Compatibility

The CT-8035 CT8035 remote control is compatible with a wide range of Toshiba TV models. No programming is required; simply insert the batteries, and it will operate immediately with the following models:

- 32D1665DG, 24W1753DG, 43L1763DA, 32D1763DG, 32W1763DA, 24WM763DG, 24D1665DG, 32L1763DG, 24W173DG, 43L1763DG, 24D1763332WW323433DG, 49L1763DG
- 32L1753DB, 24W1763DG, 32W1753DG, 32W1763DG, 32D1762DG, 65X9763DG, 32D1665DA, 32W1733DG, 32W1764DG, 40L343DG, 24W1754433333L1753DB, 28W1733DG

SETUP

Battery Installation

The remote control requires two AAA alkaline batteries (not included). Follow these steps to install them:

1. Locate the battery compartment cover on the back of the remote control.
2. Slide the cover downwards or press the latch and lift to open.
3. Insert two AAA alkaline batteries, ensuring the positive (+) and negative (-) terminals match the diagrams inside the compartment.
4. Replace the battery compartment cover by sliding it back into place until it clicks securely.



Image: Angled view of the ALLIMITY CT-8035 CT8035 remote control, showing its general design and button layout. This image illustrates the overall appearance of the device.

OPERATING INSTRUCTIONS

Once batteries are installed, the remote control is ready for immediate use with your compatible Toshiba TV. Point the remote directly at the TV's infrared receiver.

Key Functions





Image: Front view of the ALLIMITY CT-8035 CT8035 remote control, clearly displaying all buttons and their labels. This image is useful for identifying specific controls.

- **Power Button ()**: Turns the TV on or off.
- **Number Buttons (0-9)**: Directly select TV channels.
- **LIST Button**: Accesses the channel list.
- **Volume Up/Down (+/-)**: Adjusts the TV volume.
- **Mute Button ()**: Mutes or unmutes the TV sound.
- **Channel Up/Down (▲/▼)**: Changes TV channels sequentially.
- **MENU Button**: Opens the TV's main menu.
- **Navigation Buttons (Up, Down, Left, Right)**: Navigate through menus and options.
- **OK Button**: Confirms selections in menus.
- **BACK Button**: Returns to the previous screen or menu.
- **EXIT Button**: Exits the current menu or application.
- **HOME Button (△)**: Accesses the TV's smart home or main interface.
- **QUICK Button**: Provides quick access to frequently used functions.
- **GUIDE Button**: Displays the electronic program guide (EPG).
- **TEXT Button**: Activates or deactivates Teletext.
- **Subtitle Button**: Toggles subtitles on or off.
- **REC Button**: Initiates recording (if supported by TV and connected device).
- **Media Control Buttons (Play, Pause, Stop, Fast Forward, Rewind)**: Controls media playback.

MAINTENANCE

Cleaning

To maintain the remote control's performance and appearance:

- Wipe the surface with a soft, dry cloth.
- For stubborn dirt, slightly dampen the cloth with water or a mild, non-abrasive cleaner.
- Do not use harsh chemicals, solvents, or abrasive cleaning pads, as these can damage the remote's finish or internal components.

Battery Replacement

Replace the batteries when the remote control's response becomes sluggish or stops working. Always replace both batteries at the same time with new AAA alkaline batteries. Do not mix old and new batteries, or different types of batteries.

TROUBLESHOOTING

If you experience issues with your remote control, try the following troubleshooting steps:

- **Remote not responding:**
 - Check if the batteries are inserted correctly with the correct polarity (+/-).
 - Replace the batteries with fresh alkaline batteries.
 - Ensure there are no obstructions between the remote control and the TV's infrared sensor.
 - Make sure you are within the effective operating range (up to 10 meters).

- **Buttons not working:**

- If only specific buttons are not working, try cleaning the remote control as described in the Maintenance section.
- Ensure the remote is pointed directly at the TV.

- **Interference:**

- Strong light sources, such as direct sunlight or fluorescent lighting, can interfere with the infrared signal. Try to minimize such interference.

SPECIFICATIONS

Brand	ALLIMITY
Model	CT-8035 (QYSY-CT-8035-QYSY)
Compatible Devices	Television
Special Feature	Universal replacement
Batteries Required	Yes (2 x AAA, not included)
Connectivity Technology	Infrared
Number of Buttons	25
Controller Type	Button Control
Maximum Range	10 Meters
Product Dimensions	4 x 12 x 0.3 cm
Product Weight	50 g

WARRANTY AND SUPPORT

This product is covered by standard consumer warranty laws in your region. For specific warranty details or technical support, please refer to the retailer or manufacturer's official website where the product was purchased. Keep your proof of purchase for any warranty claims.