

ANERIMST AJ100

ANERIMST Outdoor Bluetooth Speaker with Flame Atmosphere

Model: AJ100 - Instruction Manual

1. INTRODUCTION

Thank you for purchasing the ANERIMST Outdoor Bluetooth Speaker with Flame Atmosphere. This device combines a high-quality Bluetooth speaker with a realistic flickering flame LED light, designed for outdoor and indoor use. Its waterproof and dustproof construction ensures durability in various environments. Please read this manual thoroughly before use to ensure proper operation and to maximize the product's lifespan.

2. SAFETY INSTRUCTIONS

- Do not expose the speaker to extreme temperatures or direct sunlight for extended periods.
- Avoid dropping or subjecting the device to strong impacts.
- Keep the speaker away from open flames or heat sources.
- Do not attempt to disassemble, repair, or modify the device. This will void the warranty and may cause damage or injury.
- Ensure the charging port cover is securely closed when not charging to maintain its IP65 waterproof rating.
- Use only the provided USB charging cable or a certified equivalent.
- Keep out of reach of children.

3. PACKAGE CONTENTS

Please check the package for the following items:

- ANERIMST Outdoor Bluetooth Speaker (Model AJ100)
- USB Charging Cable
- Instruction Manual

4. PRODUCT OVERVIEW

Familiarize yourself with the speaker's components and controls.



Figure 1: Speaker Controls and Ports

1. **Power Button:** Press and hold to turn on/off. Short press for Play/Pause.
2. **Previous Track / Volume Down Button:** Short press for previous track. Long press to decrease volume.
3. **Next Track / Volume Up Button:** Short press for next track. Long press to increase volume.
4. **Lamp Button:** Press to cycle through light modes (Flickering Flame, Constant Light, Off).
5. **USB C Charging Port:** For charging the speaker.
6. **Speaker Grille:** Audio output.
7. **Hanging Handle:** For portability and hanging the speaker.

5. CHARGING THE SPEAKER

Before first use, fully charge the speaker. The battery life is approximately 18 hours on a full charge.

- Open the protective cover of the USB C charging port.
- Connect the provided USB charging cable to the speaker's charging port and the other end to a USB power adapter (not included) or a computer USB port.
- The charging indicator light will illuminate (color may vary by model, typically red) to show charging is in progress.
- Charging typically takes 4-5 hours for a full charge. The indicator light will change or turn off when charging is complete.
- Once charging is complete, securely close the protective cover of the USB C port to maintain the speaker's waterproof rating.

6. SETUP AND OPERATION

6.1 Power On/Off

- To power on, press and hold the **Power Button** for approximately 3 seconds. You will hear an audible prompt.
- To power off, press and hold the **Power Button** for approximately 3 seconds. You will hear an audible prompt.

6.2 Bluetooth Pairing

To connect the speaker to your device (smartphone, tablet, computer):

1. Ensure the speaker is powered on and in Bluetooth pairing mode (a blue indicator light may flash, and you may hear a pairing prompt).
2. On your device, go to Bluetooth settings and enable Bluetooth.
3. Search for available devices. The speaker will appear as "ANERIMST AJ100" or similar.
4. Select the speaker from the list to pair. Once paired, you will hear a confirmation sound, and the indicator light will become solid blue.
5. The speaker will automatically attempt to reconnect to the last paired device when powered on.

6.3 Dual Pairing Function (TWS - True Wireless Stereo)

You can connect two ANERIMST AJ100 speakers together for a stereo sound experience.

Wireless Dual Pairing

Connect 2 for Superior Surround Sound



Figure 2: Dual Pairing Setup

1. Ensure both speakers are powered off.
2. Power on both speakers simultaneously. They will enter Bluetooth pairing mode.
3. On one of the speakers, double-press the **Power Button**. The speakers will attempt to connect to each other.
4. Once successfully paired with each other, you will hear a confirmation sound. One speaker will act as the master (left channel) and the other as the slave (right channel).
5. Now, connect your device to the master speaker via Bluetooth as described in section 6.2. The sound will play in stereo through both speakers.

6.4 Music Playback

- **Play/Pause:** Short press the **Power Button**.
- **Next Track:** Short press the **Next Track / Volume Up Button**.
- **Previous Track:** Short press the **Previous Track / Volume Down Button**.
- **Volume Up:** Long press the **Next Track / Volume Up Button**.
- **Volume Down:** Long press the **Previous Track / Volume Down Button**.

6.5 Light Modes

The speaker features two distinct light modes:



Figure 3: Flickering Flame Mode (Left) and General Light Mode (Right)

- Press the **Lamp Button** to cycle through the light modes:
 1. **Flickering Flame Mode:** Mimics a realistic dancing flame.
 2. **Constant Light Mode:** Provides a steady, warm light.
 3. **Light Off:** Turns off the LED light.

7. MAINTENANCE

- **Cleaning:** Wipe the speaker with a soft, damp cloth. Do not use abrasive cleaners or solvents.
- **Storage:** Store the speaker in a cool, dry place when not in use. Avoid extreme temperatures.
- **Battery Care:** To prolong battery life, charge the speaker at least once every three months if not used regularly. Do not allow the battery to fully discharge for extended periods.
- Ensure the charging port cover is sealed when not charging to protect against water and dust.

8. TROUBLESHOOTING

| Problem | Possible Cause | Solution |
|------------------------------------|--|---|
| Speaker does not power on. | Battery is depleted. | Charge the speaker for 4-5 hours. |
| Cannot pair with Bluetooth device. | Bluetooth is not enabled on your device. Speaker is too far from device. Speaker is already paired with another device. | Ensure Bluetooth is on. Move device closer to speaker. Disconnect from other devices or restart speaker. |
| No sound or low volume. | Volume on speaker or device is too low. Speaker is not properly paired. | Increase volume on both speaker and device. Re-pair the speaker. |
| Flame light is not working. | Light mode is off. Battery is low. | Press the Lamp Button to cycle modes. Charge the speaker. |
| Dual pairing fails. | Speakers not in TWS pairing mode. | Ensure both speakers are powered off, then power on and double-press the Power Button on one speaker to initiate TWS pairing. |

9. SPECIFICATIONS

| Feature | Specification |
|------------------------|-------------------------------|
| Model | AJ100 |
| Brand | ANERIMST |
| Product Dimensions | 4.4"L x 4.4"W x 7.4"H |
| Item Weight | 1.1 pounds (0.5 Kilograms) |
| Material | Plastic |
| Water Resistance Level | IP65 (Waterproof & Dustproof) |
| Battery Type | Rechargeable Lithium-Ion |
| Battery Life | Up to 18 Hours |
| Charging Time | 4-5 Hours (full charge) |
| Light Source Type | LED (120 LEDs) |
| Light Source Wattage | 5 Watts |
| Voltage | 5 Volts |
| Connectivity | Bluetooth 5.0 |
| Mounting Type | Tabletop Mount / Hanging |
| UPC | 742089456001 |

10. WARRANTY AND SUPPORT

ANERIMST products are designed for quality and reliability. For any questions, technical support, or warranty claims, please contact the manufacturer directly through their official channels or the retailer where the product was purchased. Please retain your proof of purchase for warranty purposes.

Related Documents - AJ100

| | |
|--|---|
|  | <p>Philips AJ100 Clock Radio User Manual</p> <p>User manual for the Philips AJ100 Clock Radio, providing instructions on setup, operation, radio tuning, alarm settings, sleep timer, maintenance, safety, and troubleshooting.</p> |
|  | <p>Samsung Multi Split WindFree™ Family Air Conditioners: Features, Specifications, and Compatibility</p> <p>Explore the Samsung Multi Split WindFree™ Family of air conditioners, featuring advanced cooling technology, energy efficiency, and smart controls. Find detailed specifications, compatibility guides, and model information for wall-mounted and cassette units.</p> |