

[Manuals.plus](#) /

> [VINABTY](#) /

> User Manual for VINABTY ERF3F80H Voice Remote Control

VINABTY ERF3F80H

User Manual for VINABTY ERF3F80H Voice Remote Control

Model: ERF3F80H

INTRODUCTION

This manual provides essential information for the proper setup, operation, and maintenance of your VINABTY ERF3F80H Voice Remote Control. This remote is designed as a replacement for various Hisense TV models, offering voice control capabilities and dedicated quick access buttons.





Image: Front view of the ERF3F80H Voice Remote Control, showing all buttons including number pad, navigation, volume, channel, and dedicated app buttons for Netflix, YouTube, and others.

SETUP

Battery Installation

The ERF3F80H remote control requires two AAA batteries for operation. Follow these steps to install them correctly:

1. Locate the battery compartment cover on the back of the remote control.
2. Slide the cover downwards or press the latch (if present) to open the compartment.
3. Insert two AAA batteries, ensuring that the positive (+) and negative (-) terminals align with the markings inside the compartment.
4. Replace the battery compartment cover by sliding it back into place until it clicks securely.







Image: Rear view of the remote control with the battery cover removed, illustrating the correct orientation for inserting two AAA batteries.

Pairing with Your TV

This remote is designed to be compatible with specific Hisense TV models. For initial setup and voice control functionality, pairing may be required. Refer to your Hisense TV's user manual for detailed instructions on how to pair a new remote control, especially for voice features. Typically, this involves navigating to the TV's settings menu and selecting "Remotes & Accessories" or a similar option to add a new device.

OPERATING INSTRUCTIONS

The ERF3F80H remote control provides comprehensive functionality for your Hisense TV. Below is a guide to its primary buttons and features:

Button/Feature	Function
Power Button	Turns the TV on or off.
Input	Selects the input source (e.g., HDMI 1, AV, TV).
Number Pad (0-9)	Directly enters channel numbers.
Navigation Pad (Up, Down, Left, Right, OK)	Navigates through menus and confirms selections.
Volume Up/Down (+/- VOL)	Adjusts the audio volume.
Channel Up/Down (+/- CH)	Changes TV channels.
Mute	Mutes or unmutes the TV audio.
Voice Assistant Button (Google Assistant icon)	Activates the voice assistant for commands and searches. Requires pairing.
Netflix, YouTube, Disney, Google Play, tubiii, prm video	Dedicated buttons for quick access to streaming applications.
Home Button (House icon)	Returns to the TV's main home screen.
Back Button (Arrow icon)	Goes back to the previous screen or menu.
Menu/Options Button (Three lines icon)	Opens the TV's menu or options.
Media Control Buttons (Play/Pause, Fast Forward, Rewind, Stop)	Controls media playback.



Image: A user operating the remote control while watching television, demonstrating typical usage.

MAINTENANCE

- **Cleaning:** Use a soft, dry cloth to clean the remote control. Do not use liquid cleaners or abrasive materials, as they may damage the surface or internal components.
- **Battery Replacement:** Replace batteries when the remote's response becomes sluggish or stops working. Always replace both batteries at the same time with new ones of the same type (AAA).
- **Storage:** If the remote will not be used for an extended period, remove the batteries to prevent leakage and potential damage to the remote. Store in a cool, dry place.
- **Avoid Exposure:** Do not expose the remote control to direct sunlight, high temperatures, humidity, or water.

TROUBLESHOOTING

Problem	Possible Cause & Solution
Remote not responding	<ul style="list-style-type: none"> • Batteries are dead or incorrectly inserted: Replace batteries with new AAA batteries, ensuring correct polarity (+/-). • Obstruction between remote and TV: Ensure there is a clear line of sight between the remote and the TV's IR receiver. • Remote needs re-pairing (for voice/smart features): Refer to your TV's manual for pairing instructions.
Voice control not working	<ul style="list-style-type: none"> • Remote not paired for voice: Ensure the remote is properly paired with your Hisense TV for voice functionality. • Microphone blocked: Ensure the microphone on the remote is not covered. • Internet connection issue: Voice commands often require an active internet connection on your TV.
Buttons are sticky or unresponsive	<ul style="list-style-type: none"> • Dirt or debris: Clean the remote surface with a soft, dry cloth. Avoid liquids. • Internal damage: If cleaning does not resolve the issue, the remote may be damaged and require replacement.

SPECIFICATIONS

Feature	Detail
Model Number	ERF3F80H
Sub Remote Model	EERF2K60H
Brand	VINABTY
Compatible Devices	Hisense TVs (U6G, A6G Series, and others listed below)
Power Source	2 x AAA Batteries (not included)
Product Dimensions	7.8 x 2 x 0.75 inches (approx. 19.8 x 5.1 x 1.9 cm)
Item Weight	3.2 ounces (approx. 90.7 grams)
Color	Black





Image: The ERF3F80H remote control shown with its approximate dimensions: 7.48 inches in length and 1.97 inches in width.







Image: Side profile of the ERF3F80H remote control, highlighting its ergonomic design.

COMPATIBLE HISENSE TV MODELS

This remote control is compatible with a wide range of Hisense TV models, including but not limited to the following series and specific models:

- **U6G Series:** 55U6G, 50U6G, 65U6G, 75U6G
- **U68G Series:** 50U68G, 55U68G, 65U68G, 75U68G
- **A6G Series:** 43A6G, 50A6G, 55A6G, 60A6G, 65A6G, 70A6G, 75A6G, 85A6G, 58A6G
- **A53FUA Series:** 55A53FUA, 43A53FUA, 50A53FUA, 75A53FUA, 65A53FUA, 60A53FUA
- **A66FUA Series:** 75A66FUA, 50A66FUA, 65A66FUA, 55A66FUA
- **A68G Series:** 43A68G, 50A68G, 55A68G, 60A68G, 65A68G, 70A68G, 75A68G, 85A68G
- **A6GQ Series:** 43A6GQ, 50A6GQ, 55A6GQ, 60A6GQ, 65A6GQ, 70A6GQ, 75A6GQ, 85A6GQ
- **U79KQ Series:** 55U79KQ, 75U79KQ

This remote is also a suitable replacement for EERF2K60H.

WARRANTY AND SUPPORT

For any issues not covered in this manual or for warranty inquiries, please contact the product seller or refer to the original purchase documentation. Keep your purchase receipt as proof of purchase.

