

Manuals+

[Q & A](#) | [Deep Search](#) | [Upload](#)

manuals.plus /

› [CHEERFUN](#) /

› [CHEERFUN 8.5-inch LCD Writing Tablet H013 Instruction Manual](#)

CHEERFUN H013

CHEERFUN 8.5-inch LCD Writing Tablet H013 Instruction Manual

Model: H013

INTRODUCTION

The CHEERFUN 8.5-inch LCD Writing Tablet is a portable electronic drawing board designed for children to draw, write, and doodle without the need for paper or pens. It features a pressure-sensitive screen that displays colorful lines and an erase button for clearing the screen. This manual provides essential information for the proper setup, operation, maintenance, and troubleshooting of your device.



Image: The CHEERFUN 8.5-inch LCD Writing Tablet, showcasing its green dinosaur design and a stylus. The screen displays various colorful drawings and mathematical equations.

SETUP

1. **Unboxing:** Carefully remove the LCD writing tablet and its accessories from the packaging. Verify that all components are present: the LCD writing tablet and the stylus.
2. **Initial Battery Check:** The tablet comes with a pre-installed Lithium Metal battery. Ensure the battery lock switch, usually located on the back of the tablet, is in the 'unlocked' position for operation.
3. **Stylus Attachment:** The stylus is typically tethered to the tablet or can be securely stored in a designated slot on the device. Ensure it is properly secured to prevent loss.

OPERATING INSTRUCTIONS

1. **Drawing and Writing:** Use the included stylus to draw or write directly on the LCD screen. The screen is pressure-sensitive, allowing for varying line thickness based on pressure applied.
2. **Erasing Content:** To clear the screen, press the erase button, often shaped like a dinosaur nose on this model. This

will instantly clear all content from the display.

3. **Screen Lock Function:** A lock switch is located on the back of the tablet. Slide this switch to the 'lock' position to prevent accidental erasing of content. To erase, slide the switch back to the 'unlock' position.
4. **Stylus Storage:** When not in use, place the stylus back into its designated holder on the tablet to prevent misplacement.



Mess Free Drawing

VS

Harmful Chemicals

The image illustrates the benefits of the CHEERFUN LCD Writing Tablet. The main scene shows a woman and a child happily using the tablet, which displays a colorful drawing of a dinosaur, a sun, and musical notes. The child is holding a green stylus. Below this, three circular insets show children engaged in traditional drawing activities: one child is drawing on a wall, another is painting their face, and a third is drawing on the floor. A large green arrow points from the 'VS' text down to the 'Harmful Chemicals' text, contrasting the mess-free digital drawing with traditional methods that often involve harmful substances.

Image: A child engaged in drawing on the CHEERFUN LCD Writing Tablet, highlighting the product's mess-free design for creative activities.



Image: Two children using the CHEERFUN LCD Writing Tablet in different travel settings – one in a car and another on an airplane – showcasing its portability and suitability for journeys.

MAINTENANCE

- **Cleaning:** Use a soft, lint-free cloth to gently wipe the screen and body of the tablet. Avoid using abrasive cleaners, solvents, or excessive moisture, as these can damage the device.
- **Battery Replacement:** When the erase function no longer works, it indicates that the battery needs replacement. Locate the battery compartment on the back of the tablet, typically secured with a small screw. Use a screwdriver to open it, replace the old Lithium Metal coin cell battery with a new one of the same type, and securely close the compartment.
- **Storage:** Store the tablet in a dry place away from direct sunlight and extreme temperatures. Avoid placing heavy objects on the tablet or bending it, as this can damage the screen.
- **Durability:** While designed to be robust for children's use, avoid dropping the tablet from significant heights or subjecting it to strong impacts.

TROUBLESHOOTING

Problem	Possible Cause	Solution
Screen does not clear when erase button is pressed.	Battery lock switch is engaged, or battery is depleted.	Check the lock switch on the back of the tablet and ensure it is in the 'unlock' position. If the problem persists, replace the battery.
Lines are faint or not appearing.	Stylus not making proper contact, or screen damage.	Ensure you are using the provided stylus and applying adequate pressure. If the issue persists, contact customer support.

SPECIFICATIONS

- **Brand:** CHEERFUN
- **Model Number:** H013
- **Screen Size:** 8.5 inches
- **Product Dimensions:** 13.75 x 9.22 x 0.67 inches
- **Item Weight:** 3.74 ounces
- **Material Type:** Acrylonitrile Butadiene Styrene (ABS)
- **Battery:** 1 Lithium Metal battery (included)
- **Color:** Green (for this variant)

Upgrade Screen

✓ 50% Brighter

✓ Obvious Line



Image: A visual comparison highlighting the CHEERFUN LCD Writing Tablet's screen, which produces brighter and more distinct lines compared to other brands.

WARRANTY AND SUPPORT

Warranty information for the CHEERFUN 8.5-inch LCD Writing Tablet is typically provided with your purchase documentation. Please refer to the packaging or included inserts for specific warranty terms and conditions. For technical support or further assistance, please visit the official CHEERFUN brand store or website. Contact information may also be available on the product packaging.