

[Manuals.plus](#) /

› [Cheerble](#) /

› Cheerble Interactive Cat Ball Toy M1 User Manual

Cheerble C0419

Cheerble Interactive Cat Ball Toy M1 User Manual

Model: C0419

1. INTRODUCTION

The Cheerble Interactive Cat Ball Toy M1 is an automatic moving ball designed to engage indoor cats and kittens. It features multiple interaction modes and LED lights to stimulate a cat's natural hunting instincts.

This manual provides essential information for the safe and effective use of your new interactive toy.



Image: The Cheerble Interactive Cat Ball Toy M1 in red, showcasing its compact design.

2. WHAT'S IN THE BOX

Verify that all components are present in the packaging:

- Cheerble Interactive Cat Ball Toy M1
- USB Charging Cable
- Small Bell Accessory (optional attachment)
- User Manual (this document)

What's in the Box



Image: The Cheerble Cat Ball Toy M1, its charging cable, bell accessory, and user manual laid out next to its packaging box.

3. SETUP

3.1 Initial Charging

Before first use, fully charge the Cheerble Cat Ball. Connect the provided USB charging cable to the charging port on the ball and to a compatible 5V=1A USB power adapter (not included). A full charge typically takes approximately 1 hour.

3.2 Powering On/Off and Mode Selection

To power on the device, press and hold the button on the ball for a few seconds until the LED lights activate. To cycle through the interaction modes, briefly press the button. To power off, press and hold the button again until the lights turn off.

3.3 Attaching the Bell (Optional)

A small bell accessory is included. If desired, attach the bell to the designated loop on the ball. Ensure it is securely fastened to prevent detachment during play.

4. OPERATING INSTRUCTIONS

4.1 Interaction Modes

The Cheerble Cat Ball M1 features three distinct interaction modes, indicated by different LED light colors:

- **Normal Mode (Blue Light):** Provides active rolling and bouncing, suitable for energetic and curious cats.
- **Passive Mode (Green Light):** Activates bouncing only upon contact, ideal for active hunter cats.
- **Gentle Mode (Purple Light):** Offers slow rolling or shaking on contact, designed for shy or timid cats.

3 Interaction Modes

Normal

Active rolling & bouncing
for energetic & curious cats



Passive

Bouncing on contact
for active hunter cats



Gentle

slow rolling, or shaking on
contact
for shy & timid cats



Image: Visual representation of the three interaction modes with corresponding cat behaviors.

4.2 Play-and-Rest Cycle

To prevent overstimulation and conserve battery, the ball operates in a play-and-rest cycle. After 10 minutes of continuous operation, it will automatically enter a 30-minute rest mode. The toy can be reactivated by touch during the rest period. After 30 minutes, it will resume operation for another 10 minutes. A fully charged ball can sustain approximately 4 such cycles.

Play Rest Balance

It enters into Rest Mode every 10 minutes and reactivates with time or on touch.



Image: The Cheerble ball in rest mode, reactivating upon a cat's touch.

4.3 Automatic Obstacle Avoidance

Equipped with an intelligent motion sensor, the Cheerble Cat Ball M1 can detect obstacles and tight spaces. It will automatically reverse direction or move away when encountering barriers, maintaining unpredictable movement to keep your cat engaged and preventing it from getting stuck.

4.4 Recommended Play Surfaces

For optimal performance, use the Cheerble Cat Ball M1 on hard, smooth surfaces such as wooden floors, tile, or low-pile carpets. It is not recommended for use on high-pile carpets, as this can impede its movement and functionality.

Playspace Suggestion

Cardboard Box




Mode: ● ● ●

Wooden Floor




Mode: ● ● ● ●

Tile Floor

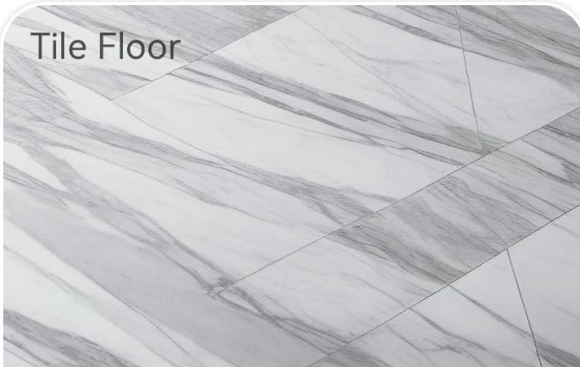

Mode: ● ● ● ●

Low Pile Carpet

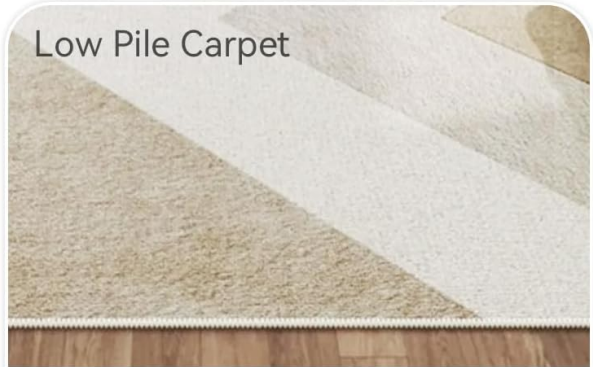

Mode: ●

Notice: this item is not suitable for play on high pile carpet.

Image: Examples of suitable play environments for the Cheerble Cat Ball M1, including hard floors and low-pile carpets.

5. CHARGING

When the battery is low, the LED lights may dim or the ball may stop moving. Connect the provided USB cable to the charging port. The ball will indicate charging status (e.g., a specific light pattern). Ensure you use a 5V=1A adapter for safe and efficient charging. Using adapters with higher voltage or amperage may damage the device.

Buyer Beware

Important: use only the specified **5V=1A** adapter and original charging cable for safety and best performance.
Do not exceed recommended voltages to avoid damage.



Output
5V=1A



Output:
5V=3A
9.0V=3.0A
15.0V=3.0A
20.0V=3.25A
.....

Image: Guidance on using the correct 5V=1A charging adapter to prevent damage.



Image: The Cheerble ball being charged via its USB cable.

6. MAINTENANCE

Keep the ball clean by wiping it with a dry or slightly damp cloth. Do not immerse the ball in water or use harsh cleaning agents, as it is not waterproof. Regularly check the charging port for debris.

7. TROUBLESHOOTING

Problem	Possible Cause	Solution
Ball does not turn on or move.	Low battery; not powered on correctly.	Charge the ball fully. Press and hold the power button to turn on.
Ball gets stuck frequently or does not move well.	Operating on unsuitable surface (e.g., high-pile carpet); obstacle interference.	Move the ball to a hard, smooth surface. Clear any obstacles in the play area.
LED lights are dim or inconsistent.	Low battery.	Recharge the ball.
Ball stops moving after 10 minutes.	Normal play-and-rest cycle activated.	Touch the ball to reactivate it, or wait for the 30-minute rest period to conclude.

8. SPECIFICATIONS

- **Product Dimensions:** 1.65 x 1.65 x 1.65 inches

- **Item Weight:** 1.28 ounces
 - **Model Number:** C0419
 - **Batteries:** 1 Lithium Ion battery (included)
 - **Material Type:** Synthetic fiber
 - **Recommended Uses:** Playing (Indoor)
 - **Water Resistance Level:** Not Water Resistant
 - **Target Species:** Cat (Kittens to Adult Cats)
-

9. SAFETY INFORMATION

- This product is designed for cats. It is not suitable for dogs, especially small dogs, as it may pose a choking hazard if crushed.
 - Do not expose the ball to water or moisture, as it is not waterproof.
 - Use only the specified 5V=1A charging adapter and original charging cable for safety and optimal performance. Exceeding recommended voltages can cause damage.
 - Supervise your pet during play, especially when first introducing the toy.
 - Keep the toy away from small children.
-

10. WARRANTY AND SUPPORT

Cheerble provides after-sales service for this product. If you receive a defective ball or charging cable, please contact Cheerble customer support for assistance. A replacement will be provided if necessary.

For further support or inquiries, please visit the official Cheerble website or contact their customer service department.