Manuals+

Q & A | Deep Search | Upload

manuals.plus /

- Cheerble /
- > Cheerble Smart Interactive Cat Toy User Manual

Cheerble C0419

Cheerble Smart Interactive Cat Toy User Manual

Model: M1 (C0419) Brand: Cheerble

1. Introduction

The Cheerble Smart Interactive Cat Toy is designed to provide engaging and stimulating play for cats and kittens. This automatic moving, bouncing, and rolling ball features interactive modes, LED lights, and a bell to attract and entertain your pet, stimulating their natural hunting instincts.

What's in the Box

Cheerble Ball M1 Cheerble[®] 1.7in / 42mm Irregular rolling, Motion: Roll only bouncing or shaking Auto Rest / Yes No Touch Reactivation: LED Lights: No Rechargeable: Yes No Bell Yes No

The package includes the Cheerble Smart Interactive Cat Toy (grey ball), one small bell attachment, one USB charging cable, and one user manual.


2. SETUP

Charging the Device



To charge the Cheerble ball, connect the provided USB cable to the charging port on the ball. A full charge takes approximately 1 hour and provides power for up to 4 play cycles.

Important: Use only a specified 5V=1A adapter and the original charging cable for optimal safety and performance. Do not exceed recommended voltages to prevent damage to the device.

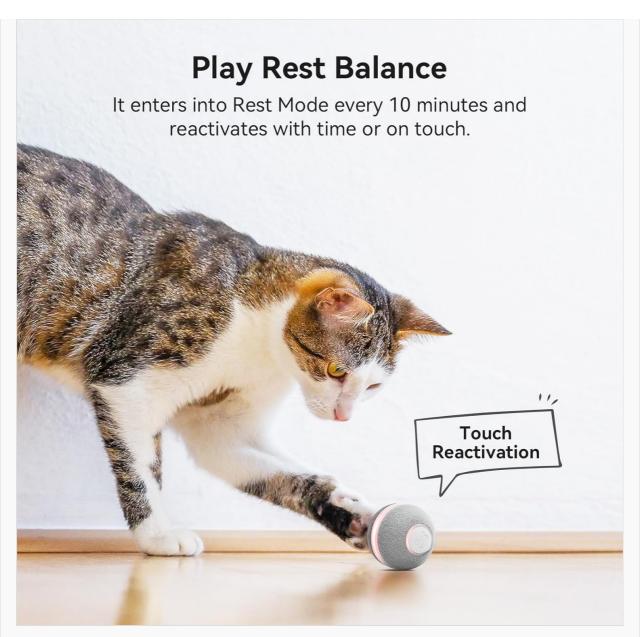


Ensure to use the correct power adapter specifications for charging.

Powering On/Off and Mode Selection

Buyer Beware

Important: use only the specified 5V=1A adapter and original charging cable for safety and best performance.

Do not exceed recommended voltages to avoid damage.

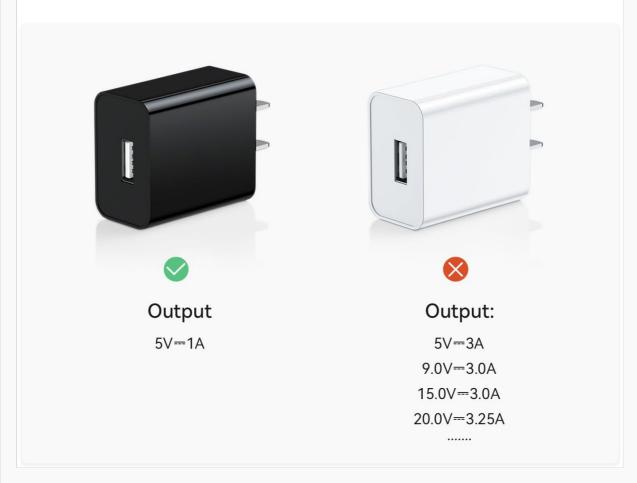


Press the central button to power on the ball and cycle through the interactive modes. To power on the device, press the central button on the ball. Subsequent presses will cycle through the available interactive modes. To power off the device, press and hold the central button until the lights turn off.

3. OPERATING INSTRUCTIONS

Interactive Modes

The Cheerble ball features three distinct interactive modes to suit different cat personalities and play styles.


3 Interaction Modes

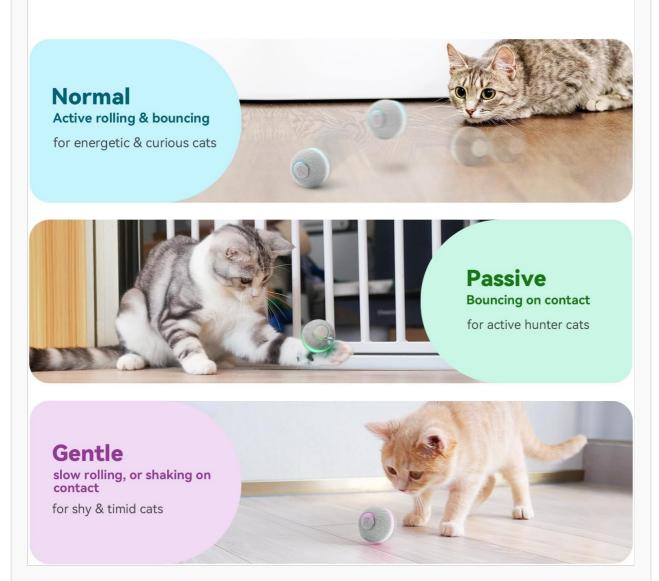

- Normal Mode: Provides active rolling and bouncing, ideal for energetic and curious cats.
- Passive Mode: Activates bouncing only on contact, suitable for active hunter cats.
- Gentle Mode: Offers slow rolling or shaking on contact, designed for shy and timid cats.

Play-and-Rest Cycle

To prevent overstimulation and ensure balanced play, the Cheerble ball operates on a play-and-rest cycle. After 10 minutes of continuous operation, the ball will automatically enter a 30-minute rest mode. It can be reactivated by touch during this rest period. The ball will resume its play cycle automatically after 30 minutes of rest. The maximum running time is 160 minutes.

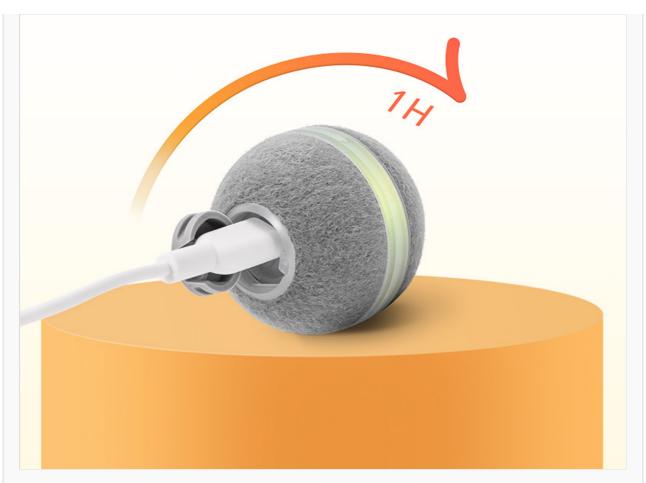

The ball enters rest mode every 10 minutes and reactivates with time or on touch.

Automatic Obstacle Avoidance

Equipped with an intelligent motion sensor, the Cheerble ball can detect obstacles and tight spaces. It will automatically reverse direction and move away when it encounters an obstruction, ensuring continuous and unpredictable play without getting stuck in corners.

Recommended Play Surfaces



The Cheerble ball performs best on hard, smooth surfaces such as wooden floors and tile floors. It is also suitable for low pile carpets. This item is not suitable for play on high pile carpet.

4. MAINTENANCE

Cleaning and Care

The surface of the Cheerble cat ball is made of synthetic fiber. While it is designed to be easy to clean, please note that the ball is **not waterproof**. Avoid submerging it in water or exposing it to excessive moisture. Regularly remove any accumulated hair or debris from the ball's surface to maintain optimal performance.

5. TROUBLESHOOTING

- Ball not moving or responding: Ensure the ball is fully charged. A full charge takes approximately 1 hour. If the ball is in rest mode, touch it to reactivate.
- Ball getting stuck frequently: The ball is equipped with obstacle avoidance. However, performance may vary on certain surfaces or in very cluttered environments. Ensure play is on hard floors or low pile carpets.
- **Reduced battery life:** Ensure the ball is fully charged before each use. Battery performance can be affected by usage patterns and environmental factors.
- **Product appears defective:** If you receive a defective ball or charging cable, please contact customer support for assistance.

6. Specifications

Feature	Detail
Model Name	M1
Item Model Number	C0419
Item Weight	1.32 ounces (37.5 Grams)
Item Dimensions (LxWxH)	1.65 x 1.65 x 1.65 inches
Material	Synthetic Fiber
Battery	1 Lithium Ion battery (required)
Charging Time	Approx. 1 hour
Max Running Time	160 minutes (in cycles)
Target Audience	Cats, house-cats
Specific Uses	Indoor

7. WARRANTY AND SUPPORT

Warranty Information

This Cheerble product comes with a **1-Year Warranty** from the date of purchase. Please retain your proof of purchase for warranty claims.

Customer Support

For any inquiries, technical support, or warranty claims, please contact Cheerble customer service. If you receive a defective ball or charging cable, we will provide a new replacement.

For additional information, you may refer to the official user manual PDFCheerble Smart Interactive Cat Toy User Manual (PDF)

© 2024 Cheerble. All rights reserved.

Related Documents - C0419



Cheerble Wicked Ball PE User Manual and Quick Start Guide

Comprehensive user manual for the Cheerble Wicked Ball PE, a smart interactive dog toy. Includes setup instructions, charging guide, specifications, LED indicator status, liability terms, warranty information, and FCC compliance details.



Cheerble Ball User Manual: Features, Operation, and Specifications

Comprehensive user manual for the Cheerble Ball, detailing its interactive modes, charging, LED indicators, specifications, and warranty information. Learn how to set up and use your Cheerble Ball for pet entertainment.

