#### Manuals+

Q & A | Deep Search | Upload

## manuals.plus /

- MUSE /
- Muse MT-201 BTG Vintage Bluetooth Turntable User Manual

## **MUSE MT-201BTG**

# Muse MT-201 BTG Vintage Bluetooth Turntable User Manual

Model: MT-201BTG

# 1. Introduction

Thank you for purchasing the Muse MT-201 BTG Vintage Bluetooth Turntable. This manual provides essential information for the safe and efficient operation of your new device. Please read it thoroughly before use and retain it for future reference.

This turntable combines classic vinyl playback with modern connectivity, featuring 3-speed record playback, Bluetooth streaming, USB recording and playback, AUX IN, and RCA output. Enjoy your music collection with superior sound quality.

# 2. Safety Instructions

- · Read all instructions before operating the unit.
- · Keep the unit away from water, moisture, and direct sunlight.
- Do not place the unit near heat sources such as radiators, heat registers, stoves, or other apparatus (including amplifiers) that produce heat.
- Use only attachments/accessories specified by the manufacturer.
- Unplug the unit during lightning storms or when unused for long periods.
- Refer all servicing to qualified service personnel. Servicing is required when the apparatus has been
  damaged in any way, such as power-supply cord or plug is damaged, liquid has been spilled or objects
  have fallen into the apparatus, the apparatus has been exposed to rain or moisture, does not operate
  normally, or has been dropped.
- Ensure proper ventilation around the unit. Do not block any ventilation openings.

# 3. Package Contents

Please check that all items listed below are included in your package:

- Muse MT-201 BTG Turntable Unit
- Power Adapter

- 45 RPM Adapter
- Extra Stylus (Needle)
- User Manual (this document)

# 4. Product Overview

Familiarize yourself with the various parts of your Muse MT-201 BTG turntable.



Figure 4.1: Front view of the Muse MT-201 BTG Turntable with the lid open, showcasing the record platter, tonearm assembly, and integrated speakers. The control panel with various knobs and buttons is visible on the right side of the platter.



Figure 4.2: The Muse MT-201 BTG Turntable positioned on a wooden desk, illustrating its compact and vintage design within a typical home environment. The lid is open, ready for record playback.

# Key components include:

- Platter: Where records are placed.
- Tonearm: Holds the stylus and tracks the record grooves.
- Stylus (Needle): Reads the audio information from the record.
- **Speed Selector:** Allows selection of 33, 45, or 78 RPM.
- Auto Stop Switch: Enables or disables automatic stopping of the platter at the end of a record.
- Power/Volume Knob: Turns the unit on/off and adjusts volume.
- Function Selector: Switches between Phono, Bluetooth, USB, and AUX IN modes.
- Integrated Speakers: Built-in stereo speakers for direct audio output.
- **USB Port:** For playing MP3 files from a USB drive or encoding vinyl to USB.
- AUX IN Jack: For connecting external audio devices.
- RCA Output Jacks: For connecting to an external amplifier or powered speakers.

# 5. Setup

- 1. **Unpack the Unit:** Carefully remove the turntable from its packaging. Retain the packaging for future transport or storage.
- 2. **Remove Protective Materials:** Remove any protective cardboard or plastic from the tonearm and platter.
- 3. **Placement:** Place the turntable on a stable, level surface away from direct sunlight, heat sources, and excessive dust or vibration.
- 4. **Connect Power:** Insert the power adapter into the DC IN jack on the back of the unit, then plug the adapter into a standard wall outlet.
- 5. **Lid:** The lid can be opened to protect the platter and tonearm when not in use, or closed during playback to reduce dust accumulation.

# 6. Operating Instructions

# 6.1 Playing Vinyl Records

- 1. Power On: Turn the Power/Volume knob clockwise to turn on the unit.
- 2. Select Phono Mode: Set the Function Selector to 'PHONO'.
- 3. **Select Speed:** Choose the appropriate speed (33, 45, or 78 RPM) using the Speed Selector switch. For 45 RPM records, place the included 45 RPM adapter on the center spindle.
- 4. Place Record: Carefully place a vinyl record on the platter.
- 5. **Auto Stop:** Set the Auto Stop switch to 'ON' for the platter to stop automatically at the end of the record, or 'OFF' for continuous rotation.
- 6. **Position Tonearm:** Gently lift the tonearm using the cue lever. Move the tonearm over the desired starting groove of the record.
- 7. **Lower Tonearm:** Slowly lower the tonearm onto the record using the cue lever. The music will begin to play.
- 8. **Adjust Volume:** Adjust the volume using the Power/Volume knob.
- 9. **End of Playback:** At the end of the record (if Auto Stop is ON), the platter will stop. If Auto Stop is OFF, manually lift the tonearm and return it to the tonearm rest.

#### **6.2 Bluetooth Connection**

You can stream audio wirelessly from a Bluetooth-enabled device (e.g., smartphone, tablet, laptop) to the turntable's speakers.

- 1. Power On: Ensure the turntable is powered on.
- 2. **Select Bluetooth Mode:** Set the Function Selector to 'BT' (Bluetooth). The unit will emit a pairing sound and the Bluetooth indicator will flash.
- 3. **Enable Bluetooth on Device:** On your external Bluetooth device, enable Bluetooth and search for available devices.
- 4. **Pair:** Select 'MUSE MT-201BTG' from the list of devices. Once paired, the turntable will emit a confirmation sound and the Bluetooth indicator will stop flashing.
- 5. Play Audio: You can now play audio from your device through the turntable's speakers.

# 6.3 USB Playback and Encoding

The USB port allows for playback of MP3 files from a USB flash drive and recording of vinyl records directly to a USB flash drive.

# **USB Playback:**

- 1. Insert USB Drive: Insert a USB flash drive (FAT32 format) into the USB port.
- 2. **Select USB Mode:** Set the Function Selector to 'USB'. The unit will automatically begin playing compatible audio files.
- 3. **Controls:** Use the control buttons (if available on the unit, otherwise control from the USB drive's file structure) to navigate tracks.

## **USB Encoding (Recording Vinyl):**

- 1. Prepare for Playback: Set up your vinyl record for playback as described in section 6.1.
- 2. Insert USB Drive: Ensure a USB flash drive is inserted into the USB port.
- 3. **Start Recording:** While the record is playing, press the 'REC' button (if available, or follow specific instructions for your model's recording function). The unit will begin recording the audio to the USB drive.
- 4. **Stop Recording:** Press the 'REC' button again to stop recording. The recorded audio file will be saved on the USB drive.

#### **6.4 AUX IN Connection**

Connect external audio devices (e.g., MP3 player, CD player) to the turntable using a 3.5mm audio cable (not included).

- 1. **Connect Cable:** Plug one end of the 3.5mm audio cable into the AUX IN jack on the turntable and the other end into the headphone or line-out jack of your external device.
- 2. **Select AUX Mode:** Set the Function Selector to 'AUX'.
- 3. **Play Audio:** Start playback on your external device. The audio will be played through the turntable's speakers.

# 6.5 RCA Output

Connect the turntable to an external amplifier or powered speakers for enhanced audio output.

- Connect RCA Cables: Connect RCA cables (not included) from the RCA Output jacks on the back of the turntable to the corresponding audio input jacks on your amplifier or powered speakers. Ensure correct left (white) and right (red) channel connections.
- 2. **Select Input:** On your amplifier or speakers, select the input source corresponding to where you connected the turntable.
- 3. **Play Audio:** Play a record or other audio source on the turntable. The sound will now be routed through your external audio system.

# 7. Maintenance

#### 7.1 Cleaning the Unit

- Wipe the unit with a soft, dry cloth.
- Do not use abrasive cleaners, waxes, or solvents as they may damage the surface.
- Keep the lid closed when not in use to prevent dust accumulation.

# 7.2 Stylus Care and Replacement

- The stylus is a delicate component. Avoid touching it with your fingers.
- Clean the stylus periodically with a soft brush, brushing gently from back to front.
- A stylus typically lasts for about 300-500 hours of playback. If you notice a decrease in sound quality or

skipping, it may be time to replace the stylus.

• To replace the stylus, carefully remove the old one by pulling it downwards and forwards. Insert the new stylus (an extra one is included) by pushing it upwards and backwards until it clicks into place.

# 7.3 Record Cleaning

- Always handle records by their edges or the label.
- Clean records regularly with a dedicated record cleaning brush or cloth to remove dust and debris before playing.

# 8. Troubleshooting

If you experience issues with your turntable, please consult the following table before seeking professional service.

Problem	Possible Cause	Solution
No power	Power adapter not connected; Power outlet not working; Unit not turned on.	Ensure power adapter is securely connected.  Try a different outlet. Turn the Power/Volume knob clockwise.
No sound	Volume too low; Incorrect function mode selected; Stylus damaged or not properly installed; External speakers not connected/powered.	Increase volume. Select correct mode (PHONO, BT, USB, AUX). Check stylus. If using RCA output, ensure external speakers/amp are on and connected correctly.
Record skipping	Record is dirty or scratched; Turntable not on a stable surface; Stylus is worn or dirty.	Clean the record. Place the turntable on a stable, level surface. Clean or replace the stylus.
Bluetooth pairing failed	Turntable not in BT mode; Device too far; Bluetooth not enabled on external device.	Set Function Selector to 'BT'. Move device closer to turntable. Ensure Bluetooth is enabled on your device and try re-pairing.
USB playback not working	USB drive not inserted correctly; USB drive format not supported; No compatible files on drive.	Re-insert USB drive. Ensure drive is FAT32 format. Check if MP3 files are present.

# 9. Specifications

Feature	Specification
Model Number	MT-201BTG
Brand	MUSE
Speeds	33 1/3, 45, 78 RPM
Connectivity	Bluetooth, USB, RCA Output, AUX IN
Speakers	2 x 5W Integrated Speakers

Feature	Specification
USB Function	Playback and Encoding
Material	Plastic
Color	Grey
Weight	2.4 Kilograms
Included Components	Power Adapter, Extra Stylus, 45 RPM Adapter

# 10. Warranty and Support

This Muse MT-201 BTG Turntable comes with atwo-year manufacturer's warranty from the date of purchase. This warranty covers manufacturing defects and workmanship under normal use.

The warranty does not cover damage caused by misuse, accident, unauthorized modification, or normal wear and tear (e.g., stylus wear). Please retain your proof of purchase for warranty claims.

For technical support, warranty service, or inquiries about replacement parts, please contact your retailer or the official Muse customer service. Refer to the contact information provided with your purchase or on the manufacturer's official website.

# Related Documents - MT-201BTG

	Muse MT-201 Series Turntable User Manual and Guide Comprehensive user manual for the Muse MT-201 series turntable, covering setup, operation of Phono, AUX, USB, and Bluetooth modes, recording, stylus replacement, safety, and specifications.
	MUSE MT-201 Series Turntable Stereo System User Manual User manual for the MUSE MT-201 Series Turntable Stereo System, detailing features like Bluetooth connectivity, USB playback and recording, phono input, AUX input, and safety instructions.
100 mg / mg	Muse MT-201 BT Turntable Stereo System User Manual Comprehensive user manual for the Muse MT-201 BT turntable stereo system, detailing setup, operation, features like Bluetooth, USB playback, recording, and maintenance.
	Muse MT-201 Series Turntable Stereo System User Manual User manual for the Muse MT-201 Series Turntable Stereo System, detailing setup, vinyl playback, Bluetooth, USB, recording, and safety instructions.
	MUSE MT-106BT Turntable User Manual: Setup, Operation, and Features  Comprehensive user manual for the MUSE MT-106BT turntable, covering safety instructions, control descriptions, power supply, operation modes (Phono, AUX, USB, Bluetooth), recording, stylus replacement, tips, specifications, and compliance.

# MUSE MT-120 MB Turntable Micro System User Manual

Comprehensive user manual for the MUSE MT-120 MB Turntable Micro System. Learn how to set up, operate, and enjoy features like the turntable, CD player, USB playback, Bluetooth connectivity, and FM radio. Includes safety instructions and maintenance tips.

#### Documents - MUSE - MT-201BTG



#### [pdf]

Microsoft Word Leaflet Muse MT 201 BTG Platenspeler Willem leaflet muse mt btg platenspeler gizmo retail nl pub media product  $l \in |l|$ 

MT-201 BTG Bluetooth platenspeler met encoding functie grijs Haal uw LP s maar van zolder en geniet ... nspeler. Deze platenspeler is dankzij het compacte formaat eenvoudig op te bergen. Kortom deze Muse **MT-201BTG** is de ideale oplossing voor een ieder die zijn LP s weer wilt beluisteren. Specificaties:...

lang:nl score:27 filesize: 233.89 K page\_count: 1 document date: 2021-03-03



#### [pdf] User Manual Instructions

Untitled Bekijk de handleiding Muse MT 201BTG Bluetooth kofferplatenspeler met encoding functie lichtgrijs bol original media s gkQA55n37qN9 |||

MT-201 BTR/ MT-201 BTB/ MT-201 DG MT-201 BTP/ MT-201 BTG/ MT-201 BVB FR Manuel de I utilisateur GB User Manual PT Manual do Utilizador DE Benutzerhandbuch ES Manual de instrucciones IT Manuale di istruzioni NL Handleiding FR Lire attentivement les instructions avant de faire fonctionner I appareil

lang:fr score:21 filesize: 2.12 M page\_count: 2 document date: 2021-03-03