

[manuals.plus](#) /› [Mellerware](#) /› [Mellerware Crunchy! 1230W 1.5L Multifunction Air Fryer Instruction Manual](#)

## Mellerware ES9730020L

# Mellerware Crunchy! 1230W 1.5L Multifunction Air Fryer Instruction Manual

Model: ES9730020L

## 1. IMPORTANT SAFETY INFORMATION

Please read all instructions carefully before using the Mellerware Crunchy! Air Fryer. Keep this manual for future reference.

- **Electrical Safety:** Ensure the voltage indicated on the appliance matches your local mains voltage before connecting. Do not immerse the main unit, cord, or plug in water or any other liquid.
- **Hot Surfaces:** The appliance surfaces become hot during use. Always use oven mitts when handling hot components. Do not touch hot surfaces directly.
- **Ventilation:** Do not block any ventilation openings. Allow at least 10 cm of free space on the back and sides, and 10 cm above the appliance.
- **Children and Vulnerable Persons:** This appliance can be used by children aged 8 years and above and persons with reduced physical, sensory or mental capabilities or lack of experience and knowledge if they have been given supervision or instruction concerning use of the appliance in a safe way and understand the hazards involved. Children shall not play with the appliance. Cleaning and user maintenance shall not be made by children unless they are older than 8 and supervised.
- **Placement:** Place the appliance on a stable, heat-resistant surface, away from flammable materials.
- **Power Cord:** Do not let the power cord hang over the edge of a table or counter, or touch hot surfaces.
- **Maintenance:** Any servicing other than cleaning should be performed by an authorized service representative.

## 2. PRODUCT OVERVIEW

The Mellerware Crunchy! Air Fryer is designed for healthy cooking with minimal oil. It features a compact design and a user-friendly digital control panel.



Image 1: The Mellerware Crunchy! 1.5L Air Fryer, showcasing its sleek white design and digital control panel on top.

### Components:

- **Main Unit:** Houses the heating element and fan.
- **Control Panel:** Digital display with touch controls for temperature, time, and preset programs.
- **Frying Basket:** Non-stick coated basket for holding food.
- **Basket Handle:** For safely inserting and removing the frying basket.

## 3. SETUP AND FIRST USE

### 3.1 Unpacking

1. Remove all packaging materials from the appliance.
2. Check that all components are present and undamaged.
3. Remove any stickers or labels from the appliance.

### 3.2 Cleaning Before First Use

1. Wipe the exterior of the appliance with a damp cloth.
2. Clean the frying basket and basket handle with hot water, dish soap, and a non-abrasive sponge.
3. Rinse thoroughly and dry all parts.
4. Ensure all parts are completely dry before use.

### 3.3 Placement

- Place the air fryer on a stable, level, and heat-resistant surface.
- Ensure there is adequate air circulation around the appliance (at least 10 cm clearance on all sides).
- Do not place the appliance near a wall or other appliances that could be damaged by steam.

## 4. OPERATING INSTRUCTIONS

The Mellerware Crunchy! Air Fryer features a digital control panel for easy operation.

# Easy temperature set up



Image 2: Close-up of the digital control panel, illustrating the ease of setting temperature between 80 and 200 degrees Celsius.

## 4.1 Control Panel Overview

- **Power Button:** Turns the appliance on/off.
- **Temperature Control:** Adjusts cooking temperature (80°C to 200°C).
- **Time Control:** Adjusts cooking time.
- **Preset Programs:** 7 predefined programs for common dishes.



Image 3: Visual representation of the air fryer's key features: suitable for 1-2 portions, 1.5L capacity, and 7 preset cooking programs.

#### 4.2 General Operation

1. **Prepare Food:** Place your ingredients into the frying basket. Do not overfill the basket. The 1.5L capacity is ideal for 1-2 portions.
2. **Insert Basket:** Slide the frying basket back into the main unit until it clicks into place.
3. **Power On:** Plug the appliance into a grounded wall socket. Press the Power Button to turn on the display.
4. **Set Temperature and Time:**
  - **Manual Setting:** Use the temperature and time control buttons to set your desired cooking parameters (temperature range: 80°C - 200°C).
  - **Preset Programs:** Select one of the 7 preset programs for specific dishes. The appliance will automatically set the optimal temperature and time.
5. **Start Cooking:** Press the Start/Pause button to begin the cooking process.
6. **Shake Basket (Optional):** For even cooking, especially with smaller items like fries, pull out the basket halfway through the cooking time and shake it gently. Then, slide it back in. The appliance will resume cooking automatically.

7. **Finish Cooking:** The appliance will beep when the cooking time is complete. Carefully pull out the basket using the handle.
8. **Serve:** Transfer the cooked food to a plate. Be cautious of hot oil or juices that may have collected in the bottom of the basket.



Image 4: A close-up of crispy fries in the air fryer basket, highlighting the benefit of cooking with significantly less oil.



Image 5: A collage demonstrating the versatility of the air fryer for preparing a variety of healthy and delicious meals, from meats to vegetables.

*Note: While some product images may show recipe books, this instruction manual does not include specific recipes. Please refer to external resources for recipe ideas.*

## 5. MAINTENANCE AND CLEANING

Regular cleaning ensures optimal performance and extends the lifespan of your Mellerware Crunchy! Air Fryer.



Image 6: The non-stick basket of the air fryer, designed for easy food handling and cleaning.

1. **Unplug:** Always unplug the air fryer from the power outlet and allow it to cool down completely before cleaning.
2. **Clean Frying Basket:** The non-stick frying basket is dishwasher safe. Alternatively, wash it with hot water, dish soap, and a non-abrasive sponge. Avoid using metal utensils or abrasive cleaning materials that could damage the non-stick coating.
3. **Clean Exterior:** Wipe the exterior of the appliance with a damp cloth. Do not use harsh chemicals or abrasive cleaners.
4. **Clean Interior:** Wipe the interior of the appliance with a damp cloth. For stubborn food residue, use a mild detergent. Ensure no water enters the heating element area.
5. **Storage:** Once clean and dry, store the air fryer in a cool, dry place.

## 6. TROUBLESHOOTING

If you encounter any issues with your Mellerware Crunchy! Air Fryer, please refer to the following table before contacting customer support.

Problem	Possible Cause	Solution
Appliance does not turn on.	Not plugged in; power outlet malfunction; appliance fault.	Ensure the power cord is securely plugged in. Test the outlet with another appliance. If the problem persists, contact customer support.
Food is not cooked evenly.	Basket overloaded; food not shaken/flipped; incorrect temperature/time.	Do not overload the basket. Shake or flip food halfway through cooking. Adjust temperature and time as needed.
White smoke coming from the appliance.	Grease residue from previous use; fatty ingredients.	Clean the basket and interior thoroughly after each use. For fatty foods, a small amount of smoke is normal. If smoke is excessive or black, unplug immediately.
Unusual odor during first use.	Manufacturing residues burning off.	This is normal for the first few uses and will dissipate. Ensure good ventilation.

## 7. SPECIFICATIONS

Feature	Detail
Brand	Mellerware
Model Number	ES9730020L (Article Number: 27150WH)
Color	White
Dimensions (L x W x H)	29.7 x 23.4 x 31.2 cm
Weight	3.45 Kilograms
Capacity	1.5 Liters (1.4 Liters usable)
Power	1230 Watts
Material	AC
Control Method	Touch
Temperature Range	80°C - 200°C
Preset Programs	7

## 8. WARRANTY AND SUPPORT

Mellerware products are manufactured to the highest quality standards. This product is covered by a standard manufacturer's warranty against defects in materials and workmanship.

- For warranty claims or technical support, please refer to the contact information provided with your purchase or visit the official Mellerware website.
- Keep your proof of purchase for any warranty-related inquiries.

© 2023 Mellerware. All rights reserved.

## Related Documents - ES9730020L

	<p><a href="#"><u>Mellerware Crunchy! Plus Air Fryer User Manual</u></a></p> <p>User manual for the Mellerware Crunchy! Plus Air Fryer. Includes safety instructions, operating guide, cleaning, and troubleshooting tips for healthy hot air cooking.</p>
	<p><a href="#"><u>Mellerware Executiv Bravissimo II Pro Steam Station User Manual</u></a></p> <p>Comprehensive user manual for the Mellerware Executiv Bravissimo II Pro Steam Station (Model 23810), detailing operation, safety warnings, maintenance, and troubleshooting.</p>
	<p><a href="#"><u>Mellerware Sauty Frying Pan: User Guide and Safety Information</u></a></p> <p>Comprehensive user guide for the Mellerware Sauty frying pan, including essential safety warnings, care instructions, and warranty details. Available in multiple languages.</p>
	<p><a href="#"><u>Mellerware Mixo Hand Mixer 26450 User Manual and Warranty Information</u></a></p> <p>Comprehensive user manual and warranty details for the Mellerware Mixo Hand Mixer (Model 26450), including safety instructions, operating procedures, cleaning, and troubleshooting. Covers extended warranty registration.</p>
	<p><a href="#"><u>Mellerware Egg Master 350W Egg Boiler (Model 27006A) - User Manual and Warranty</u></a></p> <p>Comprehensive user manual and warranty information for the Mellerware Egg Master 350W Egg Boiler (Model 27006A). Learn how to use, clean, and register your appliance.</p>



## [Mellerware Orion II Steam Iron - User Manual and Warranty Information](#)

Comprehensive guide to the Mellerware Orion II Steam Iron, covering warranty registration, usage instructions, safety precautions, cleaning, and maintenance. Includes details on the 3-year warranty program and product operation.