

Manuals+

[Q & A](#) | [Deep Search](#) | [Upload](#)

manuals.plus /

> [OLEVS](#) /

> [OLEVS Men's Chronograph Quartz Watch Model TASUO-S-G2872PZ-JMK Instruction Manual](#)

OLEVS TASUO-S-G2872PZ-JMK

OLEVS Men's Chronograph Quartz Watch Instruction Manual

Model: TASUO-S-G2872PZ-JMK

INTRODUCTION

Thank you for choosing the OLEVS Men's Chronograph Quartz Watch. This manual provides detailed instructions for setting up, operating, and maintaining your watch to ensure optimal performance and longevity. Please read this manual carefully before using your watch.





Image: OLEVS Men's Chronograph Quartz Watch with a brown leather strap and coffee color dial.

SETUP

Setting the Time

1. Pull the crown (the knob on the side of the watch) out to the **second position**.
2. Turn the crown to adjust the hour and minute hands to the desired time.
3. Once the time is set, push the crown back into the normal position.

Setting the Date

1. Pull the crown out to the **first position**.
2. Turn the crown to adjust the date in the date window (located between 4 and 5 o'clock).
3. Once the date is set, push the crown back into the normal position.

Using the Chronograph (Stopwatch)

The watch features three functional subdials for chronograph measurements:

- **1/10 Second Subdial:** Measures fractions of a second.
- **60 Second Chronograph:** Measures seconds.
- **60 Minute Chronograph:** Measures minutes.

1. To **start** the chronograph, press the **top pusher button**. The chronograph hands will begin to move.
2. To **stop** the chronograph, press the **top pusher button** again. The chronograph hands will stop, displaying the elapsed time.
3. To **reset** the chronograph, press the **bottom pusher button**. The chronograph hands will return to their zero positions.

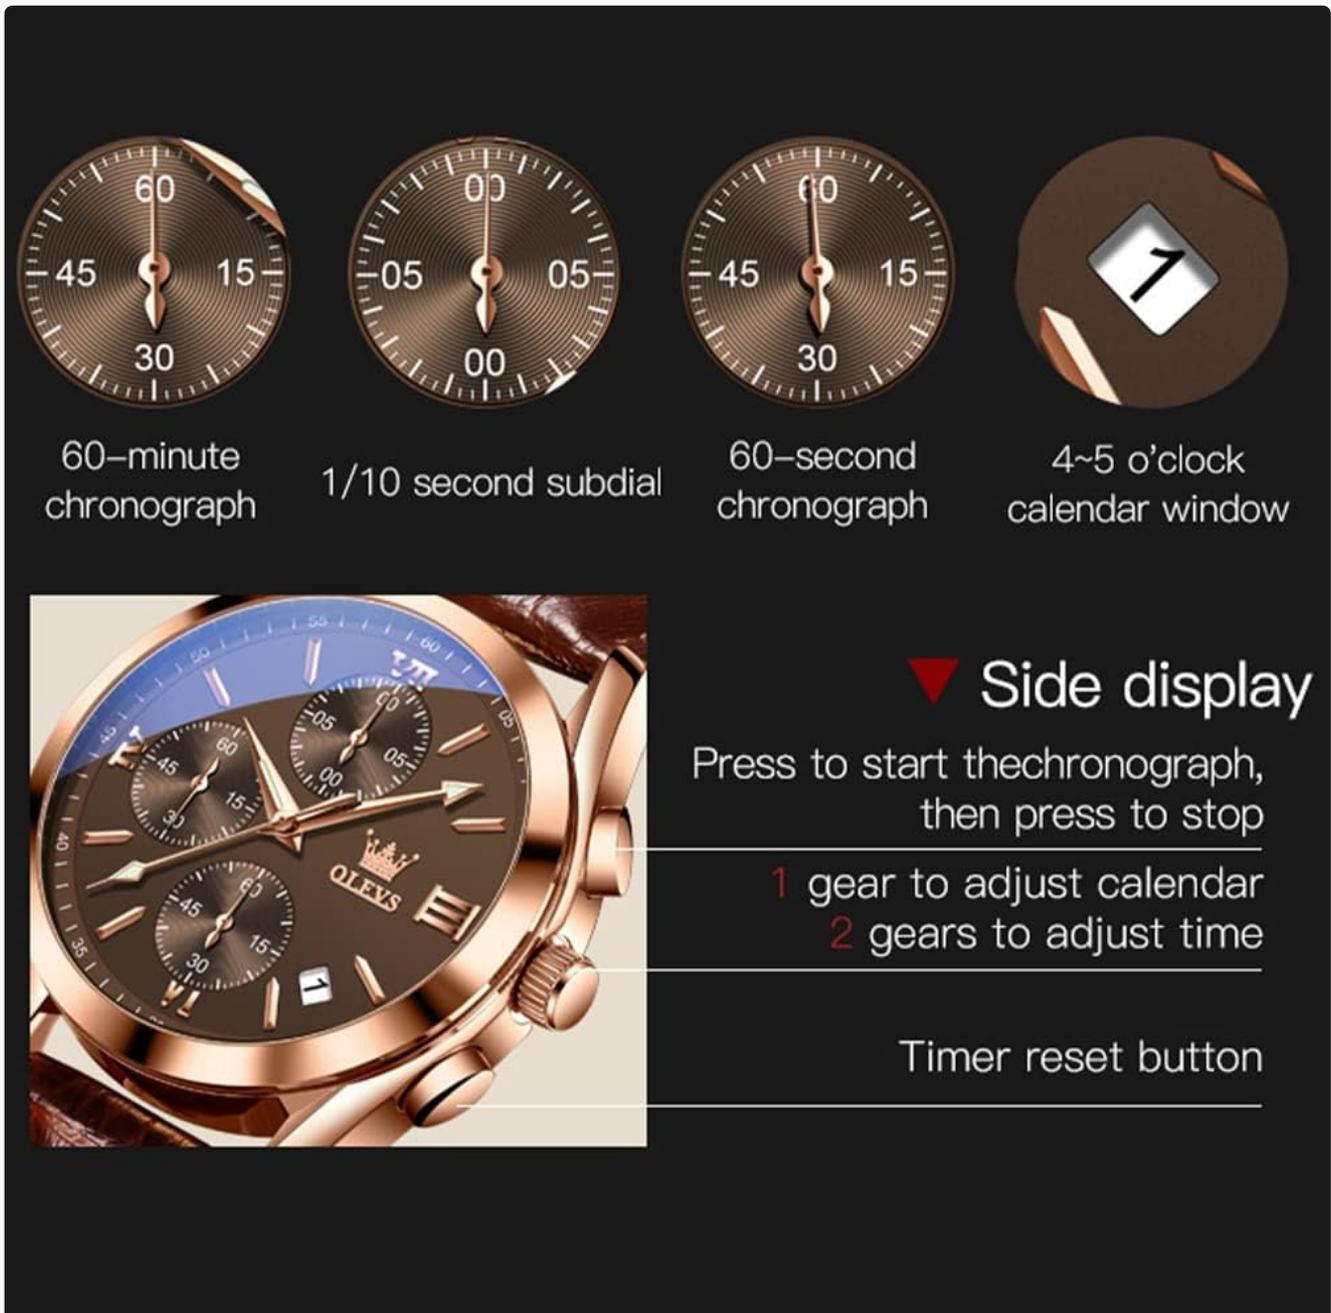


Image: Side view of the watch illustrating the crown positions for setting time and date, and the pusher buttons for chronograph control.

OPERATING THE WATCH

Luminous Hands

The watch features luminous hands that glow in low-light conditions, improving visibility. For optimal luminescence,

expose the watch dial to a light source for a period before entering a dark environment.

Water Resistance

This watch is water resistant up to 30 meters (3 ATM). This means it is suitable for daily use and can withstand splashes, rain, and brief immersion in water, such as hand washing. It is **not** suitable for showering, bathing, swimming, diving, or any water sports where it might be exposed to high water pressure or prolonged immersion.

Important: Do not operate the crown or pusher buttons when the watch is wet or submerged in water, as this can compromise the water resistance.

Your browser does not support the video tag.

Video: A close-up demonstration of the OLEVS Men's Chronograph Quartz Watch with a brown dial, highlighting its features and design.

MAINTENANCE

Cleaning

To maintain the appearance of your watch, wipe the case and strap with a soft, dry cloth regularly. For the leather strap, avoid excessive moisture and harsh chemicals, which can damage the material.

Battery Replacement

The watch is powered by a quartz movement and uses one LR44 battery (included). When the watch stops or the second hand begins to skip, it is an indication that the battery needs to be replaced. Battery replacement should ideally be performed by a qualified watch technician to ensure proper sealing and water resistance.

Storage

When not in use, store your watch in a cool, dry place away from direct sunlight and extreme temperatures. Keeping it in its original box or a watch case can help protect it from dust and scratches.

TROUBLESHOOTING

- **Watch is not running:** Check if the crown is pushed all the way in. If it is, the battery may need replacement.
- **Date is not changing:** Ensure the time is set correctly, especially past midnight for the date to advance. If the date is stuck, manually adjust it using the crown in the first position.
- **Chronograph hands are not resetting to zero:** Press the bottom pusher button firmly to reset the chronograph. If they remain misaligned, a professional adjustment may be required.
- **Condensation inside the watch:** This indicates a breach in water resistance. Avoid further contact with water and seek professional service immediately to prevent damage to the movement.

SPECIFICATIONS

Feature	Detail
Brand	OLEVS
Model Name	ZQ-S-G2872
Model Number	TASUO-S-G2872PZ-JMK

Watch Movement Type	Quartz
Display	Analog
Case Material Type	Stainless Steel
Case Diameter	40 Millimeters
Case Thickness	12 Millimeters
Band Material Type	Leather
Band Width	20 Millimeters
Band Length	24 Centimeters
Clasp Type	Deployment Clasp
Water Resistance Depth	30 Meters (3 ATM)
Battery	1 LR44 (included)
Special Features	Chronograph, Day/Date Window, Luminous Hands

WARRANTY

This OLEVS watch is covered by a seller warranty. For specific details regarding the warranty period and coverage, please refer to the documentation provided at the time of purchase or contact the seller directly.

SUPPORT

If you encounter any issues or have questions not covered in this manual, please contact the retailer or the OLEVS customer support team for assistance. Keep your purchase receipt as proof of purchase for any warranty claims.

Your browser does not support the video tag.

Video: A detailed view of the OLEVS Men's Chronograph Quartz Watch, showcasing its design and functionality on a wrist.

