

Manuals+

[Q & A](#) | [Deep Search](#) | [Upload](#)

[manuals.plus](#) /

› [Brandson](#) /

› [Brandson DC Stand Fan User Manual](#)

Brandson 722305022722

Brandson DC Stand Fan

USER MANUAL

Introduction

Thank you for choosing the Brandson DC Stand Fan. This manual provides essential information for the safe and efficient operation, assembly, maintenance, and troubleshooting of your new fan. Please read this manual thoroughly before use and keep it for future reference.





Figure 1: Brandson DC Stand Fan (White Model)

Important Safety Instructions

- Always ensure the fan is placed on a stable, flat surface to prevent tipping.
- Do not insert fingers or any objects into the fan grille when the fan is operating.
- Keep the fan away from water and moisture. Do not use it in bathrooms or other wet environments.
- Unplug the fan from the power outlet before cleaning, maintenance, or when not in use.
- Do not operate the fan with a damaged cord or plug. Contact qualified service personnel for repair.
- This appliance is not intended for use by persons (including children) with reduced physical, sensory or mental capabilities, or lack of experience and knowledge, unless they have been given supervision or instruction concerning use of the appliance by a person responsible for their safety.

Package Contents

Please check the package for the following items:

- Brandson DC Stand Fan Unit
- Remote Control (requires 2x 1.5V AAA batteries, included)
- Power Adapter with Connection Cable
- User Manual

Assembly

Follow these steps to assemble your Brandson DC Stand Fan:

1. Carefully unpack all components from the box.
2. Attach the fan stand to the base, ensuring it is securely fastened.
3. Mount the fan head onto the top of the stand, aligning the connection points.
4. Secure the fan head in place according to the locking mechanism.

BRANDSON[®]
- EQUIPMENT -

DC-STANDVENTILATOR

SICHERHEIT

 **Schwerer Standfuß
für extra sicheren Halt**

 **GS geprüft & zertifiziert
für optimale Sicherheit**

PLATZIERUNG

Optimal geeignet fürs Büro,
Wohn- oder Schlafzimmer.

WOHNZIMMER

SCHLAFZIMMER

BÜRO

Figure 2: Heavy base for secure placement.



Figure 3: Fan dimensions and adjustable features.

Operation

Your Brandson DC Stand Fan features an intuitive control panel and a convenient remote control for easy operation.

Control Panel and Remote Control

The fan's control panel is located on the stand, featuring a clear LED display and touch-sensitive buttons. The included remote control allows you to manage all functions from a distance.



Figure 4: Control Panel and Remote Control Layout.

- **Power On/Off:** Press the power button () on the control panel or remote to turn the fan on or off.
- **Adjusting Fan Speed:** The fan offers 9 speed settings. Use the 'Speed' button (**SPEED**) on the control panel or the '+' and '-' buttons on the remote to cycle through the speeds.
- **Turbo Mode:** For maximum airflow, press the 'Turbo' button (**TURBO**) on the control panel or remote.
- **Oscillation Function:** Activate the oscillation feature by pressing the 'Oscillation' button (**OSC**). You can choose between 60°, 90°, and 120° oscillation angles.
- **Timer Function:** Set the fan to automatically turn off after a specified period (1-8 hours) using the 'Timer' button on the remote control.
- **ECO Mode:** The ECO mode automatically adjusts the fan speed based on the room temperature, providing energy-efficient cooling. This mode considers your currently selected speed level for adaptive adjustment.

Product Features in Action

Your browser does not support the video tag.

Video 1: Demonstrates the Brandson DC Stand Fan's quiet operation, remote control functionality, and oscillation features, highlighting its energy-saving brushless motor.

Maintenance and Care

Regular maintenance ensures optimal performance and longevity of your fan.

- **Cleaning:** Before cleaning, always unplug the fan. Use a soft, damp cloth to wipe down the exterior surfaces. For the fan blades and grille, use a vacuum cleaner or a soft brush to remove dust. Do not use abrasive cleaners or solvents.
- **Storage:** When not in use for extended periods, store the fan in a cool, dry place, preferably in its original packaging, to protect it from dust and damage.

Troubleshooting

If you encounter any issues with your fan, refer to the following common problems and solutions:

Problem	Possible Cause	Solution
Fan does not turn on.	No power supply; Power button not pressed.	Check if the power cord is securely plugged in. Press the power button.
Weak airflow.	Low speed setting; Dust accumulation on blades.	Increase the fan speed. Clean the fan blades and grille.
Unusual noise during operation.	Loose parts; Obstruction.	Ensure all parts are securely assembled. Check for any foreign objects near the blades.

Technical Specifications

Key technical data for your Brandson DC Stand Fan:

Feature	Specification
Model Number	722305022722
Dimensions (H x W x D)	115-125 x 40 x 37 cm
Weight	5.73 kg
Power Consumption	Max. 19 Watts
Noise Level	36.5 – 49 dB(A)
Oscillation Angles	60°, 90°, 120°
Vertical Tilt	-5° to +87°
Speed Settings	9 speeds + Turbo mode
Timer	0-8 hours

Feature	Specification
Motor Type	Brushless DC Motor



Figure 5: Fan Motor and Rotor Details.



Figure 6: Energy Efficiency of the Brandson DC Stand Fan.

Warranty and Customer Support

Brandson products are designed for quality and durability. This product comes with a standard manufacturer's warranty. For detailed warranty information, please refer to the warranty card included in your package or visit the official Brandson website.

If you require technical support, have questions about your product, or need to report an issue, please contact Brandson customer service through the contact information provided on the Brandson website or your purchase documentation. Please have your model number (722305022722) and purchase date ready when contacting support.