

- Manuals.plus /
- › Artis /
- › Artis BT-X3 40W Bluetooth Soundbar User Manual

Artis BT-X3

Artis BT-X3 40W Bluetooth Soundbar User Manual

Model: BT-X3

1. INTRODUCTION

The Artis BT-X3 Soundbar is designed to enhance your audio experience with powerful sound and versatile connectivity. Featuring Bluetooth 5.0, multiple input modes, and 5 EQ presets, this soundbar delivers clear audio for your television and other devices.



Front view of the Artis BT-X3 Soundbar, showcasing its sleek design.

2. WHAT'S IN THE BOX

Carefully unpack the box and ensure all items are present:

- 1 x Artis BT-X3 Sound Bar
- 1 x All Function Remote Control
- 1 x Aux Cable
- 1 x User Manual (this document)
- 1 x Wall Mount Screws Set

3. PRODUCT OVERVIEW

3.1 Soundbar Features

LOADED WITH FEATURES



2 Passive Radiators



Inbuilt Amplifier



5 EQ Presets



The Artis BT-X3 Soundbar features 2 passive radiators, an inbuilt amplifier, and 5 EQ presets for optimized sound.

3.2 Side Panel Controls

The soundbar features convenient control buttons on its side panel:

SIDE PANEL FUNCTION KEYS



Close-up of the side panel controls, including Power/Mode, Play/Mute, Volume Up/Next, and Volume Down/Previous.

- **Power / Mode:** Press and hold to power on/off. Press briefly to switch input modes (Bluetooth, AUX, USB).
- **Play / Mute:** Press to play/pause in Bluetooth/USB mode. Press to mute/unmute in AUX mode.
- **Volume + / Next:** Press to increase volume. Press and hold to skip to the next track in Bluetooth/USB mode.
- **Volume - / Previous:** Press to decrease volume. Press and hold to skip to the previous track in Bluetooth/USB mode.

3.3 Remote Control

The included multi-function remote control provides full command over the soundbar's features.

MULTI-FUNCTION REMOTE CONTROL



The remote control for the Artis BT-X3 Soundbar, showing various buttons for power, mode, EQ, volume, and playback.

- **Power Button:** Turns the soundbar on or off.
- **EQ Button:** Cycles through 5 preset equalizer modes (Music, Movie, Speech, 3D, Normal).
- **Mode Button:** Switches between input sources (Bluetooth, AUX, USB).
- **Volume +/-:** Adjusts the master volume level.
- **Play/Pause:** Plays or pauses audio playback.
- **Previous/Next Track:** Skips to the previous or next audio track.
- **Mute:** Mutes or unmutes the sound.

3.4 Connectivity Ports

The rear panel of the soundbar provides various input options:

CONNECTIVITY OPTIONS



Rear view of the soundbar showing the USB port, Line In (AUX) port, and AC power input.

- **USB Port:** For playing audio files from a USB pen drive.
- **LINE IN (AUX) Port:** For connecting external audio devices via a 3.5mm AUX cable.
- **AC Power Input:** Connect the power adapter here.

4. SETUP

4.1 Placement

Position the soundbar centrally below your television for optimal sound dispersion. Ensure it is on a stable, flat surface or securely wall-mounted.

 
A PERFECT COMPANION TO YOUR LED TV

**32"
LED TV**

708.66mm



60mm




800mm

962.66mm



**40"
LED TV**

 60mm



800mm

Illustration showing the soundbar's dimensions and its suitable placement below 32-inch and 40-inch LED TVs.

4.2 Power Connection

1. Connect the power adapter to the AC Power Input port on the soundbar.
2. Plug the other end of the power adapter into a wall outlet.

4.3 Audio Connections

The Artis BT-X3 offers multiple ways to connect to your audio sources:

4.3.1 Bluetooth Connection

BLUETOOTH 5.0 WIRELESS CONNECTIVITY



The soundbar wirelessly connected via Bluetooth 5.0 to a smartphone.

1. Power on the soundbar.
2. Press the 'Mode' button on the soundbar or remote control until 'BT' appears on the LED display, indicating Bluetooth mode.
3. On your device (smartphone, tablet, TV), enable Bluetooth and search for available devices.
4. Select 'Artis BT-X3' from the list to pair. A confirmation tone will sound upon successful pairing.

4.3.2 AUX (Line In) Connection

1. Connect one end of the 3.5mm AUX cable to the 'LINE IN' port on the soundbar.
2. Connect the other end of the AUX cable to the audio output (headphone jack or AUX out) of your device.
3. Press the 'Mode' button on the soundbar or remote control until 'AUX' appears on the LED display.

4.3.3 USB Playback

1. Insert a USB pen drive containing MP3 audio files into the 'USB' port on the soundbar.
2. The soundbar will automatically switch to USB mode and begin playing audio. If not, press the 'Mode' button until

'USB' appears.

5. OPERATING INSTRUCTIONS

5.1 Power On/Off

Press and hold the Power button on the soundbar's side panel or press the Power button on the remote control to turn the unit on or off.

5.2 Mode Selection

Press the 'Mode' button on the soundbar or remote control to cycle through available input sources: Bluetooth (BT), AUX (LINE), USB.

5.3 Volume Control

Use the 'Volume +' and 'Volume -' buttons on the soundbar or remote control to adjust the listening volume.

5.4 EQ Presets

Press the 'EQ' button on the remote control to switch between the 5 preset equalizer modes: Music, Movie, Speech, 3D, and Normal. Each mode optimizes the audio output for different content types.

5.5 Playback Control (Bluetooth/USB)

In Bluetooth or USB mode, use the Play/Pause, Previous, and Next buttons on the soundbar or remote control to manage audio playback.

6. MAINTENANCE

- **Cleaning:** Use a soft, dry cloth to clean the surface of the soundbar. Do not use liquid cleaners or abrasive materials.
- **Storage:** When not in use for extended periods, store the soundbar in a cool, dry place away from direct sunlight and extreme temperatures.
- **Ventilation:** Ensure proper ventilation around the soundbar to prevent overheating. Do not block any ventilation openings.
- **Power:** Disconnect the power cable during lightning storms or when unused for long durations.

7. TROUBLESHOOTING

Problem	Possible Cause	Solution
No power	Power cable not connected; Power outlet not active	Ensure power cable is securely connected. Check power outlet with another device.
No sound	Incorrect input mode; Volume too low; Muted	Select the correct input mode. Increase volume. Unmute the soundbar.
Bluetooth pairing fails	Soundbar not in pairing mode; Device too far; Interference	Ensure soundbar is in Bluetooth mode. Move device closer. Disconnect other Bluetooth devices.

Problem	Possible Cause	Solution
Remote control not working	Batteries depleted; Obstruction; Remote too far	Replace remote control batteries. Remove any obstructions between remote and soundbar. Ensure remote is within range.
USB playback issues	Unsupported file format; USB drive corrupted	Ensure audio files are in MP3 format. Try a different USB drive.

8. SPECIFICATIONS

- **Brand:** Artis
- **Model Number:** AR-BTX3 Black
- **Speaker Maximum Output Power:** 40 Watts RMS
- **Frequency Response:** 20 KHz
- **Connectivity Technology:** Auxiliary, Bluetooth, USB
- **Bluetooth Version:** 5.0
- **Bluetooth Range:** 10 Meters Max
- **Audio Output Mode:** Stereo
- **Number of Audio Channels:** 2.0
- **Driver Size:** 2 inches x 2 driver units
- **Passive Radiators:** 2
- **EQ Modes:** 5 Presets (Music, Movie, Speech, 3D, Normal)
- **Control Method:** Remote Control, Buttons
- **Mounting Type:** Wall Mountable
- **Item Dimensions (D x W x H):** 6D x 80W x 6H Centimeters
- **Item Weight:** 1400 Grams
- **Power Source:** Corded Electric (AC 100-240V)

9. WARRANTY AND SUPPORT

The Artis BT-X3 Soundbar comes with a **1-Year Service Centre Walk-in Warranty**.

For any assistance required for service, repair, or warranty-related issues, please contact Artis customer support:

- **Toll-Free Number:** 1800 123 8195
- **Other Contact Numbers:** 7875012381 / 020-26113250 / 020-26113260
- **Email:** inquiry@artis.in

Manufacturer Contact Information: Artis India

ASK A QUESTION ABOUT THIS MANUAL

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question and use this page's manual context to help answer it.

Name

Anonymous

Email

you@example.com

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. [Privacy details](#).

Question

Example: How do I reset this device or fix this error?

Details

Model number, symptoms, what you tried, or the section of the manual you are using.

Submit question

Open the live page

<https://manuals.plus/asin/B094R17HQT>

More documents and user manuals: **<https://manuals.plus/>**