

Manuals+

[Q & A](#) | [Deep Search](#) | [Upload](#)

[manuals.plus](#) /

- › [OMAIC](#) /
- › [OMAIC Replacement Remote Control User Manual](#)

OMAIC BOSE-YQHFBA

OMAIC Replacement Remote Control User Manual

For Bose Wavemusic and Soundtouch Systems


INTRODUCTION

This manual provides comprehensive instructions for the OMAIC Replacement Remote Control, designed for various Bose Wavemusic and Soundtouch Systems. Please read this manual carefully to ensure proper use and maintenance of your remote control.

PRODUCT OVERVIEW



The OMAIC Replacement Remote Control is a direct replacement for your original Bose Wave Soundtouch remote. It features a user-friendly layout with clearly labeled buttons for various functions, including power, volume, mode selection, track control, and alarm settings. The remote is lightweight and designed for comfortable handling.

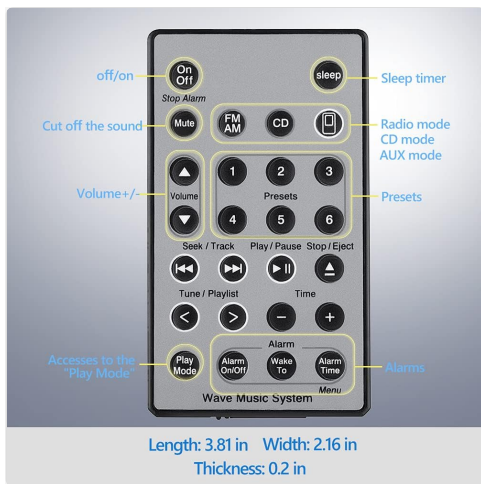

This image illustrates the various buttons and their functions on the OMAIC Replacement Remote Control. Key features include: On/Off, Mute, FM/AM, CD, AUX mode, Volume control, Seek/Track, Play/Pause/Stop/Eject, Tune/Playlist, Time adjustment, Presets (1-6), Play Mode, Alarm On/Off, Wake To, and Alarm Time. The remote dimensions are approximately 3.81 inches (Length), 2.16 inches (Width), and 0.2 inches (Thickness).

COMPATIBILITY



This remote control is compatible with the following Bose Wave Soundtouch Music Systems:

- Bose Wave Soundtouch Music System I
- Bose Wave Soundtouch Music System II
- Bose Wave Soundtouch Music System III
- Bose Wave Soundtouch Music System IV
- Bose Wave Soundtouch Music System 5 CD Multi Disc Player

Note: This remote is NOT compatible with Acoustic Wave Music Systems.

SETUP

Battery Installation



1. **Remove the battery cover:** Locate the battery cover on the back of the remote control and slide it off.
2. **Insert battery:** Insert one CR2032 button cell battery into the battery compartment, ensuring the correct polarity (+/-) as indicated inside the compartment. *(Battery not included)*
3. **Replace the battery cover:** Slide the battery cover back into place until it clicks securely.

Once the battery is installed, the remote control is ready to use. No programming is required to connect it to your Bose system.

OPERATING INSTRUCTIONS

The OMAIC Replacement Remote Control provides full functionality for your compatible Bose Wave Soundtouch Music System. Simply point the remote towards your Bose system and press the desired button.

- **Power On/Off:** Press the "On Off" button to power the system on or off.
- **Volume Control:** Use the "Volume +" and "Volume -" buttons to adjust the sound level.
- **Mute:** Press the "Mute" button to silence the audio.
- **Mode Selection:** Use "FM AM", "CD", or the "AUX" button (represented by the square icon) to switch between radio, CD, or auxiliary input modes.
- **Track/Seek:** Use the "Seek / Track" buttons (double arrows) to skip tracks on a CD or seek radio stations.
- **Play/Pause/Stop/Eject:** Control CD playback with these dedicated buttons.
- **Presets:** Use buttons 1-6 to access your saved radio station presets.
- **Alarm Functions:**
 - "Alarm On/Off": Toggle the alarm function.
 - "Wake To": Select the audio source for the alarm.
 - "Alarm Time": Adjust the alarm time.
 - "Stop Alarm": Silence an active alarm.
- **Range:** The remote can effectively control the Bose device from more than 10 meters (approximately 33 feet) away.

MAINTENANCE

- **Cleaning:** Wipe the remote control with a soft, dry cloth. Do not use liquid cleaners or abrasive materials.
- **Battery Replacement:** Replace the CR2032 battery when the remote's performance degrades or it stops responding. Follow the battery installation steps outlined in the "Setup" section.

- **Storage:** Store the remote in a cool, dry place away from direct sunlight and extreme temperatures.

TROUBLESHOOTING

Problem	Possible Cause	Solution
Remote not responding.	Dead or incorrectly installed battery. Obstruction between remote and Bose system. Remote is out of range.	Check and replace the CR2032 battery, ensuring correct polarity. Remove any obstructions. Move closer to the Bose system (within 10 meters).
Specific functions not working.	Incorrect mode selected on the Bose system.	Ensure the Bose system is in the correct mode (e.g., CD mode for CD functions).
Remote does not work with my Bose system.	Incompatible Bose model.	Verify your Bose system model against the "Compatibility" section. This remote is not compatible with Acoustic Wave Music Systems.

SPECIFICATIONS







- **Model:** BOSE-YQHFBA
- **Dimensions:** 3.1 x 2 x 0.5 inches (7.87 x 5.08 x 1.27 cm)
- **Item Weight:** 0.634 ounces (18 grams)
- **Connectivity Technology:** Infrared
- **Max Number of Supported Devices:** 1
- **Special Feature:** Ergonomic design
- **Battery Type:** 1x CR2032 (Not Included)
- **Manufacturer:** YAOQI

WARRANTY AND SUPPORT

The OMAIC Replacement Remote Control comes with an unlimited return and refund service within 45 days of purchase. We strive for 100% customer satisfaction.

If you have any questions or concerns regarding your order or the product, please feel free to reach out to us directly. We aim to respond within 12 hours on working days.

For support, please refer to the contact information provided with your purchase or visit the OMAIC store on Amazon.

	<p>Bose Surround Speakers Setup Guide with Bose Smart Soundbar</p> <p>Concise guide on setting up Bose Surround Speakers with Bose Smart Soundbar using the Bose Music app. Includes instructions for different Bose soundbar models and links to resources.</p>
	<p>Bose Bass Module 700 Setup Guide</p> <p>A comprehensive guide for setting up the Bose Bass Module 700 with various Bose sound systems, including the Bose Soundbar 500, 700, Smart Soundbar 300, Bose TV Speaker, and SoundTouch 300. Covers placement, app setup, wired connections, and ADAPTiQ calibration.</p>
	<p>Bose Surround Speakers User Manual & Safety Information</p> <p>Comprehensive guide to setting up, using, and maintaining your Bose Surround Speakers, including important safety instructions, regulatory information, and troubleshooting tips.</p>
	<p>Bose Surround Speakers 700 Quick Start Guide</p> <p>Get started with your Bose Surround Speakers 700. This quick start guide explains how to set up your speakers, focusing on using the Bose Music app for compatible soundbars. Includes support information and model details.</p>
	<p>Bose Surround Speakers 700 Setup Guide</p> <p>A comprehensive guide to setting up your Bose Surround Speakers 700, including software updates, connection methods for different Bose soundbars, and ADAPTiQ audio calibration.</p>
	<p>Bose Bass Module 700 Installation Guide and Setup Instructions</p> <p>Get step-by-step installation instructions for the Bose Bass Module 700. This guide covers setup for compatible Bose soundbars including Soundbar 500, 700, Smart Soundbar 300, TV Speaker, and SoundTouch 300. Available in multiple languages.</p>