

Manuals+

[Q & A](#) | [Deep Search](#) | [Upload](#)

Manuals.plus /

- › [LEGO](#) /
- › LEGO Ideas Typewriter 21327 Instruction Manual

LEGO 21327

LEGO Ideas Typewriter 21327 Instruction Manual

Model: 21327

1. INTRODUCTION

This manual provides detailed instructions for assembling, operating, and maintaining your LEGO Ideas Typewriter 21327 building set. This collectible retro display model is designed for adults and offers a unique building experience.

The LEGO Ideas Typewriter 21327 is inspired by the classic typewriter used by the LEGO Group's founder, Ole Kirk Kristiansen. It features a design that mimics the movement and sound of a real typewriter, including a brick-built center typebar that rises when a key is pressed, a carriage that moves across, and a platen roller for inserting paper.



Figure 1: The assembled LEGO Ideas Typewriter 21327.

2. SAFETY INFORMATION

This product contains small parts and is recommended for ages 18 and up. Keep small pieces away from young children to prevent choking hazards. Always follow the assembly instructions carefully to ensure the model is built correctly and safely.

3. SETUP AND ASSEMBLY

The LEGO Ideas Typewriter 21327 set contains 2,079 pieces. Assembly is guided by a detailed instruction booklet. It is recommended to sort pieces by color and type before beginning to facilitate the building process.

The instruction booklet provides step-by-step visual guides. Pay close attention to the orientation of pieces and the connections to ensure proper functionality of the moving parts.



ENJOY QUALITY TIME BUILDING THIS 2,079-PIECE SET

Figure 2: Building in progress, showing various LEGO pieces.

The build involves intricate mechanics that replicate the functions of a real typewriter. Dedicate sufficient time for assembly, as it is designed to be a challenging yet rewarding experience.

Your browser does not support the video tag.

Video 1: A seller-provided video demonstrating the building process and key features of the LEGO Typewriter 21327.

4. OPERATING THE TYPEWRITER MODEL

Once assembled, the LEGO Ideas Typewriter 21327 offers interactive features:

- **Key Press Mechanism:** Pressing any key on the keyboard will cause the corresponding typebar to rise, mimicking the action of a real typewriter.
- **Moving Carriage:** The carriage mechanism moves across the model as keys are pressed, simulating the progression of typing.
- **Platen Roller:** The platen roller can be rotated to feed a piece of paper through the model. The set includes a special letter from Thomas Kirk Kristiansen, a member of the LEGO Group's owner family, which can be inserted for display.



Figure 3: Demonstrating the interactive keys and carriage movement.

Your browser does not support the video tag.

Video 2: A seller-provided video showcasing the functional aspects of the LEGO Typewriter, including key presses and carriage movement.

5. MAINTENANCE

To ensure the longevity and appearance of your LEGO Ideas Typewriter 21327:

- **Cleaning:** Dust the model regularly with a soft, dry cloth or a soft-bristled brush. For stubborn dirt, use a slightly damp cloth with mild soap, then wipe dry. Avoid harsh chemicals.
- **Handling:** Handle the model with care, especially when moving it, to prevent pieces from detaching.
- **Storage:** Store the model in a stable environment, away from direct sunlight or extreme temperatures, which can affect plastic integrity over time.

6. TROUBLESHOOTING

If you encounter any issues during assembly or operation:

- **Missing Pieces:** If you find any missing pieces, refer to the LEGO customer service website for replacement parts.
- **Functional Issues:** If the keys or carriage do not move smoothly, carefully re-examine the relevant sections of the instruction manual to ensure all pieces are correctly assembled and aligned. Small misalignments can affect mechanical functions.
- **Loose Connections:** Ensure all connections are firm. Gently press pieces together to secure them.

7. SPECIFICATIONS

Feature	Detail
Product Dimensions	22.91 x 14.88 x 4.06 inches
Item Weight	7.1 ounces
Item Model Number	21327 (also 6347594)
Manufacturer Recommended Age	18 years and up
Number of Pieces	2,079
Release Date	October 1, 2021

8. WARRANTY AND SUPPORT

For warranty information, replacement parts, or further support, please visit the official LEGO website or contact LEGO customer service directly. Details can typically be found in the product packaging or on the manufacturer's website.