

Manuals.plus /

› JZCreator /

› JZCreator USB Desk Fan JZC-B01 Instruction Manual

## JZCreator JZC-B01



### JZCreator USB Desk Fan

Model: JZC-B01

**INSTRUCTION MANUAL**

#### Product Overview

---

The JZCreator USB Desk Fan is a compact and portable cooling solution designed for personal use in various settings such as home, office, or travel. It features a quiet brushless motor, three adjustable speed levels, and is powered via a standard USB connection.



Figure 1: JZCreator USB Desk Fan (Black Blue model) with its USB cable.

## Package Contents

---

- 1 x JZCreator USB Desk Fan (Model JZC-B01)
- 1 x Integrated USB Power Cable (3.7 ft long)
- 1 x Instruction Manual

## Setup

1. **Unpack the Fan:** Carefully remove the fan and its components from the packaging.
2. **Position the Fan:** Place the fan on a stable, flat surface such as a desk, table, or nightstand. Ensure there is adequate space around the fan for optimal airflow.
3. **Connect Power:** Insert the USB plug of the fan's integrated cable into a compatible USB power source. This can be a computer's USB port, a wall charger (USB adaptor), a power bank, or a car charger. The fan does not contain an internal battery and requires continuous USB power to operate.
4. **Adjust Angle:** The fan head can be manually tilted to adjust the airflow direction. Gently pivot the fan head up or down to achieve the desired angle.

# MULTI USB POWERED

Feel free to use anytime, anywhere

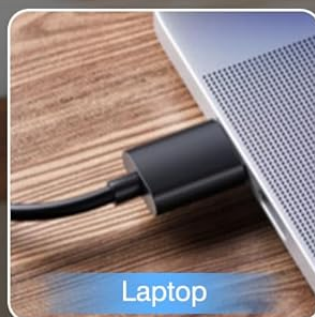


Figure 2: The fan connected to a laptop, demonstrating its USB power compatibility.

## Operating Instructions

---

The JZCreator USB Desk Fan features a simple one-button control for power and speed adjustment.

1. **Power On / Speed 1 (Soft Wind):** Press the power button located on the back of the fan once to turn it on. The fan will start at the lowest speed setting, providing a soft breeze.
2. **Speed 2 (High Wind):** Press the power button a second time to increase the fan speed to the medium setting.
3. **Speed 3 (Strong Wind):** Press the power button a third time to activate the highest fan speed, delivering a strong airflow.
4. **Power Off:** Press the power button a fourth time to turn the fan off.

*Note:* The switch indicator light will automatically turn off after 30 seconds to conserve power and ensure a comfortable sleeping environment.



Figure 3: Illustration of the three-speed settings: Soft Wind (2.0M/S, 2400RPM), High Wind (3.5M/S, 3200RPM), and Strong Wind (5.2M/S, 4000RPM).

## Maintenance and Cleaning

Regular cleaning ensures optimal performance and longevity of your fan.

1. **Power Off and Unplug:** Before cleaning, always ensure the fan is turned off and unplugged from its power source.
2. **Remove Front Cover:** The front cover of the fan can be easily removed for cleaning. Gently twist or unclip the cover as indicated by the design to detach it.
3. **Clean Blades and Cover:** Use a soft, dry cloth or a slightly damp cloth to wipe dust and debris from the fan blades

and the inside of the front cover. For stubborn dirt, a mild soap solution can be used on the cloth, ensuring no liquid enters the motor housing.

4. **Dry Thoroughly:** Allow all parts to air dry completely before reassembling.
5. **Reassemble:** Align the front cover with the fan body and secure it back in place.

*Caution:* Do not immerse the fan in water or any other liquid. Do not use abrasive cleaners or solvents.

## Troubleshooting

Problem	Possible Cause	Solution
Fan does not turn on.	No power supply; USB cable not properly connected; Faulty USB port.	Ensure the USB cable is securely plugged into a working USB port or adapter. Try a different USB port or power source.
Fan is noisy or vibrates excessively.	Fan blades are dirty or obstructed; Fan is on an uneven surface; Loose components.	Clean the fan blades and remove any obstructions. Place the fan on a stable, flat surface. If the issue persists, contact customer support.
Airflow is weak.	Fan blades are dirty; Fan is set to a low speed.	Clean the fan blades. Press the power button to cycle through speed settings and select a higher speed.

## Specifications

Feature	Detail
Brand	JZCreator
Model Name	JZC-B01
Color	Black Blue
Electric Fan Design	Table Fan
Power Source	USB Powered
Product Dimensions	2.3"D x 4.9"W x 6.3"H
Item Weight	4.8 ounces
Noise Level	26 dB
Wattage	2.5 watts
Voltage	5 Volts
Number of Blades	3
Cable Length	3.7 Feet
Number of Power Levels	3

## Warranty and Support

For warranty information or technical support, please refer to the contact details provided on the product packaging or visit the official JZCreator website. Keep your purchase receipt for warranty claims.

