

LEGO 21327

LEGO Ideas Typewriter 21327 Instruction Manual

Model: 21327 | Brand: LEGO

INTRODUCTION

The LEGO Ideas Typewriter 21327 is a detailed building set designed for adults, offering a nostalgic and engaging construction experience. This model is inspired by a classic typewriter, featuring realistic movements and sounds that mimic a functional vintage machine. It includes a brick-built center typebar that rises with each key press, a moving carriage, and a platen roller for feeding paper.

This manual provides essential information for the assembly, operation, and care of your LEGO Ideas Typewriter. Please read through all sections carefully to ensure a successful building process and optimal enjoyment of your completed model.

SETUP AND ASSEMBLY

The LEGO Ideas Typewriter 21327 set contains 2,079 pieces and is designed for adult builders. Assembly typically takes approximately 6 hours for two people, or longer for a single builder, depending on experience.

Unpacking and Preparation

- Carefully open the packaging and remove all bags of LEGO elements.
- Organize the pieces by color or type as suggested in the instruction booklet to streamline the building process.
- Ensure you have a clean, well-lit workspace to prevent loss of small pieces.

Building Process



Follow the detailed, step-by-step instructions provided in the included illustrated booklet. The manual guides you through 340 steps to construct the model.



ENJOY QUALITY TIME BUILDING THIS 2,079-PIECE SET

Image: The building process with various LEGO elements organized for assembly.

Pay close attention to the intricate mechanics, particularly the key mechanisms and carriage assembly, as these are crucial for the model's realistic functionality.

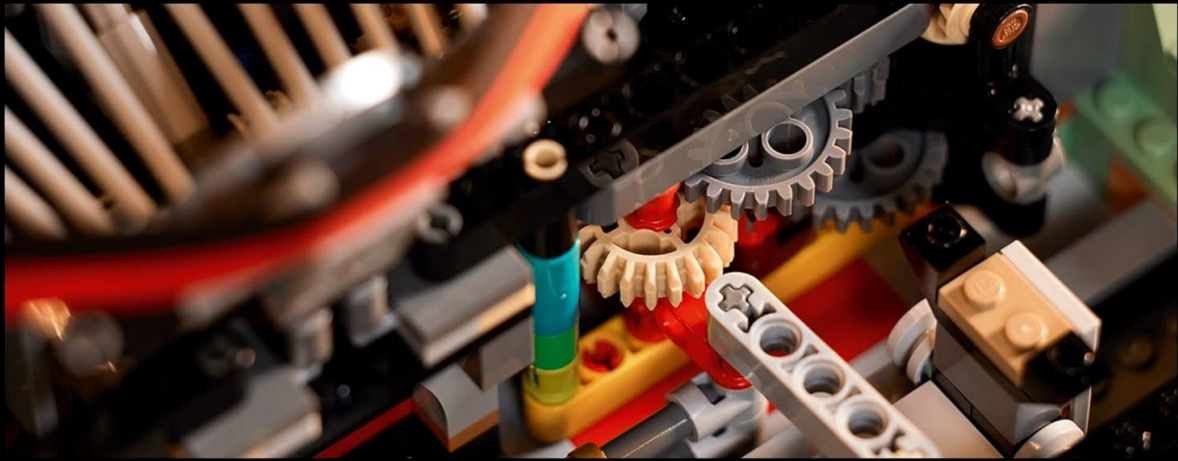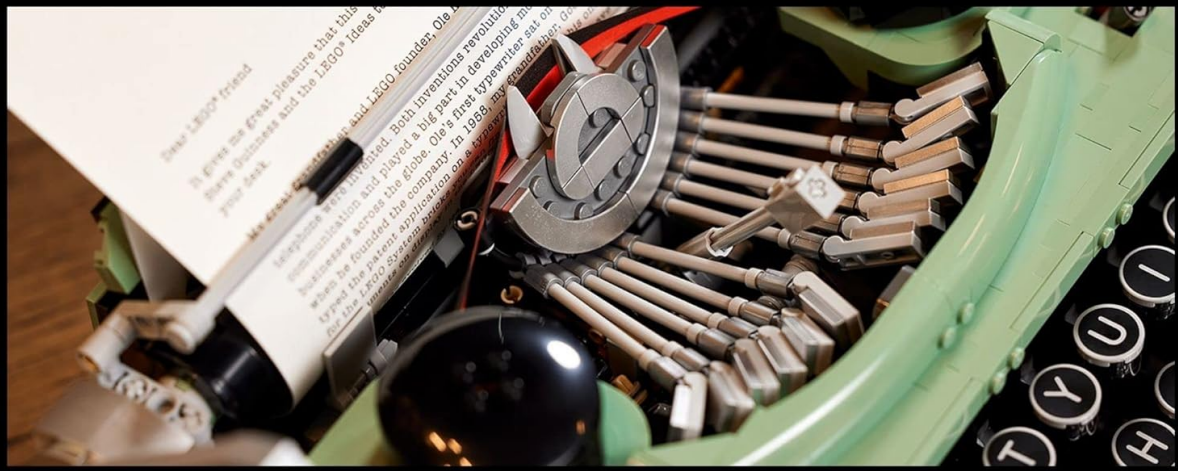

DESIGNED WITH INCREDIBLE ATTENTION TO DETAIL

Image: Detailed view of the internal gears and levers that enable the typewriter's movements.

The set also includes a special letter written by Thomas Kirk Kristiansen, a member of the LEGO Group's owner family, available in 43 languages. This letter can be inserted into the platen roller for display.



Image: A piece of paper being fed into the platen roller, demonstrating the paper feed mechanism.

OPERATING THE TYPEWRITER MODEL

While not a functional writing tool, the LEGO Ideas Typewriter is designed to simulate the experience of using a real typewriter.

Key Press Mechanism

- Gently press any letter key on the keyboard.
- Observe the center typebar rising in response, mimicking the action of a real typewriter.



Image: Hands demonstrating the key press action on the detailed keyboard.

Carriage Movement

- As keys are pressed, the carriage will automatically move across the model, simulating typing.
- To return the carriage to its starting position, use the carriage return lever on the left side of the model.

Paper Feed

- The platen roller allows you to feed a small piece of paper into the model.
- Turn the platen knob to advance the paper, enhancing the realistic display.

MAINTENANCE

To preserve the appearance and functionality of your LEGO Ideas Typewriter, follow these simple maintenance guidelines:

- **Cleaning:** Dust the model regularly with a soft, dry cloth or a soft-bristled brush. For deeper cleaning, use a mild soap solution and rinse with clear water, then air dry completely. Avoid harsh chemicals or abrasive materials.
- **Storage:** Store the model in a cool, dry place away from direct sunlight to prevent discoloration or warping of the plastic elements.
- **Handling:** Handle the model with care, especially when moving it, to avoid accidental detachment of pieces.

TROUBLESHOOTING

If you encounter any issues with your LEGO Ideas Typewriter, consider the following:

- **Mechanism Not Moving Smoothly:** Check for any misaligned or improperly connected pieces within the internal mechanisms. Refer to the instruction booklet for detailed diagrams.
- **Missing Pieces:** In the rare event of missing pieces, please contact LEGO Customer Service directly. Do not attempt to substitute with non-LEGO elements.
- **Loose Connections:** If parts feel loose, gently press them firmly into place. Over time, connections can loosen with frequent handling.

SPECIFICATIONS

Feature	Detail
Model Number	21327
Brand	LEGO
Piece Count	2,079 pieces
Dimensions (H x W x D)	Approximately 4.5 in. (11 cm) x 10.5 in. (27 cm) x 10.5 in. (26 cm)
Item Weight	7.1 ounces
Recommended Age	Adults (18+)

WARRANTY AND SUPPORT

For information regarding product warranty, replacement parts, or additional support, please visit the official LEGO website or contact their customer service department. Keep your proof of purchase for any warranty claims.

LEGO Official Website: www.lego.com

